


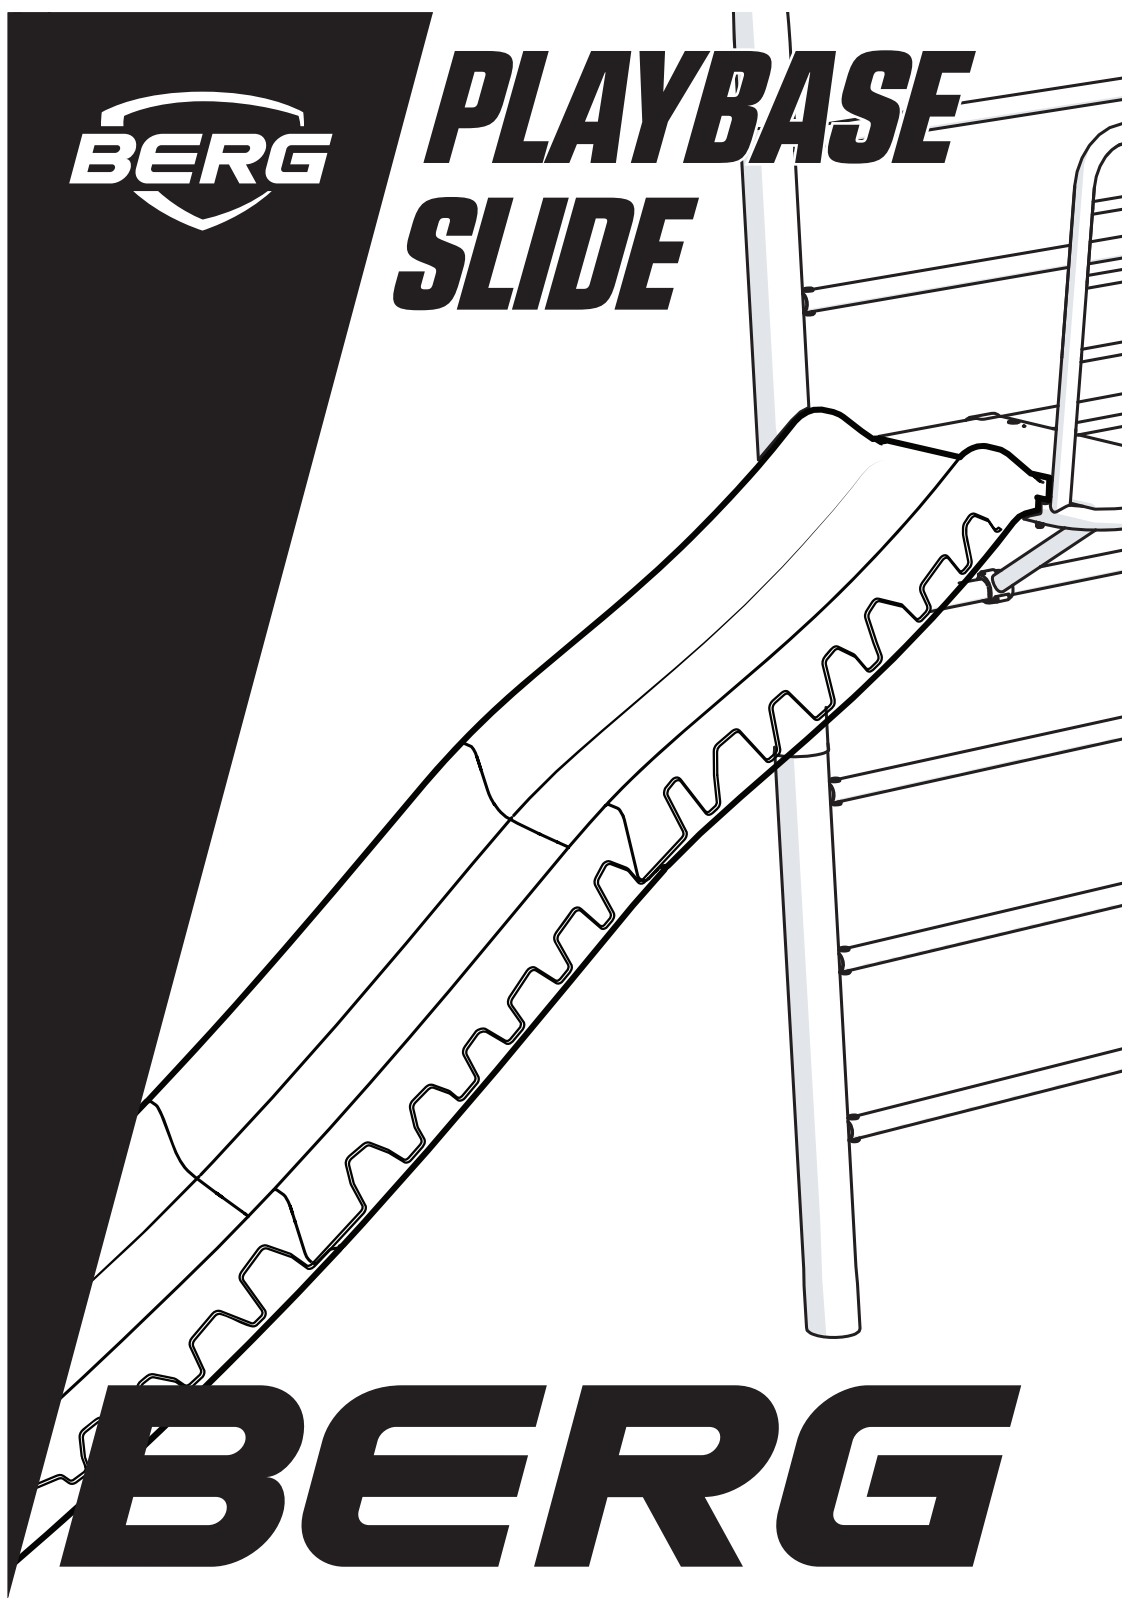

PLAYBASE SLIDE



BERG



***WELCOME
TO OUR
WORLD***

***IT'S YOUR
NOW***

ME

'S

HI BERGER This BERG will make you jump, ride and fly the outdoors. With fresh air in your hair and this BERG at your side, you feel strong wherever you fly. Feel confident, even when the road ahead is bumpy. Feel at home, the moment you step outside. Because you know the sky is yours. And you are about to touch it.

REGISTER YOUR BERG



Register your new
BERG product now,
unlock free extras
and become a
true BERGER via
BERG.com/registration

CONTENT

What is in the box? 4

Make sure you have everything.

How to install it? 5

Follow the steps, easy as that.

What to know? 9


Warnings, info and warranty.

Ready to go!

The outdoors is yours. Enjoy it.


Although we  know you can
do it yourself 
please read the manual
carefully and check out
our instruction videos on
YouTube.com/BERGtoys

UNPACKING

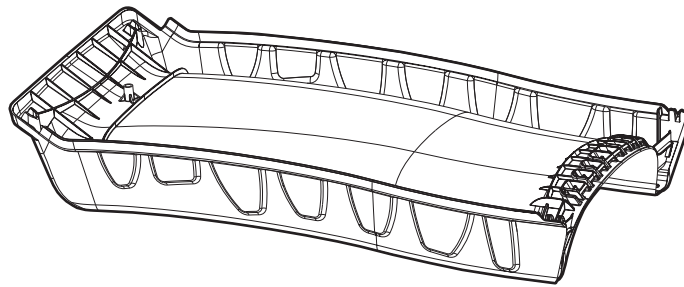


1

1x

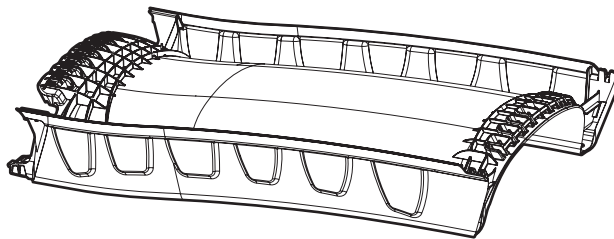

2


1x

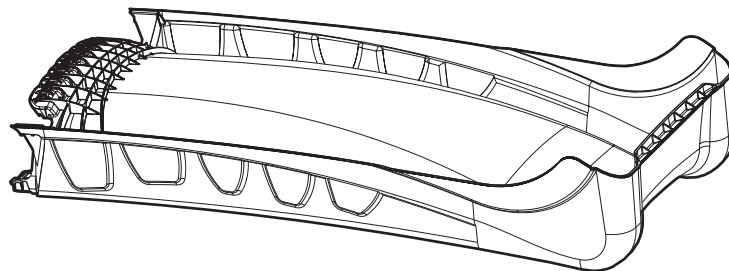


3

1x

INSTALLATION


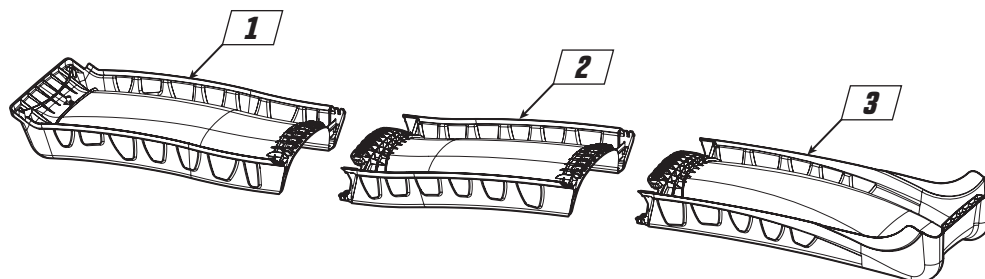


1


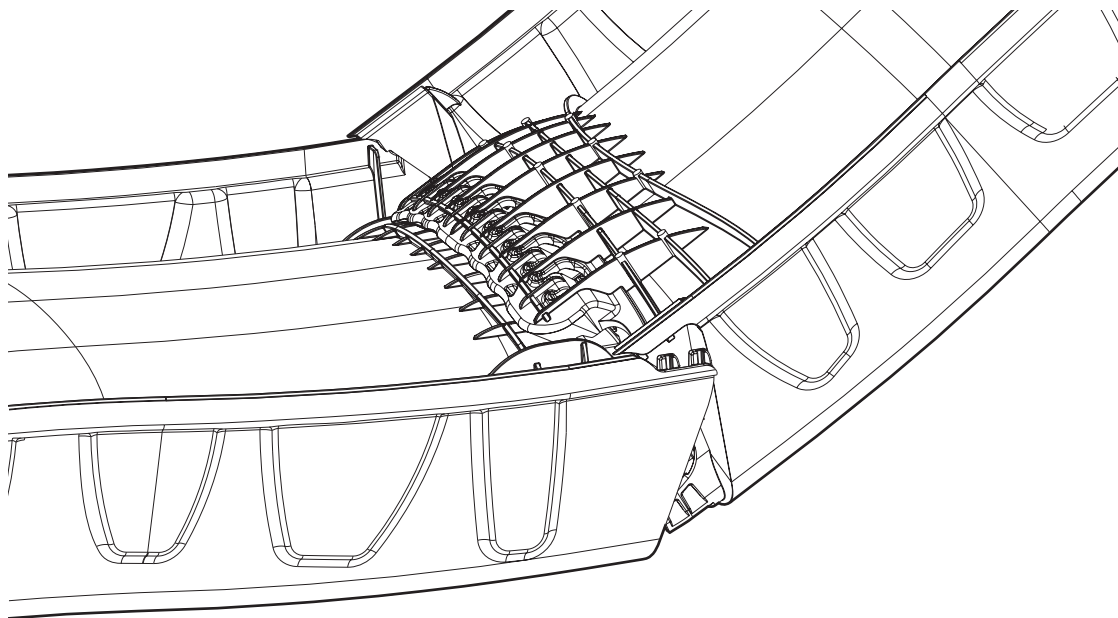


2



ON

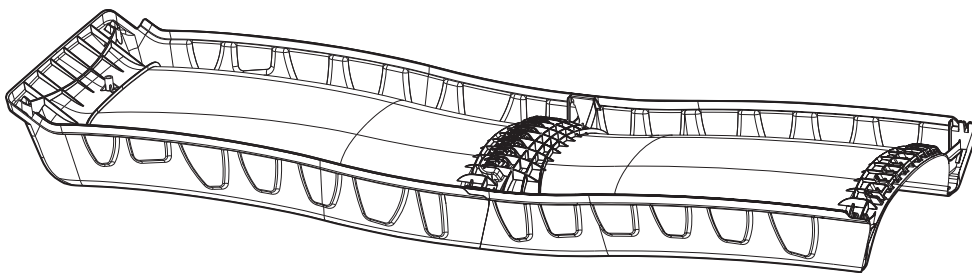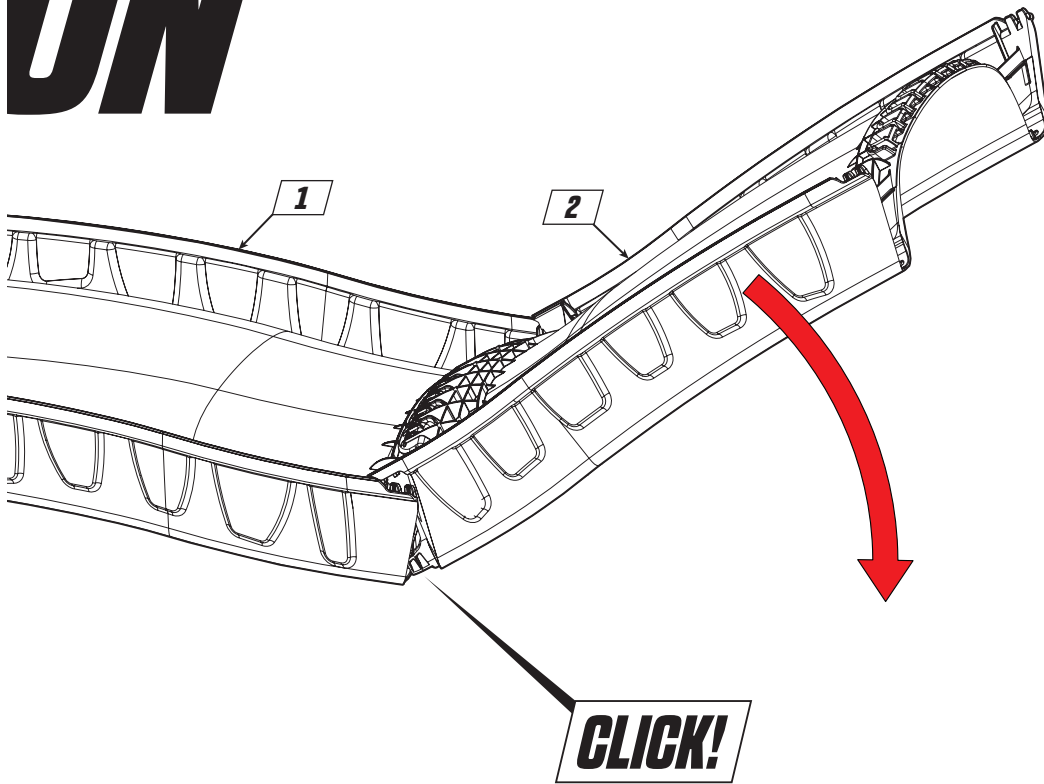

3

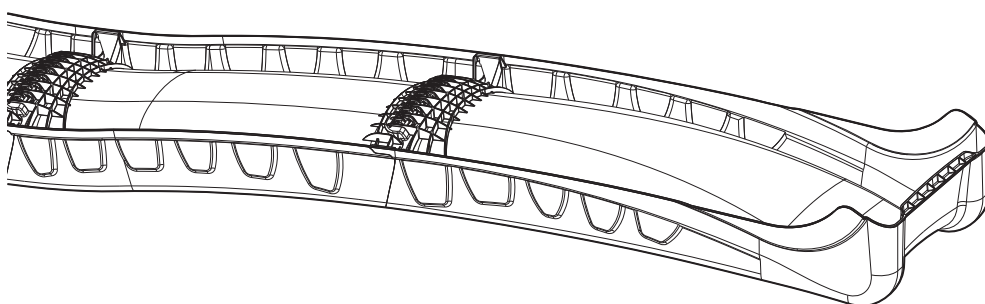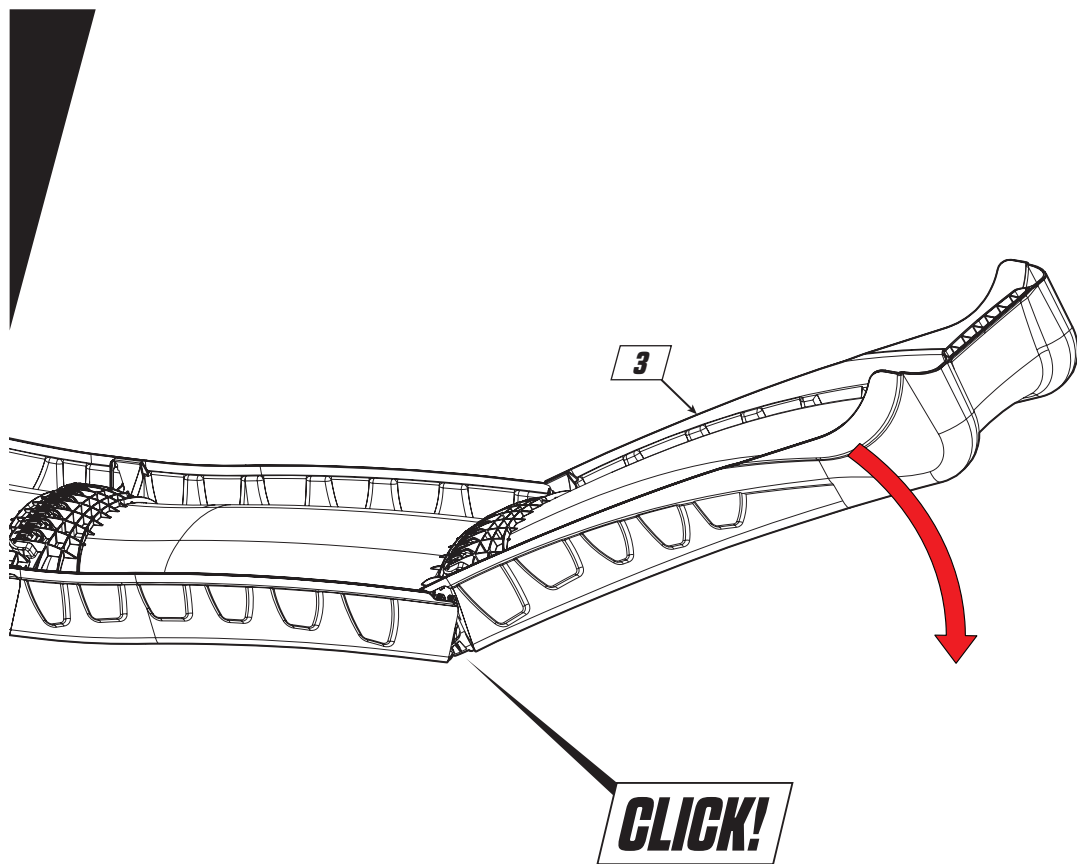

4

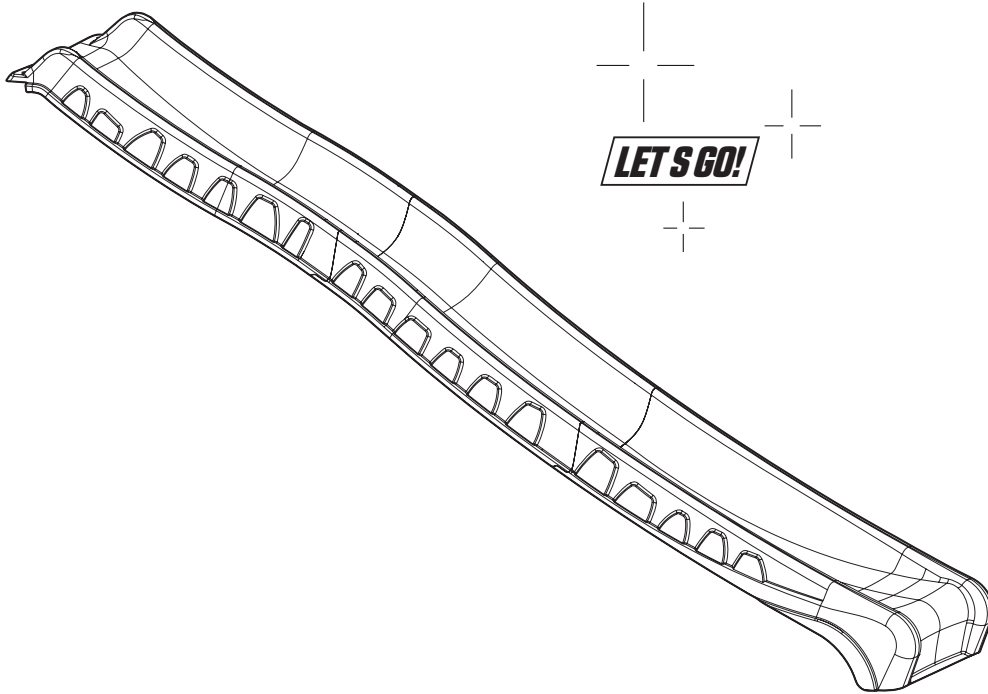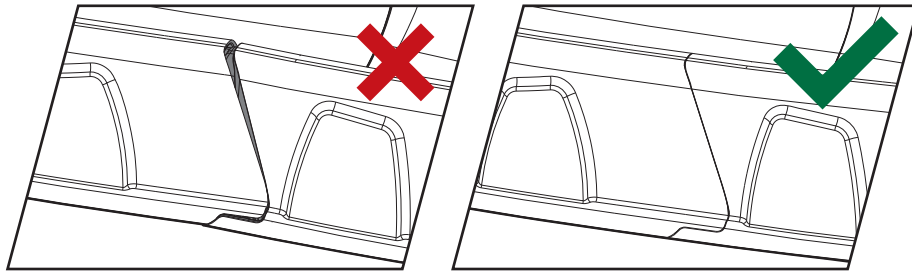

ENGLISH

Warnings

- This accessory is only suitable for assembly on the PlayBase platform. Always read the PlayBase platform manual in combination with this manual.
- This accessory is only suitable for assembly on the ladder side frame.
- Read instructions prior to first use and keep for future reference!
- Adult supervision required.
- Not suitable for children under 36 months.
- Falling hazard - Platform height of 150 cm.
- The maximum user weight is: 70 kg.
- For domestic use only.
- For outdoor use only.
- It is prohibited to climb over the frame when the slide is attached.

Safety instructions

BERG or the dealer cannot be held responsible for improper use of this product.

For safety reasons, unless BERG-approved, modifications or changes to the product are prohibited.

Only use your BERG product as instructed in this manual. Any unauthorized use could result in serious injury to the user or damage the product.

- Adult assembly required.
- Check assembly step 4 of the platform manual to see if the height is correct. (150 cm with a tolerance of 5 cm)
- Install the slide on a level and shock absorbing surface, at least 2 meters away from any obstruction such a fence or laundry lines.
- The slide shall not be installed over concrete, asphalt or any other hard surface.
- Always use the screws that are included in the box of the platform. The ground level surface must be sufficiently stable to prevent subsidence and damage to the slide
- The assembly must be carried out in such a way that head, finger and clothing entrapment are excluded. In order to prevent clothing entrapment during sliding, there should be no openings around the platform between 3 and 25 mm. Pay special attention to the platform board onto which the slide is mounted.
- It is strongly advised not to lift the slide from the bottom after it has been fixed to the platform. The slide could be damaged and break.
- It is prohibited to mount an accessory with long

ropes (e.g. swing, trapeze, etc.) next to the slide due to possible strangulation hazard.

- Position the slide in a way that it is not oriented directly towards full exposure from the sun.
- The product can become hot in direct sunlight, be careful.
- Keep fire and other heat sources away from the product.
- For general instructions of this accessory in combination with the PlayBase frame see the PlayBase frame manual.

Inspection and maintenance

- To ensure the safety of the users of the product, the product has to be subjected to the safety inspections and maintenance instructions mentioned below. If not carried out regularly the product could become a hazard.
- Check attachments for evidence of deterioration.
- There must be no objects / sharp objects on the floor underneath the unit and in the movement area.
- When the product is not used for a longer period of time (e.g. during winter), we recommend storing the product in a dry place for a longer product life.
- Missing or worn components must be replaced or repaired immediately.
- Replace defective parts in accordance with the manufacturers' instructions.
- Any worn or replaced parts must be disposed according local guidelines. Pay attention to the environment.
- Check all nuts and bolts for tightness and tighten when needed.

Warranty

Inappropriate use or faulty application of the product is explicitly forbidden and absolves the manufacturer of all liability. Modifications made by the customer to the original product (for example the adding of an accessory) shall be carried out according the instructions of the manufacturer.

The owner of this BERG product has the following warranty on this product:

- The product has a warranty of 3 years from the date of purchase.
- Parts that are liable to wear and tear and influences of weather are excluded from warranty.
- Check www.berg.com for extensive warranty regulations.

	Before each use	Monthly	Beginning of each season
Frame, nuts & bolts	Check for visible damage	Check if connections are tight and tighten them if needed	Inspect the frame connections thoroughly
Platform and slide	Check condition	Check for wear and tear and replace if needed	Check for wear and tear and replace if needed

LET'S GO!



www.bergtoys.com

BT24-03332 | Rev: 0

