



BER

***SPORTSGOAL
SIZE L
MANUAL***



BERG



***WELCOME
TO OUR
WORLD***

***IT'S YOUR
NOW***

ME

S

HI BERGER This BERG will make you jump, ride and fly the outdoors. With fresh air in your hair and this BERG at your side, you feel strong wherever you fly. Feel confident, even when the road ahead is bumpy. Feel at home, the moment you step outside. Because you know the sky is yours. And you are about to touch it.

REGISTER YOUR BERG



Register your new
BERG product now,
unlock free extras
and become a
true BERGER via
BERGtoys.com/registration

CONTENT

What is in the box? 4

Make sure you have everything.

How to install it? 7

Follow the steps, easy as that.

What to know? 15

Warnings, info and warranty.

 
Ready to go!

The outdoors is yours. Enjoy it.


Although we know you can do it yourself, please read the manual carefully and check out our instruction videos on **YouTube.com/BERGtoys**



UNPACKING

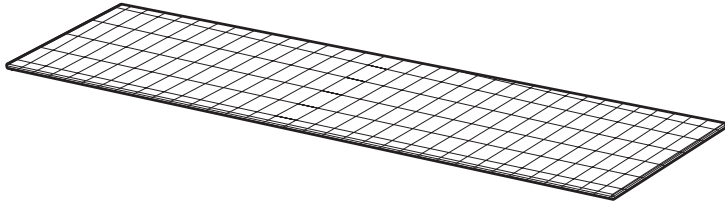

1

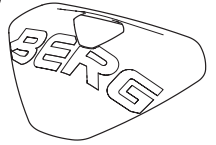 

2

4x



3

2x

 
4



6





5

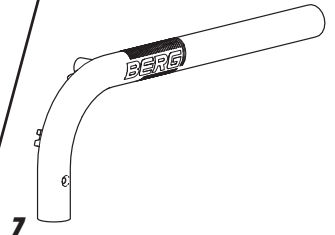


7



  8




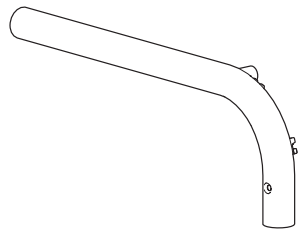


9

 


10

    4

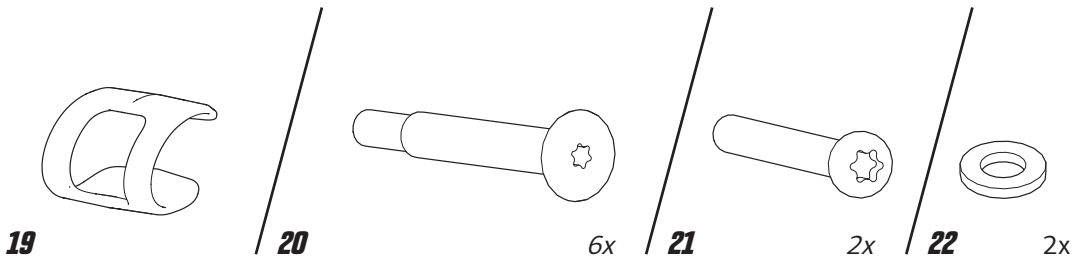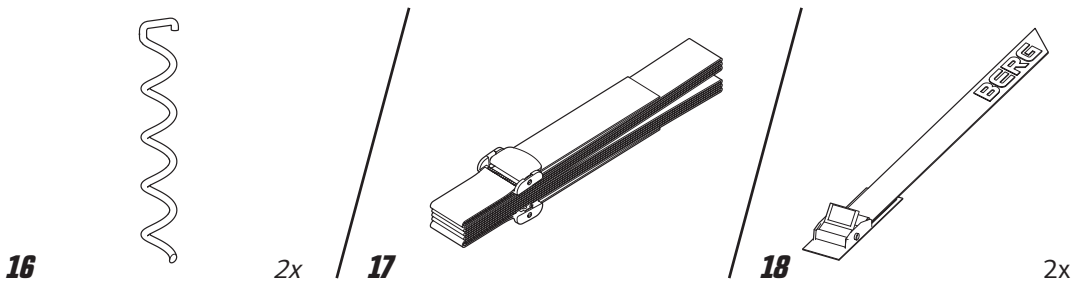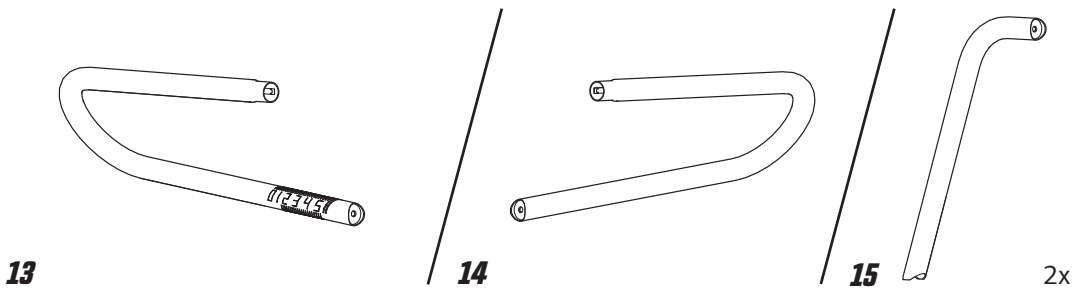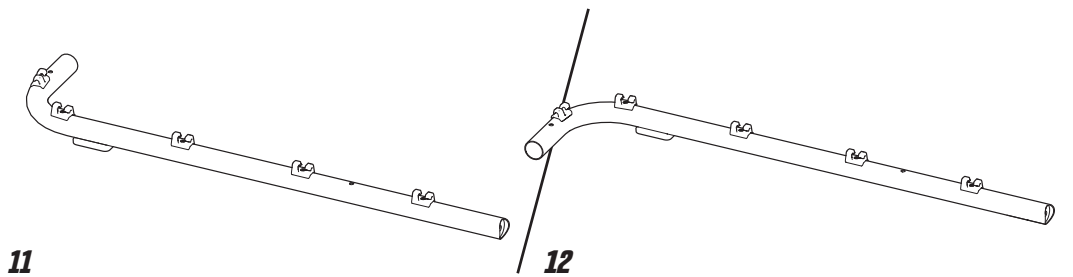


WARNING! The products below are tools.
Keep out of reach of children.

 23

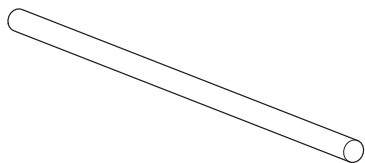

24


 


25






***READY FOR THE
NEXT STEP?***

  INSTALLATION

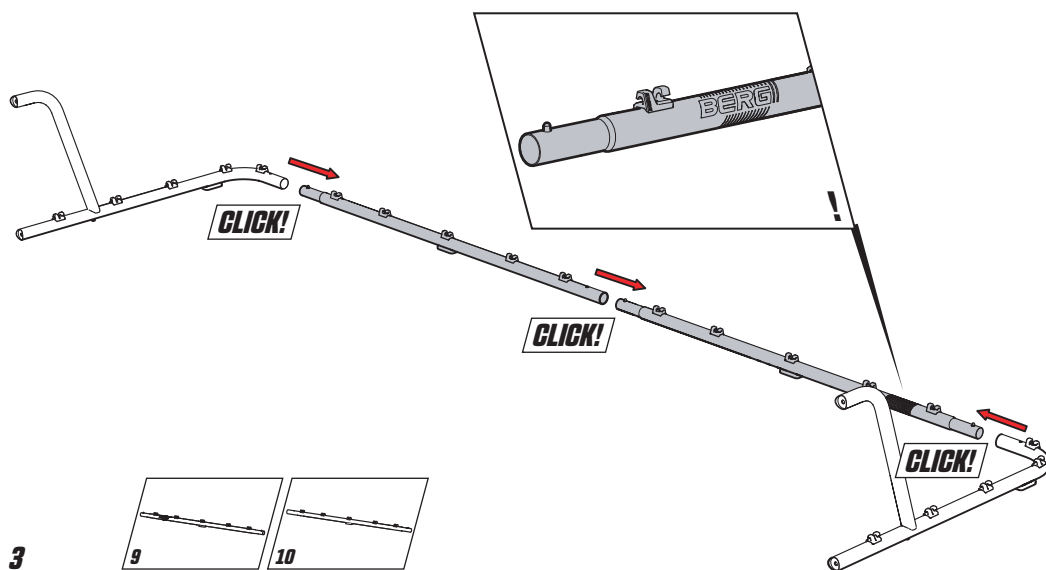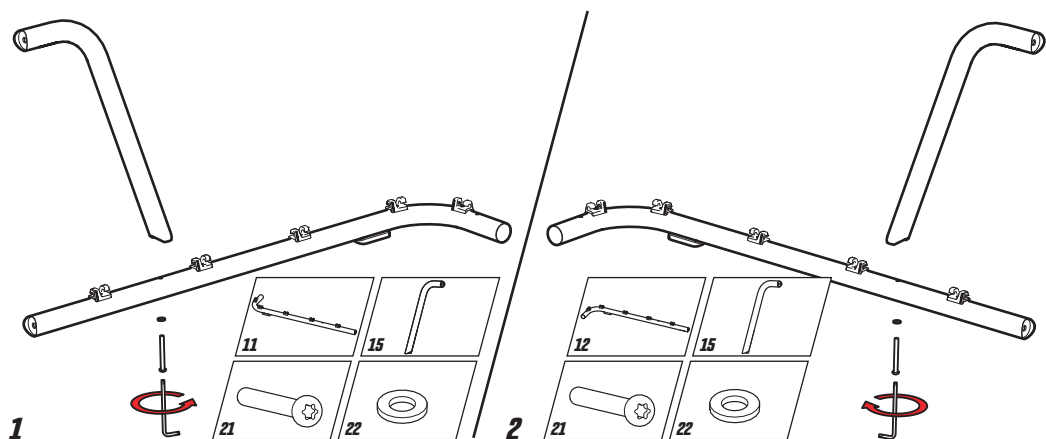


ION

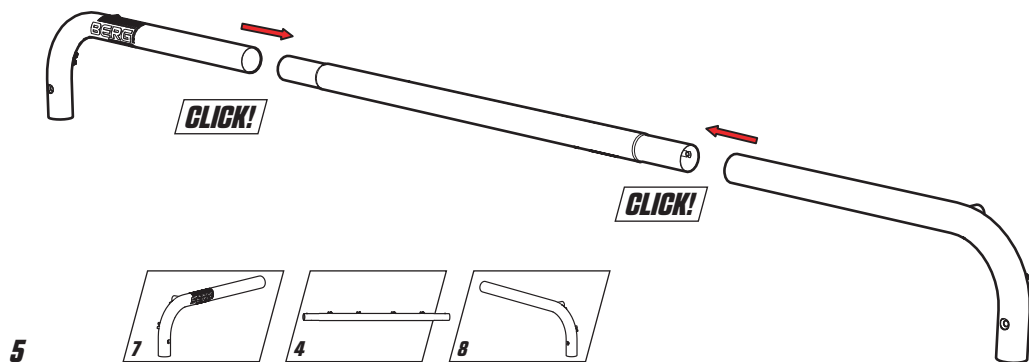 
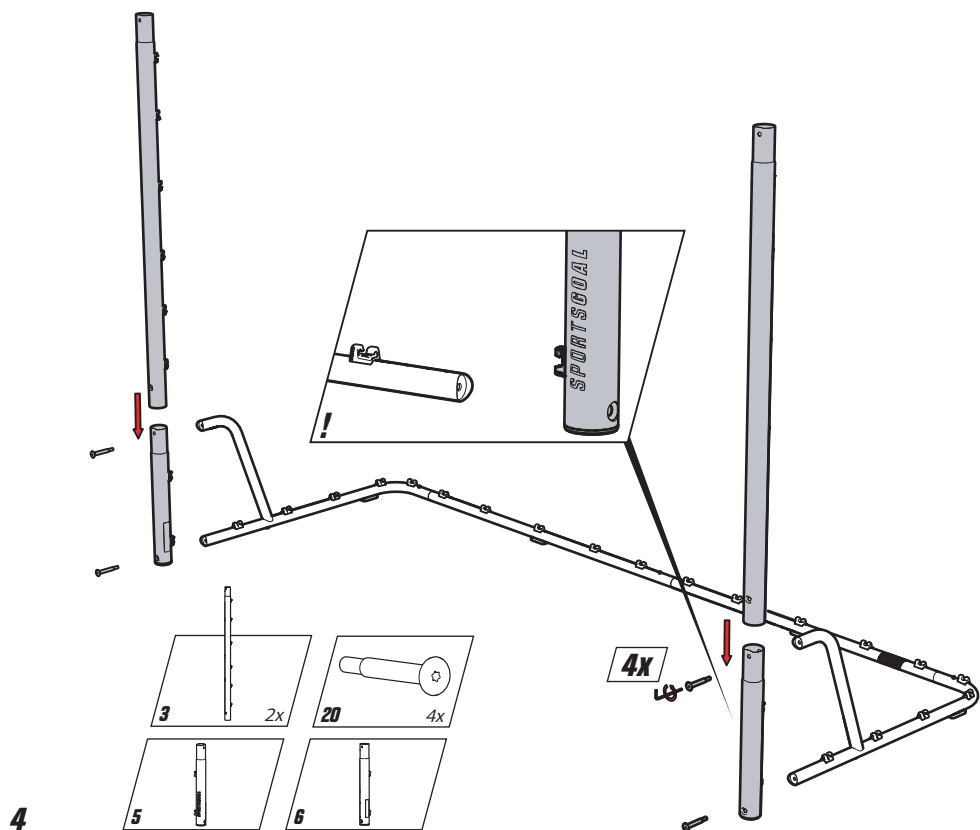 


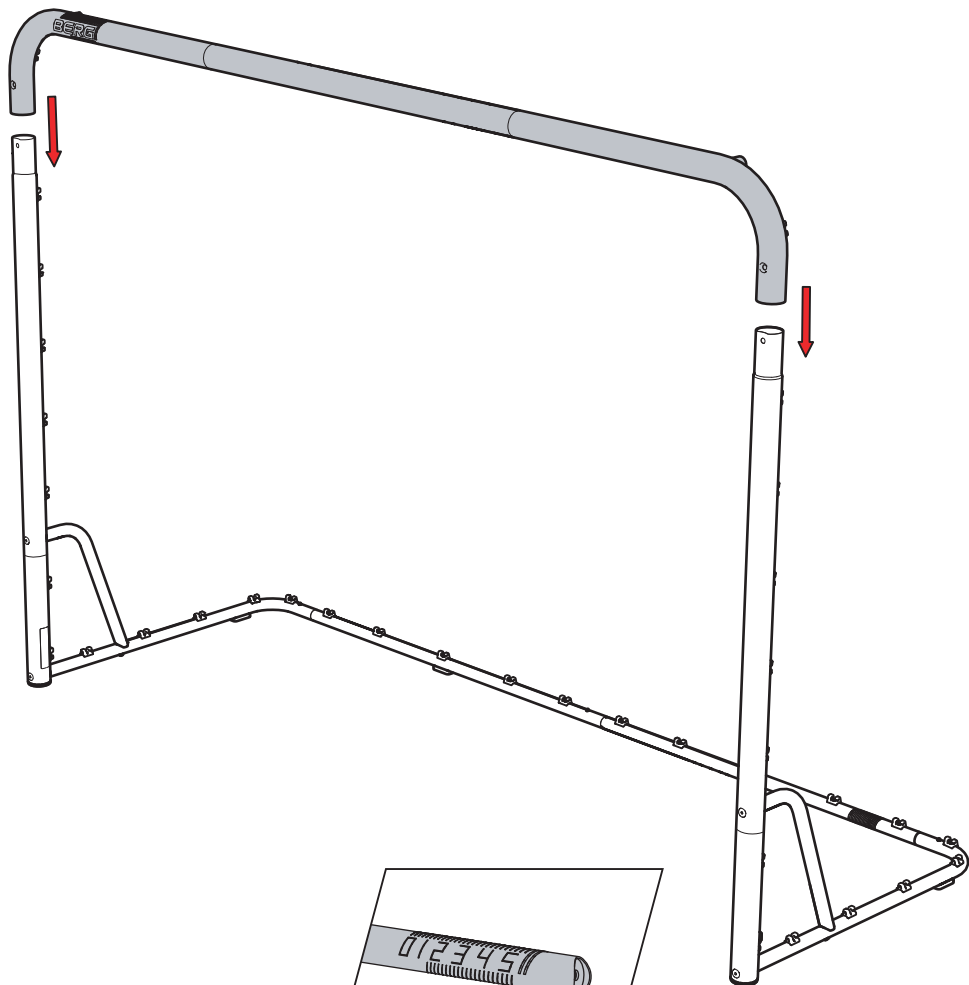 





6



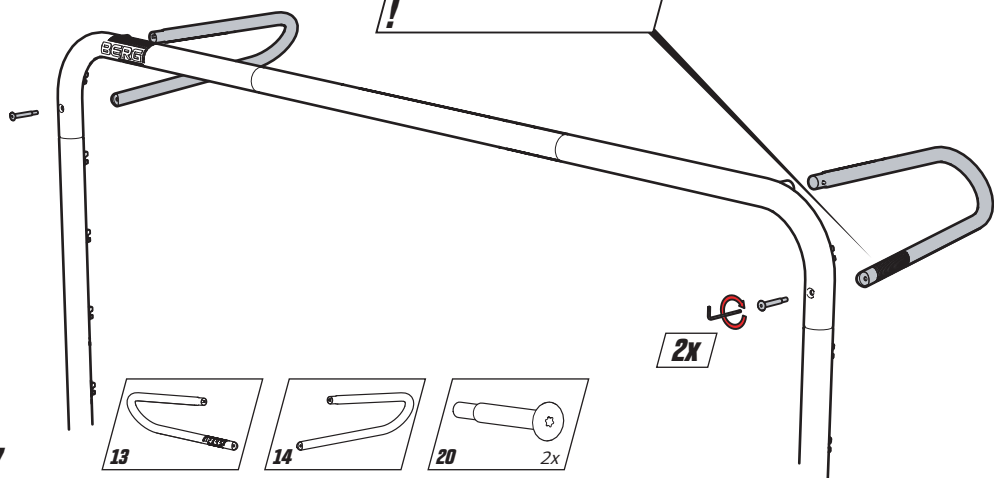 


7

 
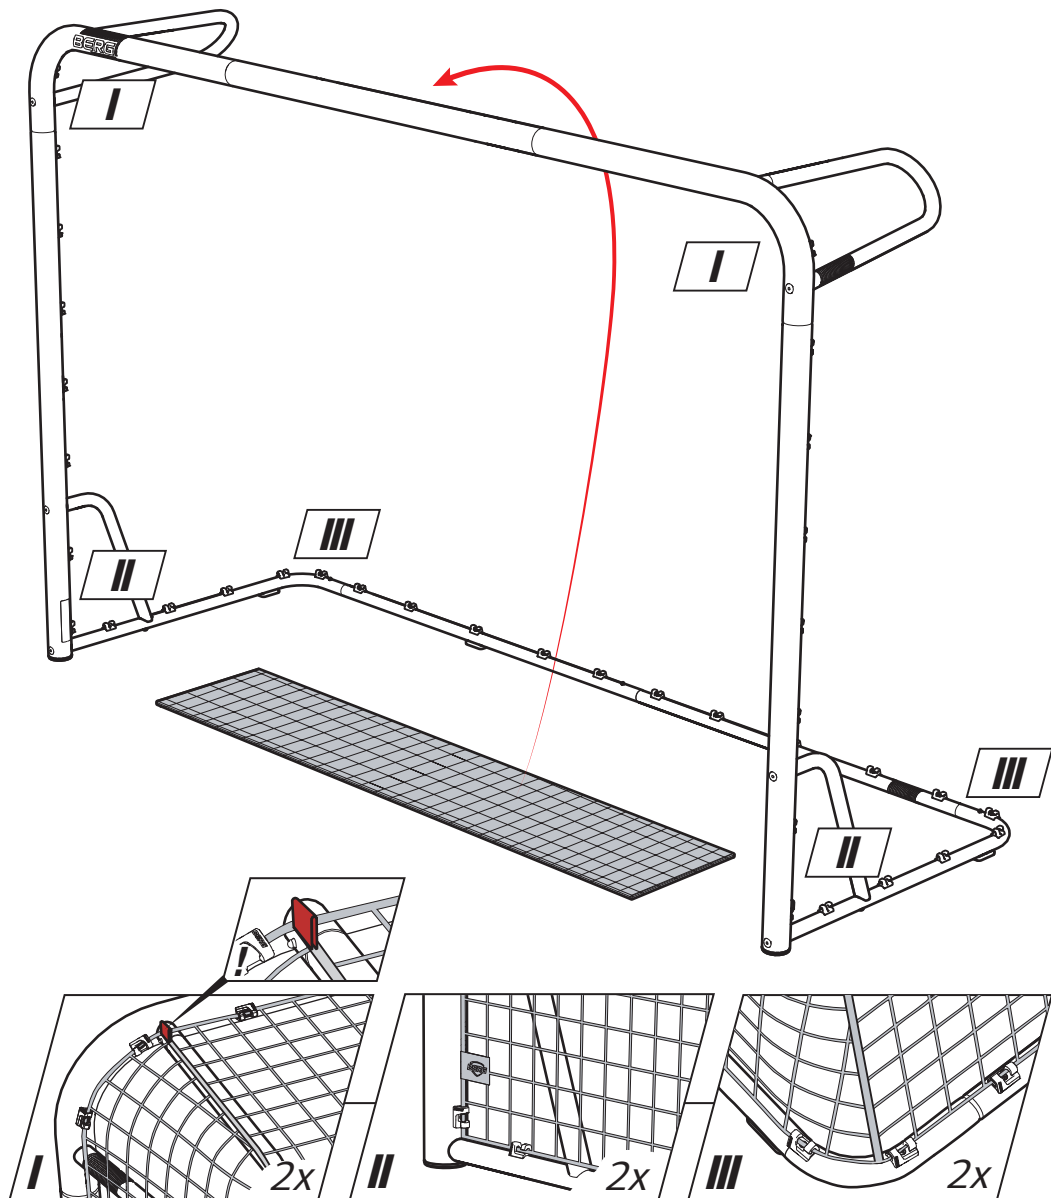 


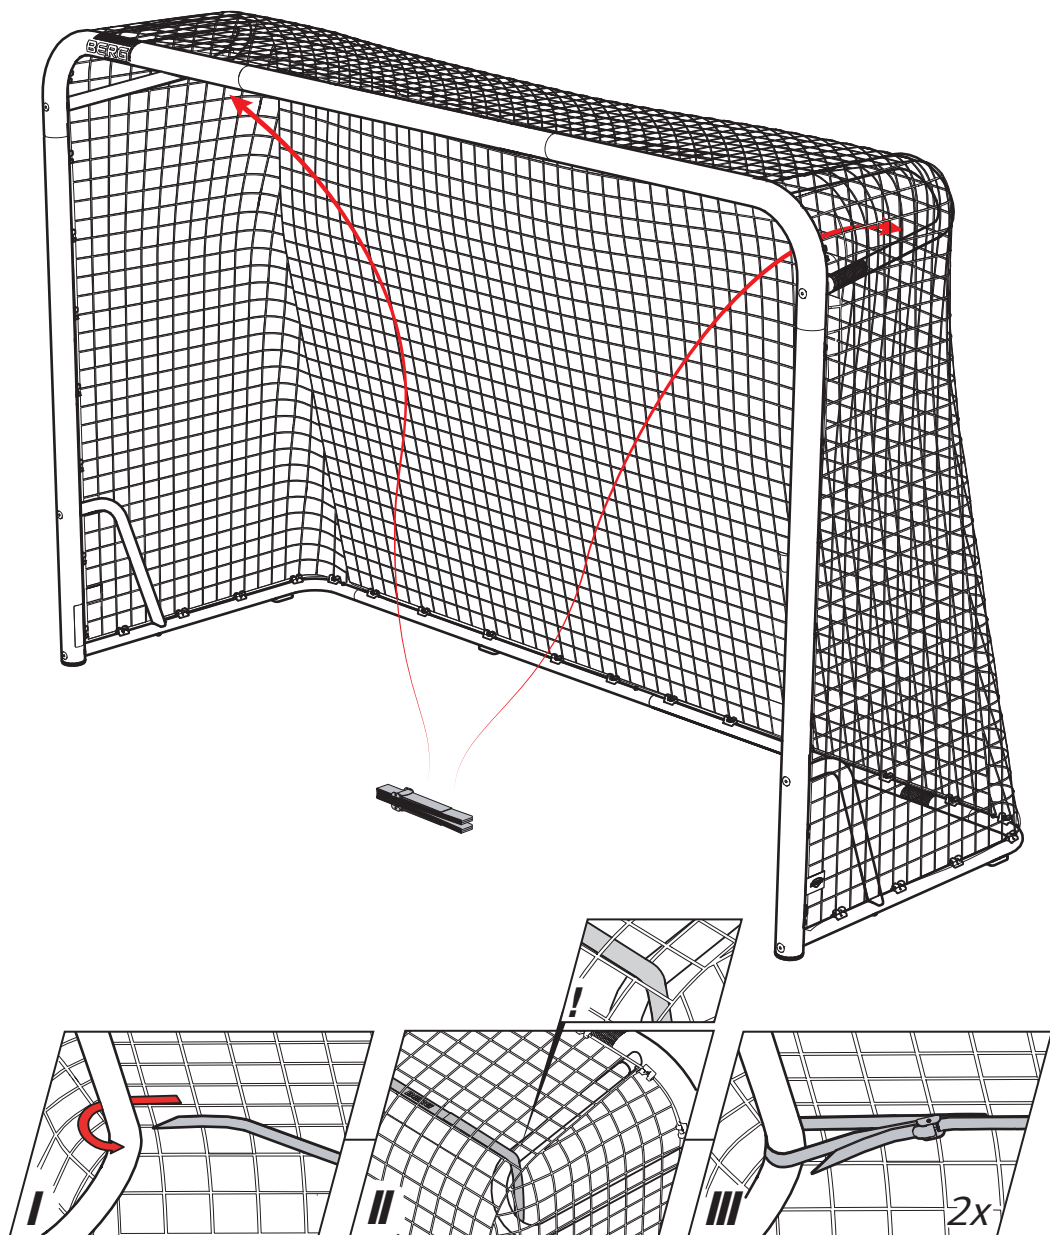 

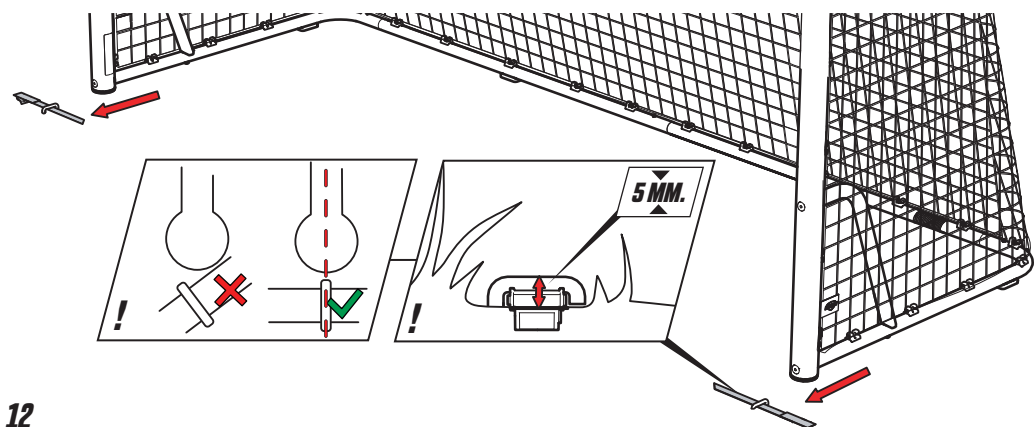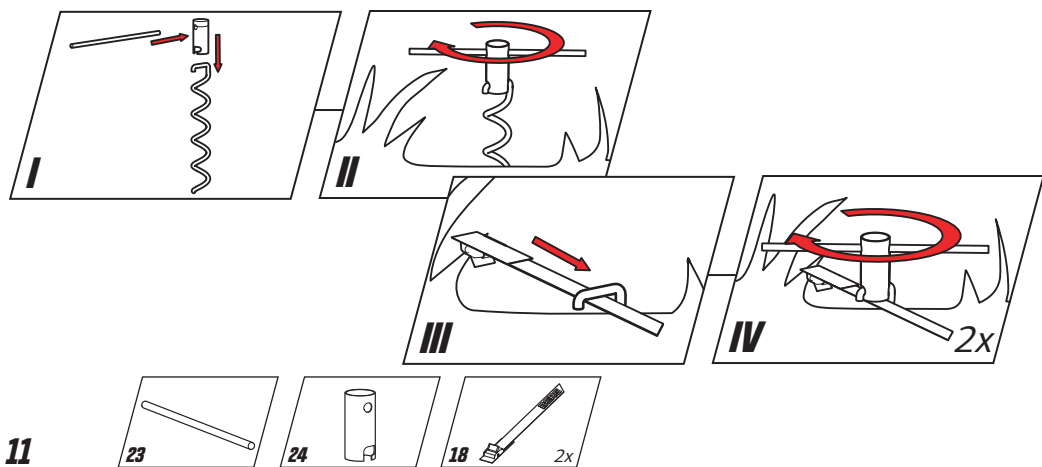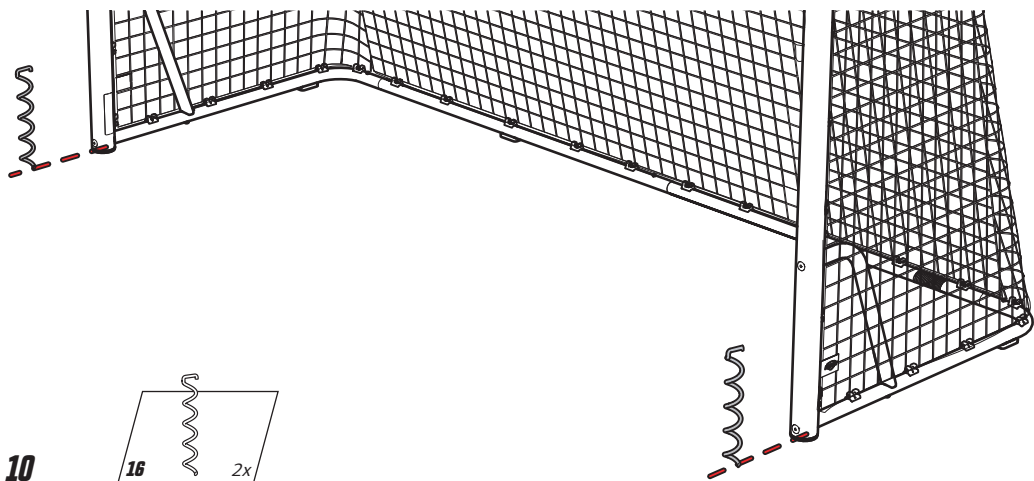   


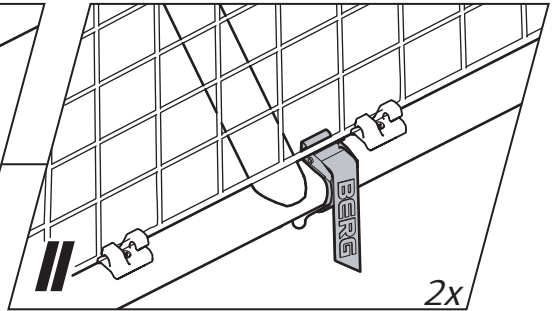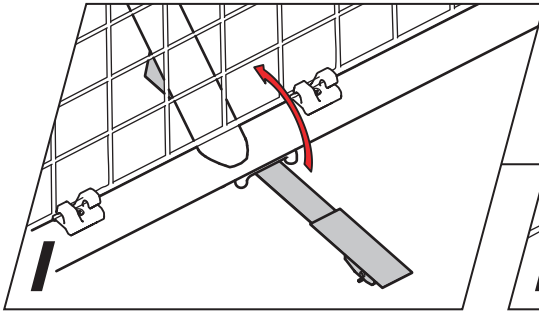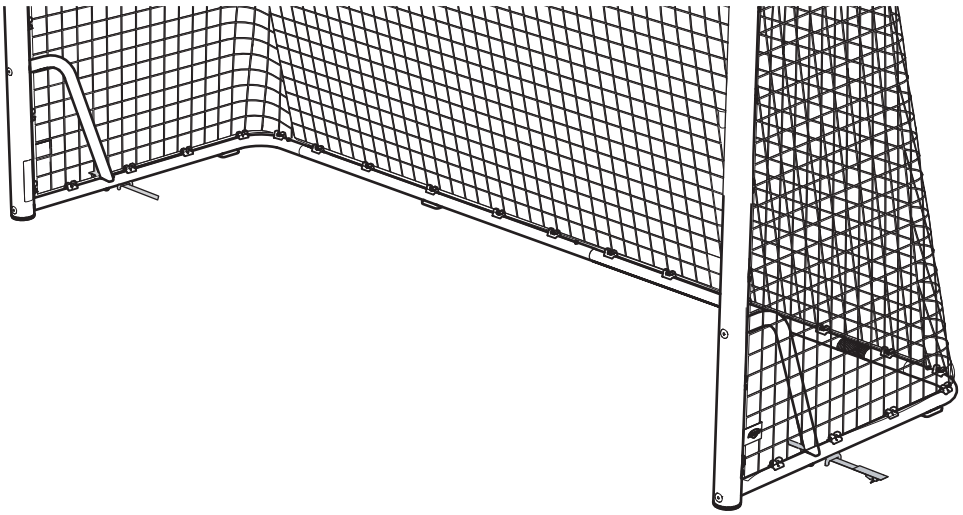   


13

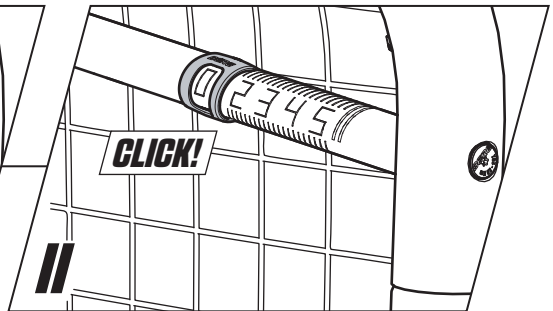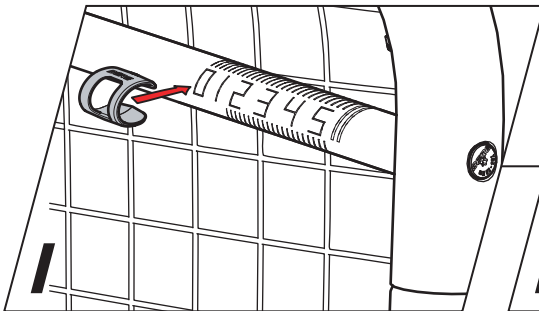  

14

 

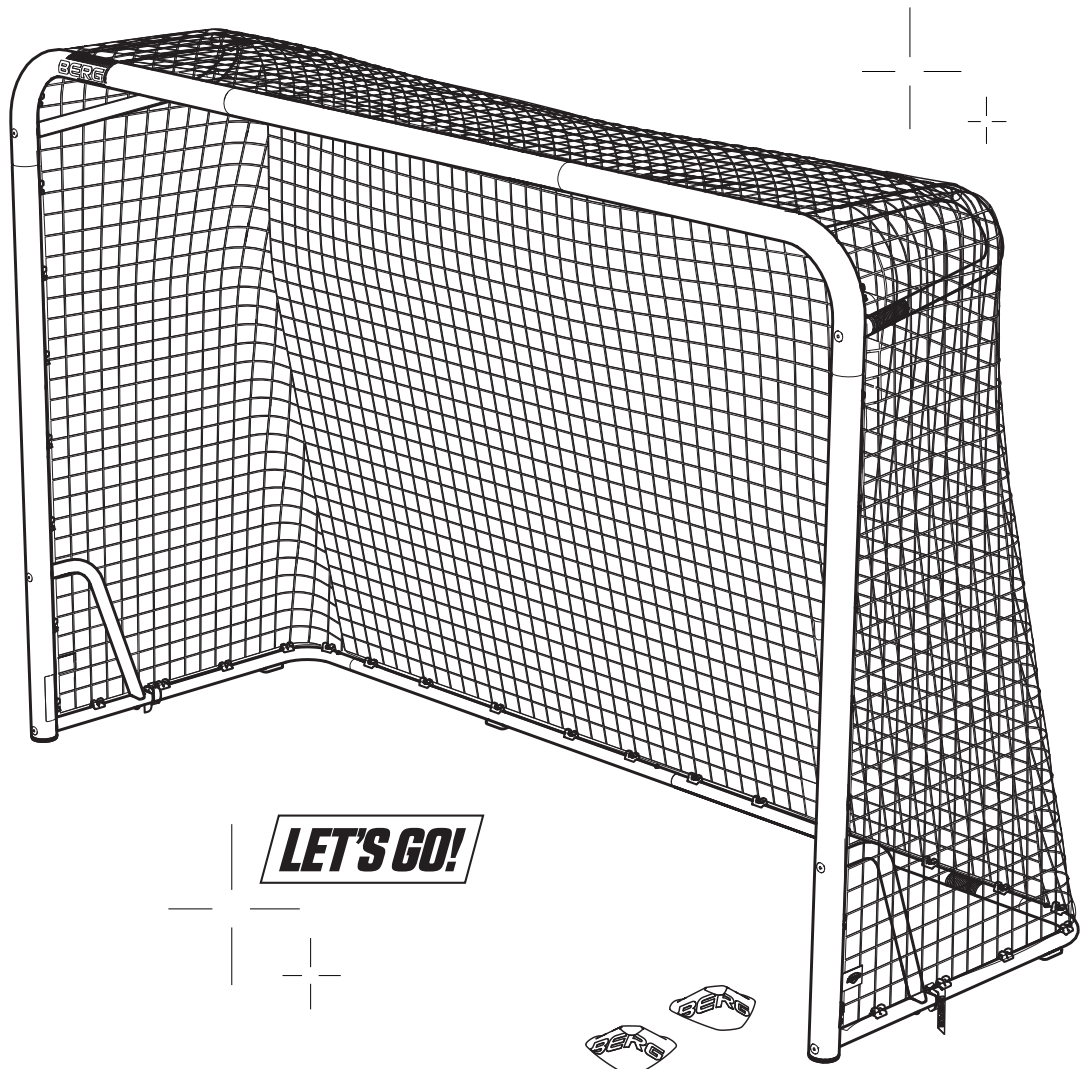 

LET'S GO!

ENGLISH

Warnings

- Read instructions prior to first use and keep for future reference!
- Not suitable for children under 36 months - Strangulation hazard - loose ropes can cause strangulation. Choking hazard – small parts in its unassembled state.
- Adult assembly required.
- The weight of the product is 26 kg. Always anchor the product as described in the assembly steps. An unsecured product can tip over causing serious injury!
- Never climb, hang or swing on the framework and/or net, the product can tip over causing serious injury!
- For domestic use only.
- For outdoor use only.
- Adult supervision required.
- The product can become hot in direct sunlight, be careful.
- Keep fire and other heat sources away from the product.

Safety instructions

Only use your BERG product as instructed in this manual. Any unauthorized use could result in serious injury to the user or damage the product.

BERG or the dealer cannot be held responsible for improper use of this product.

For safety reasons, unless BERG-approved, modifications or changes to the product are prohibited.

Safe play area

- Only set up the product on level ground. Do not use the product on a slope or in a hilly area.
- Place the product on an unpaved steady surface, such as grass. Do not install your product on sand, concrete, asphalt or other surface where the anchor can't be assembled properly.
- Objects and other obstacles that can interfere with using the product should be prohibited from the playing area.

Safe installation

- Adult assembly required.
- The product must be installed according to the detailed steps in the Assembly Manual.
- The product always needs to be securely anchored according to the detailed steps in the manual to prevent it from tipping over.

Safe use

- Check the assembled product prior to first use.
- Never climb, hang or swing on the net or framework, the product can tip over causing serious injury!

Inspection and maintenance

To ensure the safety of the users of the product, the product has to be subjected to the safety inspections and maintenance instructions mentioned below. If the checks are not carried out regularly the product could tip over or otherwise become a hazard.

Before each use

Anchor

- Check if it is properly mounted and stable.
- Check if the strap is tightened.
- Frame, nuts & bolts
- Check for visible damage.

Monthly

Frame, nuts & bolts

- Check if connections are tight and tighten them if needed

Net

- Check if it is properly attached to all net clips.
- Check for wear and tear.

Beginning of each season

Anchor

- Re-anchor in the ground at a different location.
- Check all nuts and bolts for tightness and tighten when required.
- When the product is not used for a longer period of time (e.g. during winter), we recommend storing the product in a dry place for a longer product life.
- Missing or worn components must be replaced or repaired immediately.
- Replace defective parts in accordance with the manufacturers instructions.
- Follow your local guidelines for the disposal of all materials.

Warranty

Warranty period

BERG products are of excellent quality. To provide you with years of carefree fun on our products, BERG offers you a functionality warranty. A functionality warranty is a warranty regarding its functional use. Please consult the information below for the term of this warranty.

Frame	3 years
Frame (after registration)	6 years (3+3)
Net	3 years
Accessories	3 years

- Parts that are liable to wear and tear, the influences of weather (such as rust and discolouration) are excluded from warranty.
- Check www.bergtoys.com for extensive warranty regulations.

Warranty conditions

The owner of the product can only claim a warranty by presenting the original receipt of the purchase. The warranty only applies to material and construction faults and with respect to this product or parts therefore.

The warranty becomes nul and void if:

- The product is used improperly and / or negligently.
- The product is not assembled and maintained in accordance with the instruction manual.
- Technical repairs to the product are not carried out in a professional manner.
- Replacement parts do not correspond to the technical specifications of the product involved or are installed incorrectly.
- Parts mounted afterwards do not meet technical specifications of the product involved or have not been mounted correctly.
- Added parts or replaced parts are no official BERG spare parts or accessories.
- Damage caused by the influences of weather such as rust, UV rays or normal wear and tear.
- The product has been used for rental purposes or made available for use by a 3rd party.

During the warranty period, all material and construction faults assessed by BERG will be repaired or replaced at the discretion of BERG.

The owner of the product can only lay claim under this warranty by returning to the company where the product was bought. Besides the complaint, take the

product serial number and original purchase receipt with you. The serial number is present on the frame.

If the warranty claim is not honored, all costs incurred must be paid by the owner.
The warranty is not transferable to third parties.

The warranty listed above is the only warranty for this product. There are no other expressed or implied warranties.

LET'S GO!