




## Assembly and Operating Instructions

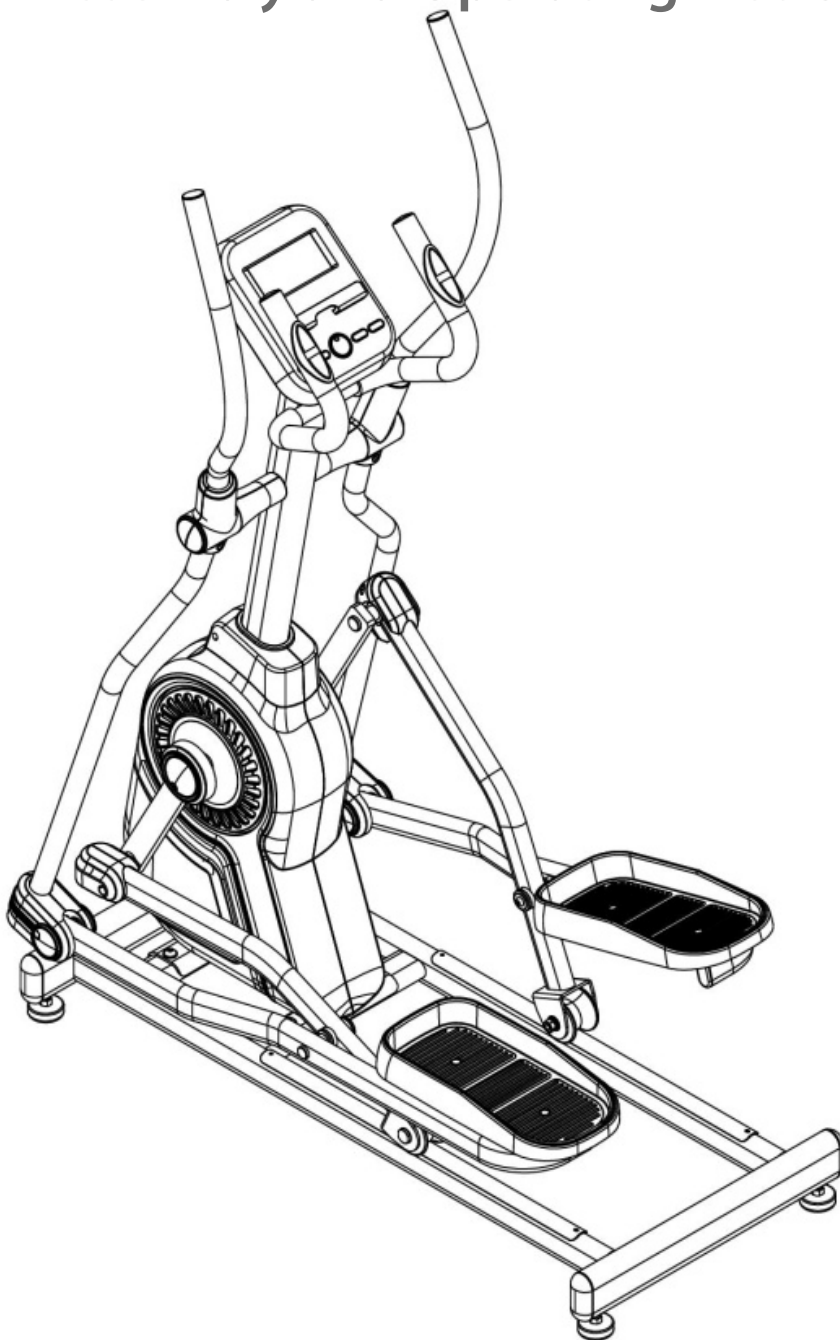

max. 136 kg



~ 60 Min.



52 kg

L 154 | W 56 | H 165

SKU: CST-FX30-3

FSUKCSTFX30.03.02

# Elliptical Cross Trainer FX30



# Content

<b>1</b>	<b>GENERAL INFORMATION</b>	<b>8</b>
1.1	Technical Data	8
1.2	Personal Safety	9
1.3	Electrical Safety	10
1.4	Set-Up Place	11
<b>2</b>	<b>ASSEMBLY</b>	<b>12</b>
2.1	General Instructions	12
2.2	Scope of Delivery	13
2.3	Assembly	16
<b>3</b>	<b>OPERATING INSTRUCTIONS</b>	<b>25</b>
3.1	Console Display	25
3.2	Display Overview	26
3.2.1	User-defined Programme	27
3.2.2	Preset Programmes	27
3.2.3	Heart rate controlled programme	28
3.2.4	Target Heart rate programme	28
3.2.5	Body Fat Test	29
3.3	Power Supply	29
3.4	Wireless Connection and Fitness Apps	30
<b>4</b>	<b>STORAGE AND TRANSPORT</b>	<b>31</b>
4.1	General Instructions	31
4.2	Transportation Wheels	31
<b>5</b>	<b>TROUBLESHOOTING, CARE AND MAINTENANCE</b>	<b>32</b>
5.1	General Instructions	32
5.2	Faults and Fault Diagnosis	32
5.3	Error Codes and Troubleshooting	33
5.4	Maintenance and Inspection Calendar	34
<b>6</b>	<b>DISPOSAL</b>	<b>34</b>
<b>7</b>	<b>RECOMMENDED ACCESSORIES</b>	<b>35</b>
<b>8</b>	<b>ORDERING SPARE PARTS</b>	<b>36</b>
8.1	Serial Number and Model Name	36
8.2	Parts List	37

8.3 Exploded Drawing 41

**9** WARRANTY 42

---

**10** CONTACT 44

---

**Dear customer,**

thank you for choosing fitness equipment from cardiostrong®. cardiostrong offers high-quality home fitness equipment that is optimally adapted to the conditions at home. Train at home no matter what the weather or time of the day. cardiostrong fitness equipment offers training programmes and a variety of equipment for all training levels and all training goals. Further information can be found at [www.fitshop.com](http://www.fitshop.com) or [www.cardiostrong.de](http://www.cardiostrong.de). We hope you enjoy your training!

Further information can be found at [www.fitshop.co.uk](http://www.fitshop.co.uk)

**Intended Use**

The equipment may only be used for its intended purpose.

The equipment is only suitable for home use. The equipment is not suitable for semi-professional (e.g. hospitals, associations, hotels, schools, etc.) and commercial or professional use (e.g. fitness studios).

**Legal Notice**

Fitshop GmbH  
Europe's No. 1 for home fitness

International Headquarters  
Flensburger Straße 55  
24837 Schleswig  
Germany

Management:  
Christian Grau  
Sebastian Campmann  
Dr. Bernhard Schenkel  
No. HRB 1000 SL  
Local Court Flensburg  
European VAT Number: DE813211547

**Disclaimer**

© cardiostrong is a registered brand of the company Fitshop GmbH. All rights reserved. Any use of this trademark without the explicit written permission of Fitshop is prohibited.

Product and manual are subject to change. Technical data can be changed without advance notice.

# FITSHOP

Europe's No.1 for Home Fitness

## ABOUT THIS MANUAL

Please carefully read the entire manual before installation and first use. The manual will help you to quickly set up the system and explains how to safely use it. Make sure that all persons exercising with the equipment (especially children and persons with physical, sensory, mental or motor disabilities) are informed about this manual and its contents in advance. In case of doubt, responsible persons must supervise the use of the equipment.

Due to ongoing changes and software optimisations, the manual may have to be updated. If you notice any discrepancies during assembly or use, please refer to the manual uploaded to the webshop. The latest manual is always available there.



This equipment has been manufactured according to the latest safety knowledge. As far as possible, potential safety hazards which could cause injury have been eliminated. Make sure to carefully follow the instructions and that all parts are securely in place. If required, read through the instructions again to correct any mistakes.

Training devices must be classified according to accuracy and use. Accuracy classes are only applicable to devices that display training data.

### Accuracy classes

Class A: high accuracy.

Class B: medium accuracy.

Class C: low accuracy.

The use classes explain the intended use of the training device.

### Use classes

**Class S** (studio): professional and/or commercial use.

These training devices are intended for the use in training rooms of facilities such as sports clubs, school facilities, hotels, clubs and studios whose access and supervision is specifically regulated by the owner (person with legal responsibility).

**Class H** (home use): use at home.

These stationary training devices are intended for the use in private homes where access to the training device is regulated by the owner (person with legal responsibility).

Please pay close attention to the safety and maintenance instructions given here. The contract partner cannot be held liable for damage to health, accidents or damage to the equipment when it is not used in accordance with these instructions.

The following safety instructions may appear in this manual:

► **ATTENTION**

This notice indicates potentially hazardous situations which, if not avoided, may result in property damage.

⚠ **CAUTION**

This notice indicates potentially hazardous situations which, if not avoided, may result in slight or minor injuries!

⚠ **WARNING**

This notice indicates potentially hazardous situations which, if not avoided, may result in death or serious injuries!

⚠ **DANGER**

This notice indicates potentially hazardous situations which, if not avoided, will result in death or serious injuries!

ⓘ **NOTICE**

This notice indicates further useful information.

Retain these instructions in a safe place for future reference, maintenance or when ordering replacement parts.

## 1.1 Technical Data

### Display Overview:

- + Time
- + Speed
- + Distance
- + Calories
- + Pulse

### Programme overview:

Programmes:	12
+ Heart rate programmes:	3
+ Preset programmes:	7
+ Body fat test:	1
+ User-defined programme:	1

### Weight and dimensions:

Item weight (gross, incl. packaging):	60.5 kg
Item weight (net, without packaging):	52 kg
Packaging dimensions in cm (L x W x H):	137.5 x 38.5 x 66.5
Set-up dimensions in cm (L x W x H):	154 x 56 x 165
Maximum user weight:	136 kg

### Technical overview:

Resistance levels:	16
Braking system:	Magnetic/motorised
Power supply:	Self-generated
Flywheel:	6 kg
Menu language:	English
Wireless Connection:	Yes
Heart rate monitor:	Pulse monitor (chest strap optional)
Use class:	H



## 1.2 Personal Safety

### **DANGER**

- + Before you start using the equipment, you should consult your physician that this type of exercise is suitable for you from a health perspective. Particularly affected are persons who: have a hereditary disposition to high blood pressure or heart disease, are over the age of 45, smoke, have high cholesterol values, are overweight and/or have not exercised regularly in the past year. If you are under medical treatment that affects your heart rate, medical advice is absolutely essential.
- + Note that excessive training can seriously endanger your health. Please also note that heart rate monitoring systems can be inaccurate. If you notice any signs of weakness, nausea, dizziness, pain, shortness of breath, or other abnormal symptoms, stop exercising immediately and seek advice from your doctor if necessary.
- + The owner must communicate all warnings and instructions to the user.

### **WARNING**

- + This equipment may not be used by children under the age of 14.
- + Children should not be allowed unsupervised access to the equipment.
- + Persons with disabilities must have a medical license and must be under strict observation when using the equipment.
- + Remember that your device does not have a freewheel function. Therefore moving parts cannot be stopped immediately.
- + Note that the individual physical power required to perform an exercise may differ from the displayed mechanical power.
- + When ascending and descending, make sure that one of the treads is in the lowest position.
- + The equipment is strictly for use by one person at a time.
- + Keep your hands, feet and other body parts, hair, clothing, jewellery and other objects well clear of moving parts.
- + During use, wear suitable sports clothing rather than loose or baggy clothing. When wearing sports shoes, make sure they have suitable soles, preferably made of rubber or other non-slip materials. Shoes with heels, leather soles, studs or spikes are unsuitable. Never exercise barefoot.

### **CAUTION**

- + If your equipment needs to be connected to the power supply with a mains cable, make sure that the cable is not a potential tripping hazard.
- + Make sure that nobody is within the range of motion of the equipment during training so as not to endanger you or other persons.
- + Do not insert any objects of any kind into the openings of the device.
- + Be aware that if adjustment devices are left protruding, they may impede the user's movement.

## 1.3 Electrical Safety

### **DANGER**

- + In order to reduce the risk of an electric shock, always unplug the equipment from the mains socket immediately after your workout, before assembly or dismantling, and before maintenance or cleaning. Do not pull on the cable.

### **WARNING**

- + Do not leave the equipment unattended while the mains cable is plugged into the mains socket. During your absence, the mains cable must be removed from the mains socket to prevent improper use by third parties or children.
- + If the mains cable or plug is damaged or defective, contact your contract partner. Until repair, the equipment must not be used.

### **ATTENTION**

- + The equipment requires a mains connection of 220-230 V with 50 Hz mains voltage.
- + The equipment may only be connected directly to an earthed socket using the supplied mains cable. Extension cables must conform to VDE guidelines. Always completely unwind the mains cable.
- + The socket must be protected by a fuse with a minimum fuse rating of "16 A, slow blow".
- + Do not make any changes to the mains cable or the mains plug.
- + Keep the mains cable away from water, heat, oil and sharp edges. Do not route the mains cable underneath the equipment or under a carpet or rug, and do not place any objects on top of it.
- + If your purchased item is equipped with a TFT console, software updates must be carried out regularly. Follow the instructions on the console to perform the update(s).
- + The software systems on gym equipment with TFT consoles are set up only for the pre-installed apps. Do not install any additional apps.

### **NOTICE**

- + The pre-installed apps on TFT consoles are produced and provided by external manufacturers. Fitshop does not take any responsibility for the availability, functionality or contents of these apps.

## 1.4 Set-Up Place

### **WARNING**

- + Do not place the equipment in main corridors or escape routes.

### **CAUTION**

- + Choose a location in which to place the equipment such that there is enough free space/clearance to the front, the rear and to the sides of the equipment.
- + The training room should be well ventilated during training and not be exposed to any draughts.
- + Choose the place in which to set up the equipment such that there is enough free space/clearance to the front, the rear and to the sides of the equipment.
- + The free area in the direction from which the exercise equipment is accessed must be at least 0.6 m larger than the exercise area.
- + The set-up and mounting surface of the equipment should be flat, loadable and solid.

### **ATTENTION**

- + The device may only be used in one building, in sufficiently tempered and dry rooms (ambient temperatures between 10°C and 35°C). The equipment should not be used outdoors or in rooms with high humidity (over 70%) like swimming pools.
- + A floor protective mat/equipment underlay can help to protect high-quality floor coverings (parquet, laminate, cork, carpets) from dents and sweat and can help to level out slight unevenness.
- + For Class S equipment, the exercise equipment may only be used in areas where access, supervision and control are specifically regulated by the owner.

### 2.1 General Instructions

**⚠ DANGER**

- + Do not leave any tools, packaging materials such as foils or small parts lying around, as otherwise there is a danger of suffocation for children. Keep children away from the equipment during assembly.

**⚠ WARNING**

- + Pay attention to the instructions attached to the equipment in order to reduce the risk of injuries.

**⚠ CAUTION**

- + Ensure to have sufficient room for movement in each direction during assembly.
- + The assembly of the equipment must be carried out by at least two adults. If in doubt, seek the help of a third technically skilled person.

**▶ ATTENTION**

- + To prevent damage to the equipment and the floor, assemble the equipment on a mat or packaging board.

**ⓘ NOTICE**

- + In order to make the assembly as simple as possible, some screws and nuts to be used can already be pre-assembled.
- + Ideally, assemble the equipment at its later set-up place.










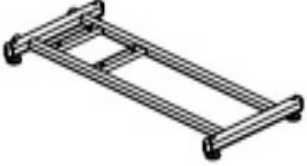


## 2.2 Scope of Delivery












The scope of delivery consist of the following parts. At the beginning, check whether all parts and tools belonging to the device are included in the scope of delivery and whether damage has occurred. In the event of complaints, the contractual partner must be contacted directly.

**⚠ CAUTION**


If parts of the scope of delivery are missing or damaged, the assembly must not be carried out.

Tools required (included in the scope of delivery): Allen wrench 6 mm, cross wrench 13 mm, cross wrench 14 mm, cross wrench 15 mm


			
A01	A02	A03	A04
			
A08	A11	A12	D02
			
D07	D08	D09	D10

			
A05	A06	A07	D13
			
D04	D05	D06	E12
			
D14	D12	E01	


# HARDWARE PACK

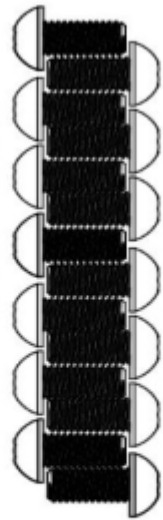


(C04) - BOLT M8\*15 - 14PCS

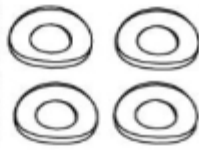


(C08) - CURVED WASHER 8-4PCS

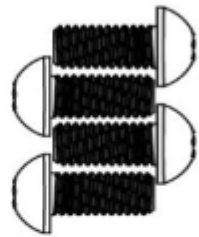


(C02) - BOLT M10\*20 - 4PCS

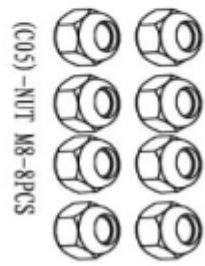


(C05) - NUT M8 - 8PCS

 


(C20) - SCREW (ST4, 2X16mm) - 6PCS

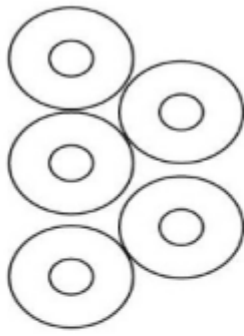


(C06) - FLAT WASHER 8-10PCS

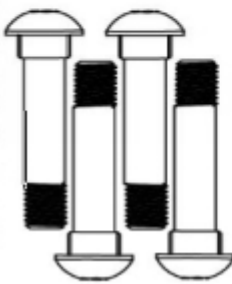

(C12) - BOLT M8\*40 - 4PCS

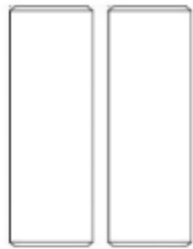


(B04) - SMALL HINGE AXIS - 2PCS

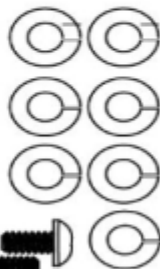

(C29) - SPRING WASHER 8-14PCS





(C23) - BOLT M5\*8 - 6PCS

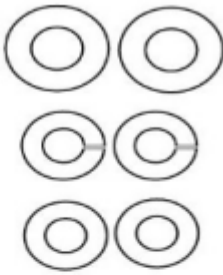


(C31) - FLAT WASHER 8-4PCS

(C30) - SPRING WASHER 10-4PCS  
(C24) - FLAT WASHER 10-4PCS

 
(C21) - SCREW (ST4, 2X12mm) - 4PCS

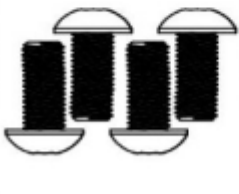


(C17) - BOLT M8\*20 - 4PCS

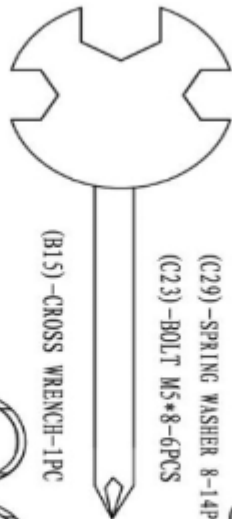

(B15) - CROSS WRENCH - 1PC

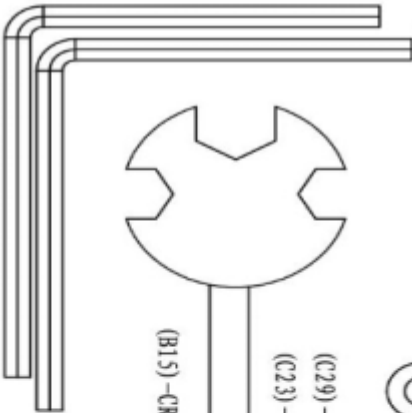

(B14) - 6# ALLEN WRENCH - 2PCS

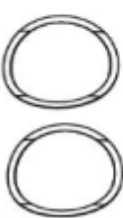

(C28) - WAVY WASHER - 6PCS

## 2.3 Assembly

Before assembly, take a close look at the individual assembly steps shown and carry out the assembly in the order given.

### ① NOTICE

- + First loosely screw all parts together and check that they fit properly. Tighten the screws using the tool only when you are instructed to do so.
- + If you have difficulty recognising the graphics, we recommend that you open and/or download the PDF instructions stored in the webshop on your end device (e.g. smartphone, tablet or PC). There you have the option of zooming in closer. Please note that the Adobe Acrobat Reader programme must be installed on your end device in order to open the file.


### Step 1: Assembly of the Main Frame

1. Fasten the crank cover (D12) to the main frame (A02) with two bolts (C23).

*Use the cross wrench (B15) for this.*

2. Fasten the main frame (A02) to the base frame (A01) with four bolts (C02), four spring washers (C30) and four washers (C24).

*Use the Allen wrench (B14) for this.*

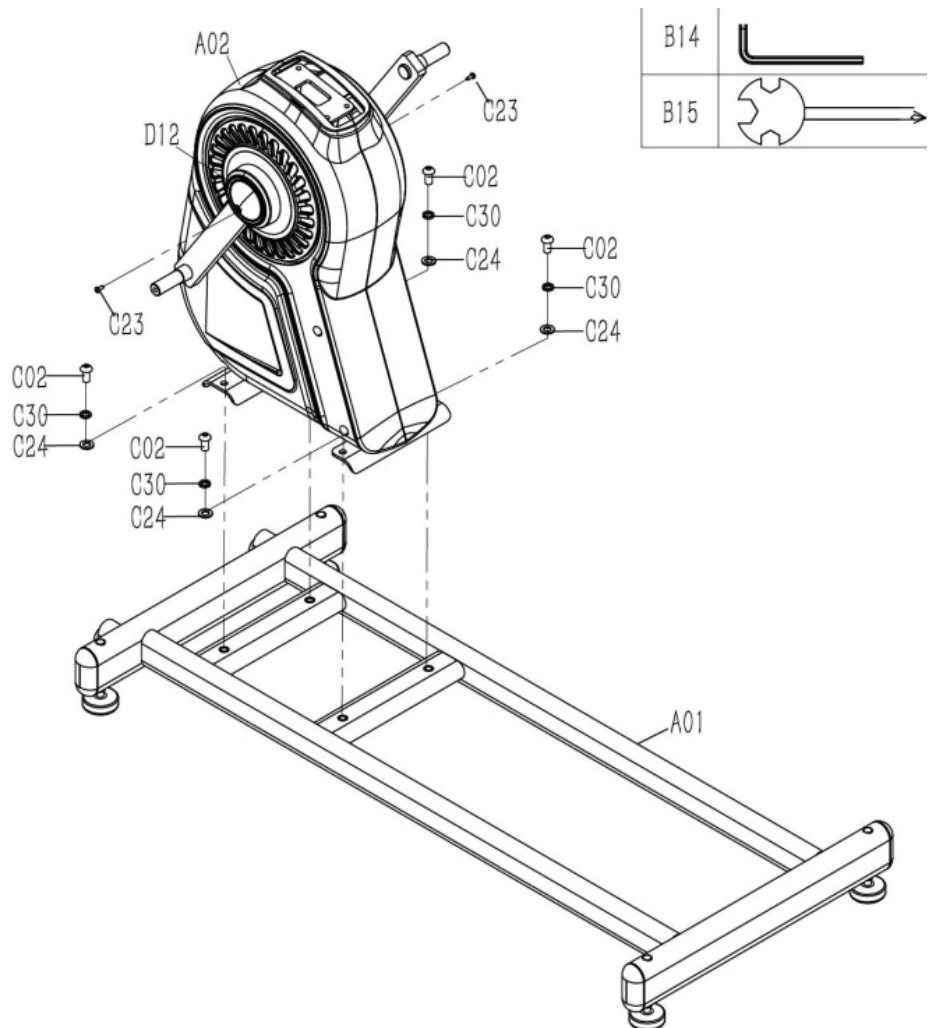




## Step 2: Fitting the pedal connections

1. Fit the left and right pedal connecting frame (A05) to the main frame (A02) using two washers (C28), two bolts (C04), two spring washers (C29) and two washers (C06).

*Use the Allen wrench (B14) for this.*

2. Fit the covers of the left and right pedal tube cover (D07 & D08) to the respective pedal connecting frame (A05) using two screws (C20) and two screws (C21).

*Use the cross wrench (B15) for this.*

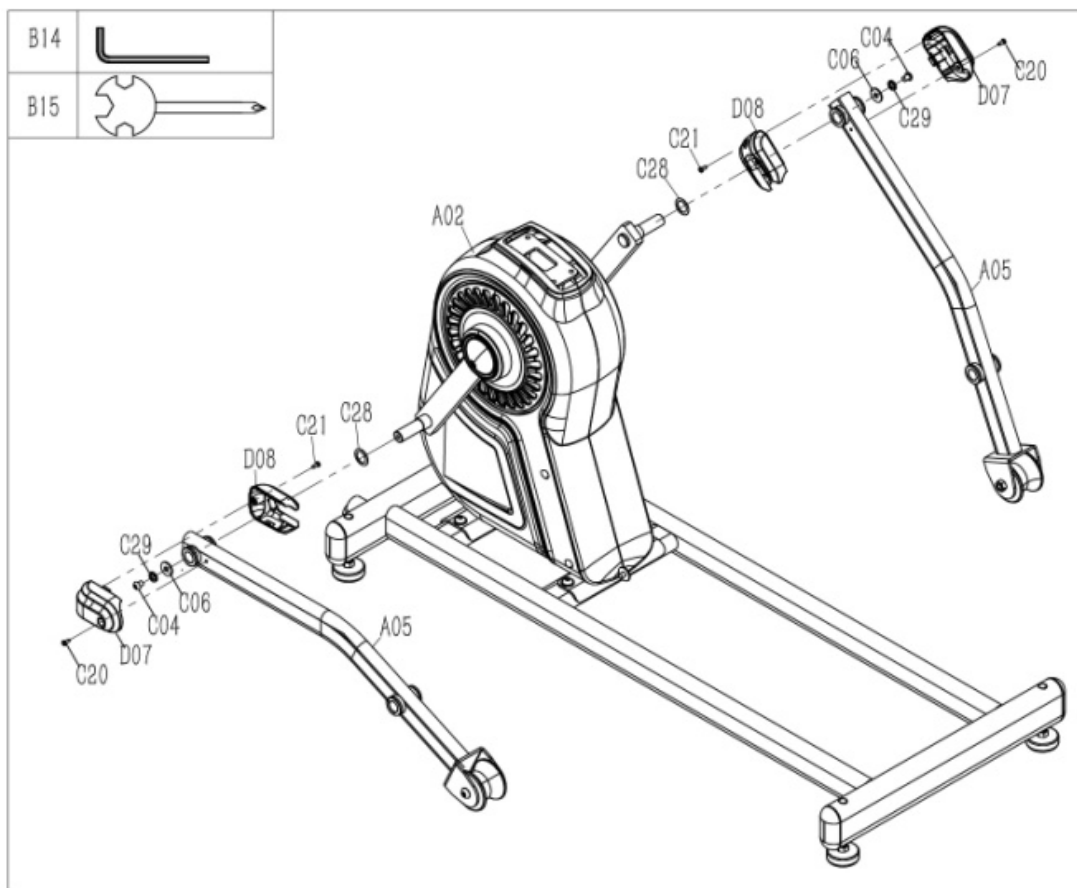


### Step 3: Mounting the handle

1. Connect the upper signal wire (E04) to the middle signal wire (E08).
2. Connect the console tube frame (A06) to the main frame (A02) with four bolts (C04), four spring washers (C29) and four washers (C31).

*Use the Allen wrench (B14) for this.*

3. Insert the rubber ring (D13) into the console tube frame (A06).
4. Fasten the left and right top protection cover (D02 & D04) with two screws (C21).

*Use the cross wrench (B15) for this.*

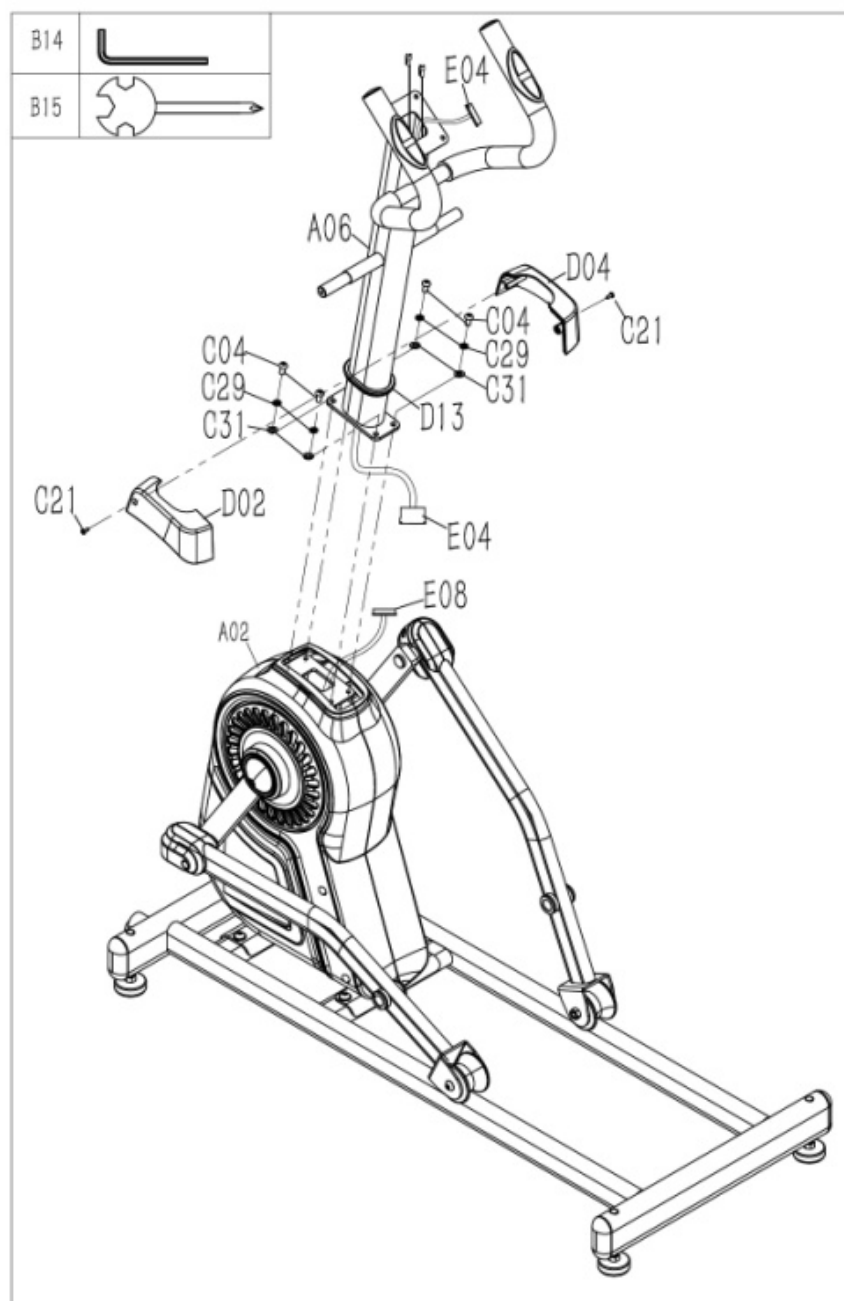

#### Step 4: Fitting the pedals

1. Fit the left and right pedal frame (A07 & A08) to the right and left rocking handrail frames (A04 & A03) using four bolts (C04), four spring washers (C29), four washers (C06) and a small hinge axis (B04).

Use an Allen wrench (B14) for this.

2. Attach the left and right pedal frame (A07 & A08) and the left and right rocking handrail frame (A03 & A04) to the axles provided on the console tube frame (A06) using four wave washers (C28), four bolts (C04), four spring washers (C29) and four washers (C06).


Use the Allen wrench (B14) for this.

3. Fasten the left and right rocking handrail cover (D05 & D06) between the left and right handrail frame (A03 & A04) and the left and right pedal frame (A07 & A08) with four bolts (C23).

Use the cross wrench (B15) for this.

4. Attach the pedals (D14) to the left and right pedal frame (A07 & A08) with four bolts (C17) and four nuts (C05).


Use the cross wrench (B15) and Allen wrench (B14) for this.

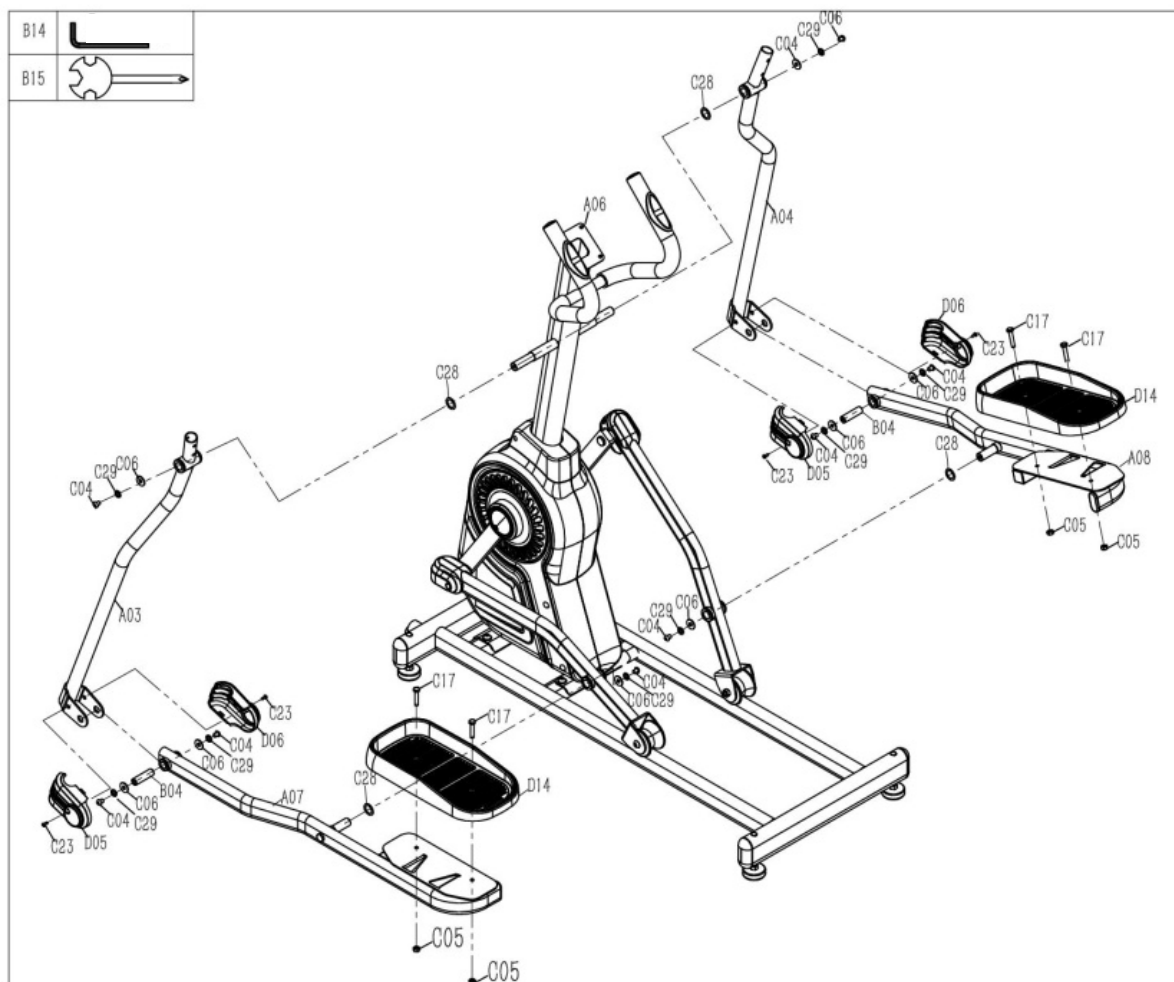

### Step 5: Mounting the handrails

Attach the left and right handrail (A11 & A12) to the left and right rocking handrail frame (A03 & A04) using four bolts (C12), four nuts (C05) and four washers (C08).


*Use the cross wrench (B15) for this.*

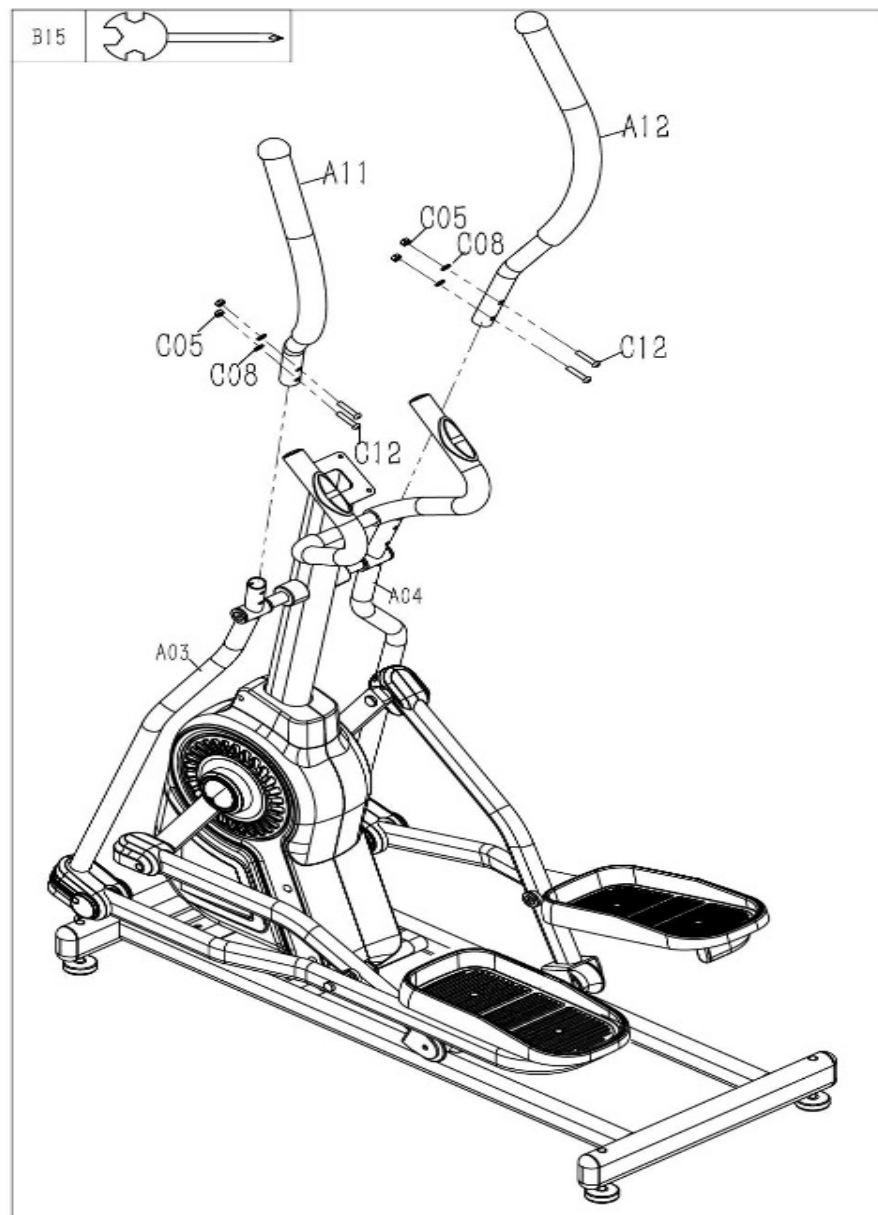

### Step 6: Fitting the covers


Attach the front rocking handrail covers (D09) and rear rocking handrail covers (D10) to the left and right handrail (A11 & A12) using four screws (C20).

*Use the cross wrench (B15) for this.*

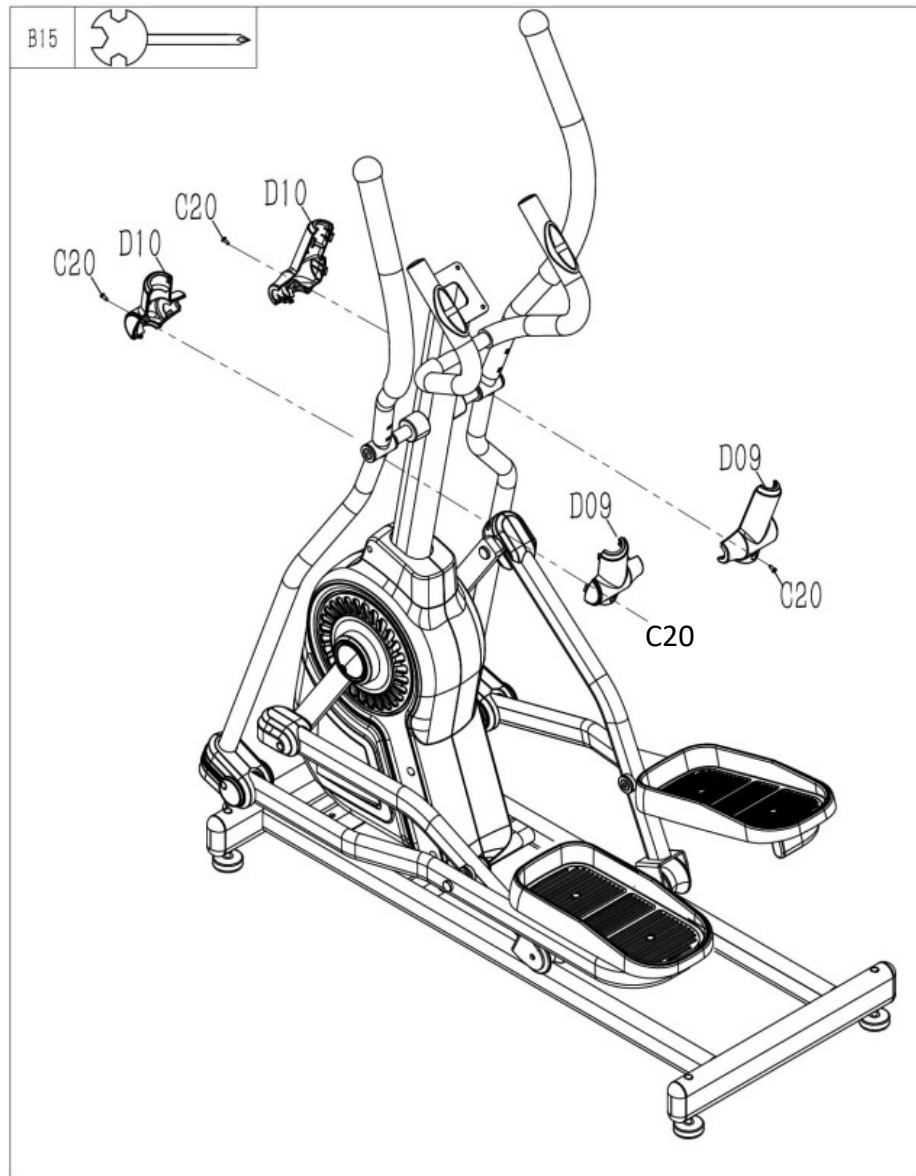

**Step 7: Connecting the console**

Connect the cable of the console (E01) to the upper signal wire (E04) and the wire of the hand pulse plate (E05).

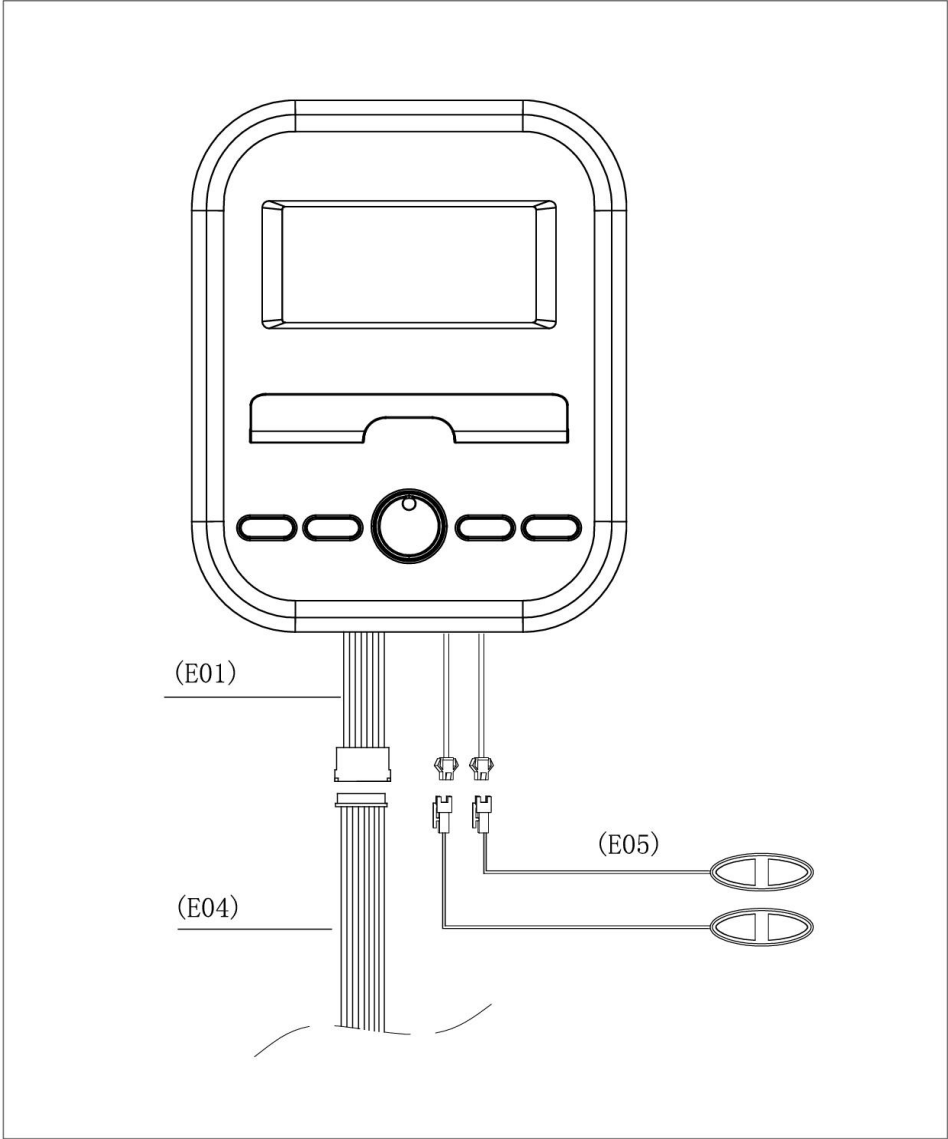


### Step 8: Mounting the console

1. Fasten the console (E01) to the console tube frame (A06) with four bolts (C23).

*Use the cross wrench (B15) for this.*

2. Tighten all screws on the machine.

→ *The appliance is now fully assembled.*

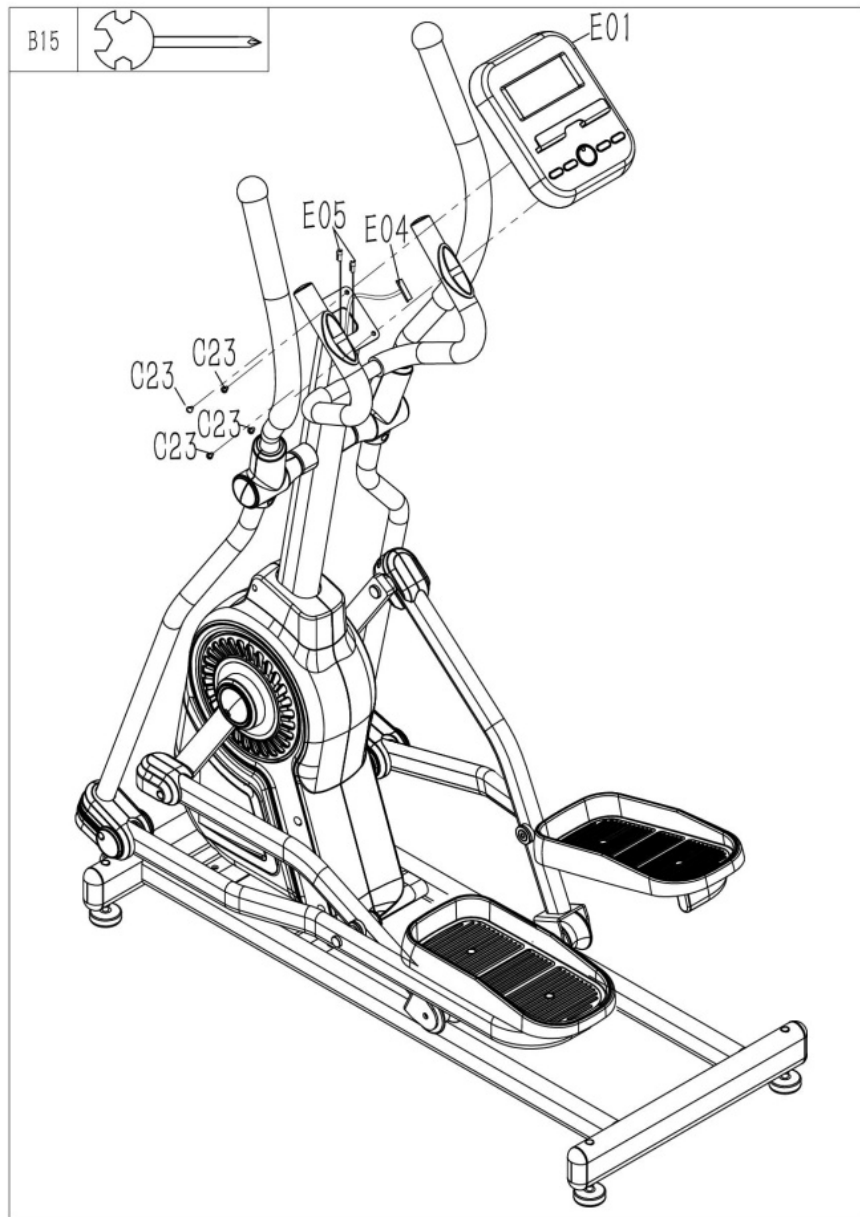

### **Step 9: Alignment of the feet**

If the floor is uneven, you can stabilize the equipment by turning the two setting screws under the main frame.

1. Lift the equipment on the desired side and rotate the setting screws under the main frame.
2. Rotate the screws clockwise in order to remove them and to raise the equipment.
3. Rotate them counterclockwise in order to lower the equipment.

### **Step 10: Connecting the equipment to the mains supply**

► **ATTENTION**

The equipment must not be connected to a multiple socket, otherwise it cannot be guaranteed that the equipment will be supplied with sufficient power. Technical errors can result.

Plug the power plug into a wall outlet that complies with the instructions in the chapter on electrical safety.

### **Correctly Getting On and Off**

1. To get on, grip the handles with both hands and first step onto the left pedal with your left foot or onto the right pedal with your right foot and then place your foot onto the other pedal.
2. To get off, grip the handles with both hands and place one foot next to the equipment and then the other foot.



## 3 OPERATING INSTRUCTIONS

### ① NOTICE

- + Familiarise yourself with all the functions and setting options of the device before starting training. Have the proper use of this product explained to you by a specialist.
- + Always start your training with low intensity and increase evenly and gently. End your training with a cool-down phase. If you are unsure, please consult your physician.

### 3.1 Console Display



<b>Taste</b>	<b>Funktion</b>
<b>RECOVERY</b>	To access the recovery function, press this button. This function can be used when a heart rate is recorded.
<b>RESET</b>	To reset the current values, press and hold the button for 3 seconds.
<b>MODE/ENTER</b>	To confirm set parameters or programmes, press this button.
<b>DOWN</b>	To decrease the selected parameter, turn anti-clockwise.
<b>UP</b>	To increase the selected parameter, turn clockwise.
<b>START/STOP</b>	To start or pause training, press this button.
<b>BODY FAT</b>	To start the bodyfat-test, press this button.

### 3.2 Display Overview

<b>Displayanzeige</b>	<b>Funktion</b>
<b>TIME</b>	Displays the training time in minutes.
<b>DISTANCE</b>	Shows the training distance in kilometres.
<b>CALORIES</b>	Displays the calories burnt.
<b>SPEED</b>	Displays the speed in km/h.
<b>PULSE</b>	Displays the heart rate.
<b>PROGRAM</b>	Displays the current programme.
<b>LEVEL</b>	Displays the resistance level.

### 3.2.1 User-defined Programme


This device has a user-defined programme in which you can set your own parameters.

1. Select "P1" by pressing the rotary knob.

*The "TIME" parameter for the training time is displayed.*

2. Set the selected parameter using the rotary knob.
3. Confirm the value of the parameter by pressing the rotary knob.
4. Carry out "Step 2" and "Step 3" for the other parameters.
5. To start training with the set parameters, press the "START/STOP" button.

When the value of the parameter has been reached, training is ended.

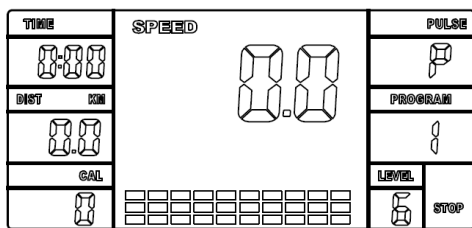

### 3.2.2 Preset Programmes


This device has six preset programmes with different parameters.


1. Select a programme between "P2-P7" by pressing the rotary knob.

*The "Time" parameter for the training time is displayed.*

2. Set the parameter using the rotary knob.
3. Confirm the value by pressing the rotary knob.
4. Carry out "Step 2" and "Step 3" for the other parameters.
5. To start training with the set parameters, press the "START/STOP" button.

→ *When the set time value reaches "0", the programme is ended.*

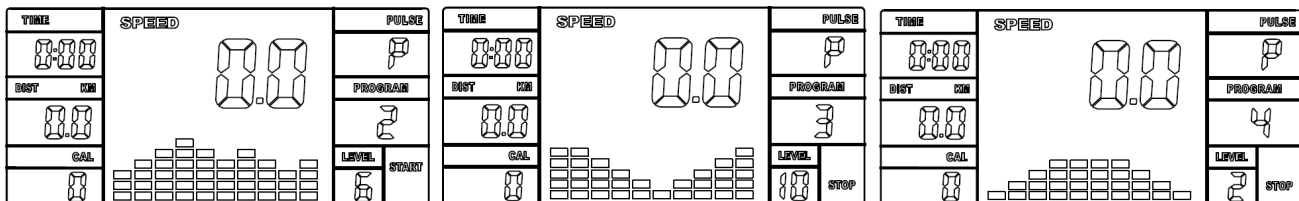

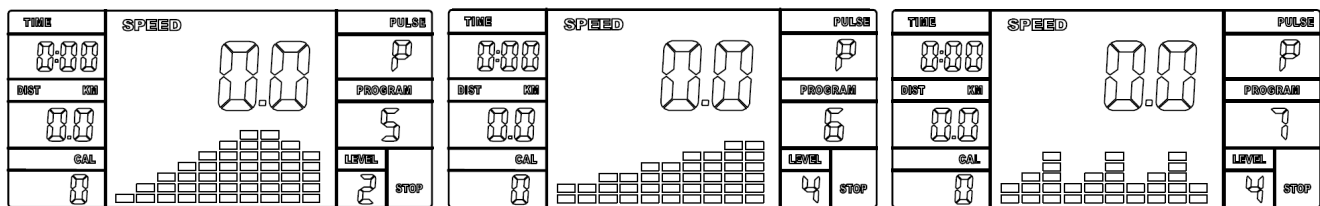

### 3.2.3 Heart rate controlled programme

#### ⚠ WARNING

Your training equipment is not a medical device. The heart rate measurement of this equipment may be inaccurate. Various factors can affect the accuracy of the heart rate measurement. The heart rate measurement serves only as a training aid.

This device has three heart rate-controlled programmes.

- + P8: 55% of the heart rate (220-age)
- + P9: 75% of heart rate (220-age)
- + P10: 90% of the heart rate (220-age)

Setting the parameters for this programme:


1. Select a programme between “P8-P10” by pressing the rotary knob.

*The “Time” parameter for the training time is displayed.*

2. Set the parameter using the rotary knob.
3. Confirm the value by pressing the rotary knob.
4. Carry out “Step 2” and “Step 3” for the other parameters.
5. To start training with the set parameters, press the “START/STOP” button.

*If the heart rate deviates from the target value by  $\pm 5$ , the resistance is automatically adjusted.*

→ *When the set parameter reaches “0”, the programme is ended.*

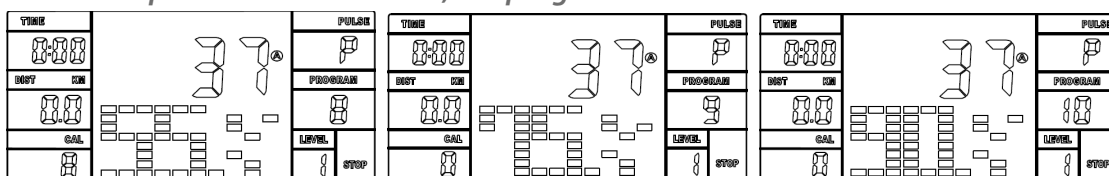

### 3.2.4 Target Heart rate programme

This device has a target heart rate-controlled programme.

1. Select “P11” by pressing the rotary knob.

*The “Gender” parameter for the training time is displayed.*

2. Set the selected parameter using the rotary knob.
3. Confirm the value of the parameter by pressing the rotary knob.
4. Carry out “Step 2” and “Step 3” for the other parameters.

5. To start training with the set parameters, press the "START/STOP" button.

*If the heart rate deviates from the target value by  $\pm 5$ , the resistance is automatically adjusted.*

→ *When the value of the parameter has been reached, the training is ended.*

### 3.2.5 Body Fat Test

This device has a body fat test that gives you an estimate of your fat percentage.


**NOTE**

Please note that these are average values and do not replace a medical examination.

1. Press the "Body Fat"-button for the body fat test (P12).
2. Select the "P12" programme by pressing the rotary knob.

*The "Gender" parameter is displayed.*

3. Set the parameter using the rotary knob.
4. Confirm the value by pressing the rotary knob.
5. Carry out "Step 2" and "Step 3" for the other parameters.

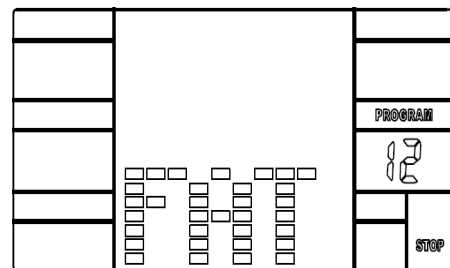

**NOTE**

Make sure that you touch the hand pulse sensors during the test.

Bodytype/ Gender & Age	Thin (Body 1)	Normal (Body 2)	Slight Overweight (Body 3)	Overweight (Body 4)	Obese (Body 5)
Male <30	<14 %	14%-20%	20%-25%	25%-35%	>35%
Male >30	<17 %	17%-23%	23%-28%	28%-38%	>38%
Female <30	<17 %	17%-24%	24%-30%	30%-40%	>40%
Female >30	<20%	20%-27%	27%-33%	33%-43%	>43%

### 3.3 Power Supply

The device can be connected to the mains or used on battery power.

**NOTICE**

- + The machine has a self generating power supply. If the console does not display the functions correctly, use the mains supply.
- + Remove the power supply, when not in use.
- + To lengthen the battery life, charge the machine once a week.

### 3.4 Wireless Connection and Fitness Apps

This console is equipped with a wireless connection interface. Please take note that your mobile device needs to be compatible with the wireless connection interface of the treadmill.




To use training apps you will have to activate the wireless connection function on your mobile device (tablet or smart phone) and start the fitness app. Select your fitness equipment. Please follow the instructions given in the app. You will find the name of your fitness equipment on a small sticker on the back of the console.

You will find the fitness apps in the app stores of Google or Apple. There you will find the apps "Kinomap" or "Zwift". Please note that these apps are produced by an external manufacturer. Fitshop does not take any responsibility regarding the availability, functionality or contents of these programmes.

#### IMPORTANT NOTE

The pre-installed apps are produced and provided by external manufacturers. Changes and availability within these apps might occur. Fitshop does not take any responsibility and can not be held liable for the availability, functionality or contents of these apps. To make sure the pre-installed apps are working correctly, they must be updated regularly. If needed, the respective app will notify you to do so. To update the app, you need a google account. A google email is sufficient. Just follow the instructions on the screen to perform the update.

Please note: The system is set up only for the pre-installed apps. Do not install any additional apps as their proper functionality can not be guaranteed. The installation of other apps might cause technical issues.

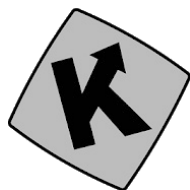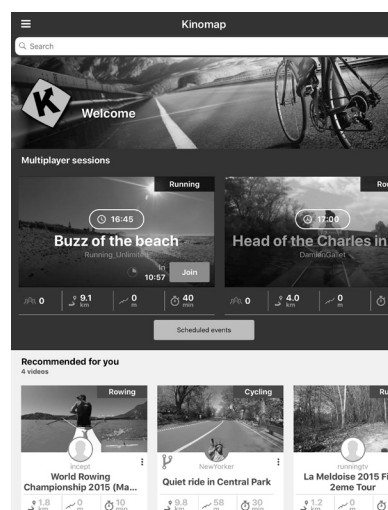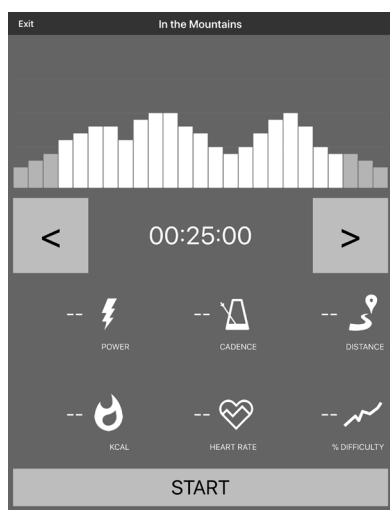

Example: Kinomap

### 4.1 General Instructions



#### **WARNING**

- + The storage location should be chosen so that improper use by third parties or children can be prevented.
- + If your equipment does not have transportation wheels, the equipment must be disassembled before transportation.



#### **ATTENTION**

- + Make sure that the equipment is protected from moisture, dust and dirt in the selected storage location. The storage location should be dry and well ventilated and have a constant ambient temperature between 10°C and 35°C.

### 4.2 Transportation Wheels



#### **ATTENTION**

If you want to transport your equipment over particularly sensitive and soft floor coverings, such as parquet, planks or laminate, lay out the transport route with cardboard or similar to avoid possible floor damage.

1. Stand behind the equipment and lift it until the weight is transferred to the transportation wheels. After that, you easily can move the equipment to a new position. For long transport distances the equipment should be disassembled and safely packed.
2. Select the new location by following the instructions in the section 1.4 of this manual.

## 5.1 General Instructions

### **WARNING**

- + Do not make any improper changes to the equipment.

### **CAUTION**

- + Damaged or worn components may affect your safety and the life of the equipment. Therefore, immediately replace damaged or worn components. In such a case, contact the contract partner. The equipment must not be used until it has been repaired. If necessary, use only original spare parts.

### **ATTENTION**

- + In addition to the instructions and recommendations for maintenance and care given here, additional service and/or repair work may be necessary; this must only be carried out by authorised service technicians.

## 5.2 Faults and Fault Diagnosis

The equipment undergoes regular quality controls during production. Nevertheless, faults or malfunctions may occur. Frequently, individual parts are responsible for these disturbances, an exchange is usually sufficient. Please refer to the following overview for the most common errors and how to correct them. If the equipment still does not function properly, contact your contract partner.

<b>Fault</b>	<b>Cause</b>	<b>Solution</b>
Drive disks wobble/ make noises	Drive disk loose	Tighten nut (pay attention to left-hand / right-hand thread)
Display is blank/is not working	Loose cable connections	Check cable connections
Equipment wobbles	Equipment is not level	Align the feet
Creaking noises on the stepping area	Loose screws on stepping area	Tighten the screws on the stepping area
Creaking noises	Screw connections loosened or too tight	Check screw connections
Squeaking noises on the guide rails	Guide rails or rollers dirty or guide rails dry	Clean the guide rails and then lubricate them with a suitable lubricant



No pulse display	<ul style="list-style-type: none"> <li>+ Sources of interference in the room</li> <li>+ unsuitable chest strap</li> <li>+ Wrong position of chest strap</li> <li>+ Chest strap defective or battery empty</li> <li>+ Pulse display defective</li> </ul>	<ul style="list-style-type: none"> <li>+ Eliminate sources of interference (e.g. mobile phone, WLAN, lawn mower and vacuum cleaner robot, etc. ...)</li> <li>+ Use a suitable chest strap (see RECOMMENDED ACCESSORIES).</li> <li>+ Reposition chest strap and/or moisten electrodes</li> <li>+ Changing batteries</li> <li>+ Check if pulse display by hand pulse possible</li> </ul>
------------------	---	--

### 5.3 Error Codes and Troubleshooting

The electronics of the equipment continuously carries out tests. In case of deviations, an error code appears on the display and normal operation is stopped for your safety.

**Please contact the contract partner for technical support.**

## 5.4 Maintenance and Inspection Calendar


To avoid damage from sweat, the equipment must be cleaned with a damp towel (no solvents!) after each training session.

The following routine tasks must be performed at the specified intervals:

Part	Weekly	Monthly	Quarterly
Display console	C	I	
Slide rails*		C	
Lubrication of slide rails and moving parts*			I
Plastic covers	C	I	
Screws and cable connections		I	
Legend: C = clean; I = inspect			

\*Make sure to always clean the slide rails and moving parts before re-lubricating.

By scanning the QR-code with the camera function or QR-code scanner app of your smartphone/tablet, a video on general maintenance of a crosstrainer opens on YouTube. The video serves to illustrate the maintenance points described in this manual.

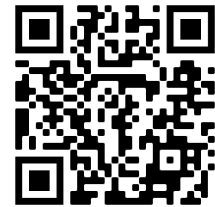


Please note that the video may not be available in your language or with appropriate subtitles.

If you cannot scan QR-codes, you can access all Fitshop videos on YouTube by first opening YouTube and entering "Fitshop" in the search field.

## 6 DISPOSAL

At the end of its operational life, this equipment cannot be disposed of in normal household waste. Instead, it must be disposed of via an electricals recycling centre. Further information can be obtained from your local authority's recycling service.

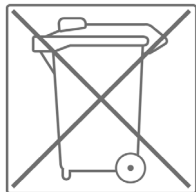

The materials can be recycled as per their symbols. Through the reuse, recycling of materials or other forms of recovery of old equipment, you make an important contribution to the protection of the environment.

## 7 RECOMMENDED ACCESSORIES

To make your training experience even more efficient and pleasant, we recommend that you add suiting accessories to your fitness equipment. For elliptical cross trainers this could for example be a **floor mat**, which makes your fitness equipment stand more securely and also protects the floor from sweat or **silicone spray** to keep moving parts in good shape.

If you have purchased a fitness machine with pulse training and want to train your heart rate, we strongly recommend that you use a compatible **chest strap**, as this ensures optimum transmission of the heart rate.

Our range of accessories offers the highest quality and makes training even better. If you would like to find out more about compatible accessories, please go to the detail page of the product in our webshop (the easiest way is to enter the article number in the search field above) and go to the recommended accessories on this page. Of course, you can also contact our customer service: by telephone, e-mail, in one of our branches or via our social media channels. We will be happy to advise you!



chest strap



floor mat




lubricant

## 8.1 Serial Number and Model Name

In order to provide you with the best possible service, please have the model name, article number, serial number, exploded drawing and parts list ready. The corresponding contact options can be found in chapter 10 of this operating manual.

**NOTICE**

The serial number of your equipment is unique. It's located on a white sticker. The exact position of this sticker is shown in the following illustration.

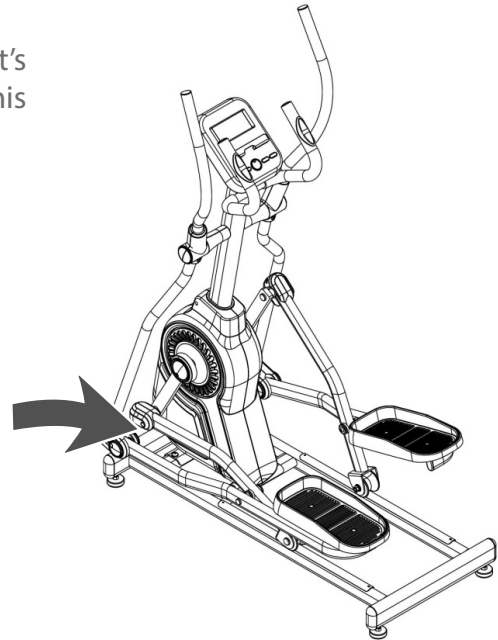

Enter the serial number in the appropriate field.

**Serial number:**

**Brand / Category:**

cardiostrong / Elliptical cross trainer

**Model Name:**

FX30

**SKU:**

CST-FX30-3

## 8.2 Parts List

No.	Name	Specification	Qty.
A01	Base frame		1
A02	Main frame		1
A03	Left rocking handrail frame		1
A04	"Right rocking handrail frame"		1
A05	Pedal connecting frame		2
A06	Console tube frame		1
A07	Left pedal frame		1
A08	Right pedal frame		1
A09	Belt wheel assembly		1
A10	Magnet welding frame		1
A11	Left handrail		1
A12	Right handrail		1
A13	Generator mounting plate		1
B01	Crank frame		2
B02	Straight core shaft frame		1
B03	Flywheel sleeve		1
B04	Small hinge axis		2
B05	Magnet		10
B06	Flywheel		1
B07	"Powder metallurgy shaft sleeve 1"		12
B08	"Powder metallurgy shaft sleeve 2"		4
B09	Flat button		3
B10	Centripetal bearing		4
B11	Centripetal bearing		2
B12	Wheel spacer bush		4
B13	Aluminium sheet		2
B14	6# ALLEN WRENCH	6mm	2
B15	Cross wrench	S=13 14 15	1
B16	Spring		1


C01	Bolt	M6*60	1
C02	Bolt	M10*20	4
C03	Bolt	M8*45	2
C04	Bolt	M8*15	25
C05	Nuts	M8*H7	10
C06	Big Flat washer	Φ8*Φ24*2.0	16
C07	Big Flat washer	Φ8*Φ32*2.0	2
C08	Curved washer	φ8.5	4
C09	External circlip	12	1
C10	External circlip	25	4
C11	External circlip	8	1
C12	Bolt	M8*40	4
C13	Bolt	M4*15	2
C14	Nut	M6*12	2
C15	Bolt	M10*55	2
C16	Nut	M10	2
C17	Bolt	M8*20	4
C18	Nut	M6	4
C19	Bolt	M6*16	4
C20	Screw	ST4.2*16	15
C21	Screw	ST4.2*12	7
C22	Screw	ST4.2*19	2
C23	Bolt	M5*8	10
C24	Flat washer	Φ10*Φ20*2	4
C25	Nut	M10	4
C26	Nut	M8	1
C27	Bolt	M8*20	1
C28	Wave washer		6
C29	Spring washer	8	18
C30	Spring washer	10	4
C31	Flat washer	8	4
C32	Bolt	M4*7	3
D01	Left protection cover		1
D02	Left top protection cover		1

D03	Right protection cover		1
D04	Right top protection cover		1
D05	Left rocking handrail cover		2
D06	Right rocking handrail cover		2
D07	Left pedal tube cover		2
D08	Right pedal tube cover		2
D09	"Front rocking handrail cover"		2
D10	Rear rocking handrail cover		2
D11	Turntable		2
D12	Crank cover		2
D13	Rubber ring		1
D14	Pedal		2
D15	Plastic Wheel		1
D16	End cap		4
D17	Belt pallet		1
D18	Belt		1
D19	Roller		2
D20	Motor wire		1
D21	Foam grip		2
D22	Foam grip		2
D23	End cap		2
D24	25 end cap		2
D25	Foot pad		4
D26	Moving wheel		2
D27	End cap		2
D28	End cap		4
D29	Eva pad		2
D30	Plastic spacer		2
D31	Generator belt		1
E01	Console		1
E02	Motor		1
E03	Speed sensor		1
E04	Upper signal wire		1

E05	Hand pulse plate		2
E06	Power adapter		1
E07	Power line		1
E08	Middle signal wire		1
E09	Self-generating main board		1
E10	Storage battery		1
E11	Type-C power wire		1
E12	Oil bottle		1



# 8.3 Exploded Drawing

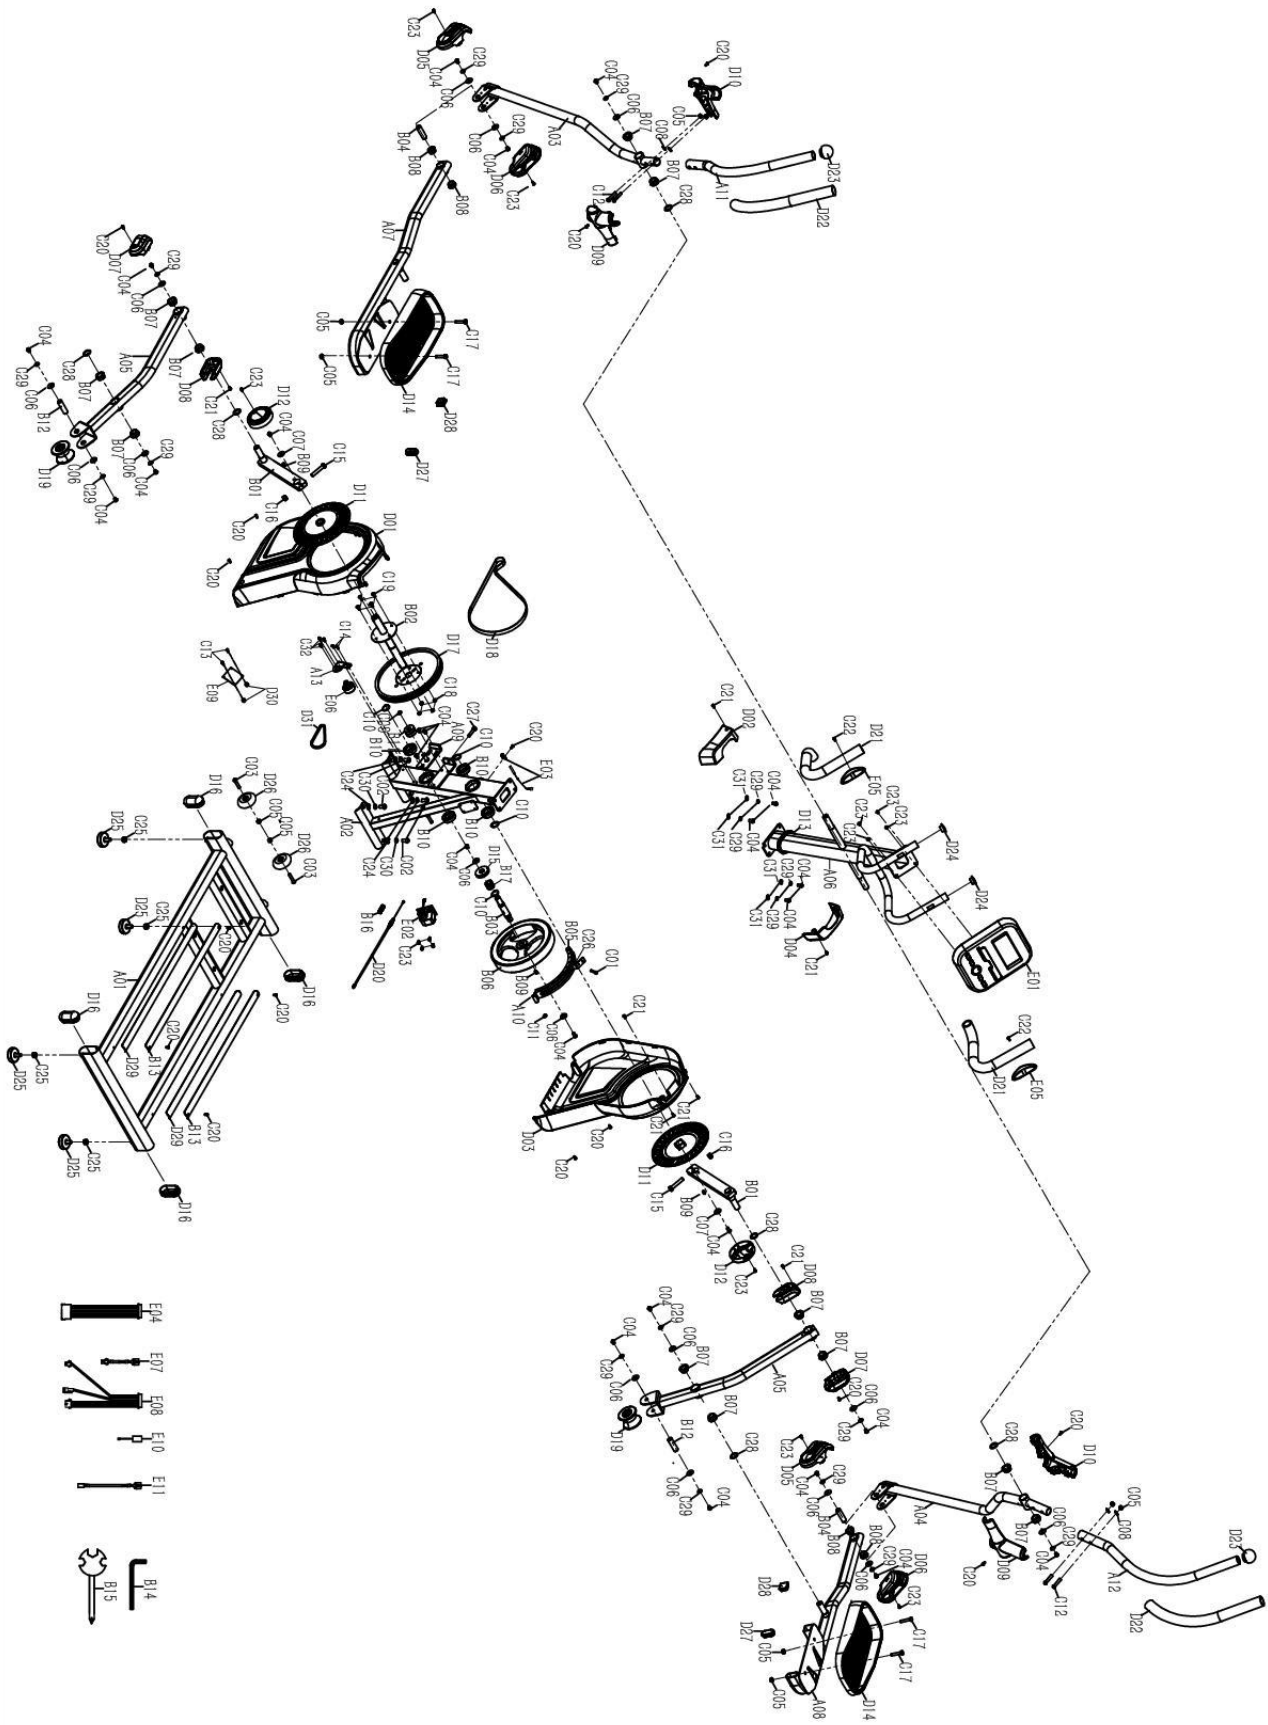

Products from cardiostrong® is subject to strict quality control. However, if a fitness equipment purchased from us does not work perfectly, we take it very seriously and ask you to contact our customer service as indicated. We are happy to help you by phone via our service hotline.

### **Error Descriptions**

Your fitness equipment is developed for long-term, high-quality training. However, should a problem arise, please first read the operating instructions. For further assistance, please contact your contract partner or call our service hotline. To ensure your problem is solved as quickly as possible, please describe the defect as exactly as possible.

In addition to the statutory warranty, we provide a warranty for every fitness equipment purchased from us according to the following provisions.

**Your statutory rights are not affected.**

### **Warrantee**

The warrantee is the first/original buyer.

### **Warranty periods**

The following warranty periods begin on delivery of the fitness equipment.

#### **Warranty period**

The warranty periods, shown on our web shop, begin on delivery of the fitness equipment. The respective warranty periods for your equipment can be found on its product website.

### **Repair Costs**

According to our choice, there will either be a repair, a replacement of individual damaged parts or a complete replacement. Spare parts, that have to be mounted while assembling the equipment, have to be replaced by the warrantee personally and are not a part of repair. After the expiration of the warranty period, the responsibility for parts costs, repair costs, installation costs and delivery costs lies with the warranty holder.

### **The terms of use are defined as follows:**

- + Home use: solely for private use in private households up to 3 hours per day
- + Semi-professional use: up to 6 hours per day (e. g. rehabilitation centres, hotels, clubs, company gyms)
- + Professional use: more than 6 hours per day (e. g. commercial gyms)

## **Warranty Service**

Within the warranty period, equipment which develops faults as a result of material or manufacturing defects, will be repaired or replaced at our discretion. Ownership of equipment or parts of equipment which have been replaced is transferred to us. The warranty period is not extended nor does a new warranty period begin following repair or replacement under the warranty.

## **Warranty Conditions**

For the warranty to be valid, the following steps must be taken:

Please contact our customer service by email or phone. If the product under warranty has to be sent in for repair, the seller bears costs. After expiry of the warranty, the buyer bears the costs of transport and insurance. If the fault is covered by our warranty, you will receive a new or repaired equipment in return.

## **Warranty claims are invalid in case of damage resulting from:**

- + misuse or improper handling
- + environmental influences (moisture, heat, electrical surge, dust, etc.)
- + failure to follow the current safety measures for the equipment
- + failure to follow the operating instructions
- + use of force (e. g. hitting, kicking, falling)
- + interventions which were not carried out by one of our authorized service centres
- + unauthorised repair attempts

## **Proof of Purchase and Serial Number**

Please make sure that you are able to provide the appropriate receipt when claiming on your warranty. So that we can clearly identify the model of your equipment, and for the purposes of our quality control, you will need to give the serial number of your equipment, when contacting the service team. Where possible please have your serial number and your customer number ready when you call our service hotline. It will help us to deal with your request swiftly.

If you cannot find the serial number on your fitness equipment, our service team is at your disposal to offer further information.

## **Service outside of the Warranty Period**

We are also happy to issue an individual cost estimate if there is a problem with your fitness equipment after the warranty has expired, or in cases which do not fall under the terms of the warranty, e. g. normal wear and tear. Please contact our customer service team to find a quick and cost-effective solution to your problem. In such a case you will be responsible for the delivery costs.

## **Communication**

Many problems can be solved just by speaking to us as your specialist supplier. We know how important it is to you as a user of the fitness equipment to have problems solved quickly and simply, so you can enjoy working out with minimal interruption. For that reason, we also want to resolve your queries quickly and in a straightforward manner. Thus, please always keep your customer number and the serial number of the faulty equipment handy.

## 10 CONTACT

DE	DK	UK
<p><b>TECHNIK</b></p> <p>☎ +49 4621 4210-900 ☎ +49 4621 4210-698 ✉ technik@fitshop.de 🕒 Öffnungszeiten entnehmen Sie unserer Homepage.</p> <p><b>SERVICE</b></p> <p>☎ 0800 20 20277 (kostenlos) ☎ 04621 4210 - 0 ✉ info@fitshop.de 🕒 Öffnungszeiten entnehmen Sie unserer Homepage: <a href="https://stg.fit/statita">https://stg.fit/statita</a></p>	<p><b>TEKNIK OG SERVICE</b></p> <p>☎ 80 90 16 50 +49 4621 4210-945 ✉ info@fitshop.dk 🕒 Åbningstider kan findes på hjemmesiden: <a href="https://stg.fit/statit7">https://stg.fit/statit7</a></p>	<p><b>CUSTOMER CARE</b></p> <p>☎ +44 141 737 2249 or +44 141 876 3972 ✉ customercare@fitshop.co.uk 🕒 You can find the opening hours on our homepage: <a href="https://stg.fit/statitd">https://stg.fit/statitd</a></p>
	FR	BE
	<p><b>TECHNIQUE &amp; SERVICE</b></p> <p>☎ +33 (0) 189 530984 +49 4621 42 10 933 ✉ info@fitshop.fr 🕒 Vous trouverez les heures d'ouverture sur notre site Internet: <a href="https://stg.fit/statit4">https://stg.fit/statit4</a></p>	<p><b>TECHNIQUE &amp; SERVICE</b></p> <p>☎ 02 732 46 77 +49 4621 4210 933 ✉ info@fitshop.be 🕒 Vous trouverez les heures d'ouverture sur notre site Internet: <a href="https://stg.fit/statit8">https://stg.fit/statit8</a></p>
ES	NL	INT
<p><b>TECNOLOGÍA Y SERVICIOS</b></p> <p>☎ 911 238 029 ✉ info@fitshop.es 🕒 Consulta nuestro horario de apertura en la página web: <a href="https://stg.fit/statit5">https://stg.fit/statit5</a></p>	<p><b>TECHNISCHE DIENST &amp; SERVICE</b></p> <p>☎ +31 172 619961 ✉ service@fitshop.nl 🕒 De openingstijden vindt u op onze homepage: <a href="https://stg.fit/statit3">https://stg.fit/statit3</a></p>	<p><b>TECHNICAL SUPPORT &amp; SERVICE</b></p> <p>☎ +49 4621 4210-944 ✉ service-int@fitshop.de 🕒 You can find the opening hours on our homepage: <a href="https://stg.fit/statita">https://stg.fit/statita</a></p>
PL	AT	CH
<p><b>DZIAŁ TECHNICZNY I SERWIS</b></p> <p>☎ 22 307 43 21 +49 4621 42 10-948 ✉ info@fitshop.pl 🕒 Godziny otwarcia można znaleźć na stronie głównej: <a href="https://stg.fit/statit6">https://stg.fit/statit6</a></p>	<p><b>TECHNIK &amp; SERVICE</b></p> <p>☎ 0800 20 20277 (Freecall) +49 4621 42 10-0 ✉ info@fitshop.at 🕒 Öffnungszeiten entnehmen Sie unserer Homepage: <a href="https://stg.fit/statitb">https://stg.fit/statitb</a></p>	<p><b>TECHNIK &amp; SERVICE</b></p> <p>☎ 0800 202 027 +49 4621 42 10-0 ✉ info@fitshop.ch 🕒 Öffnungszeiten entnehmen Sie unserer Homepage: <a href="https://stg.fit/statit9">https://stg.fit/statit9</a></p>

Please find a detailed overview including address and opening hours for all stores of Fitshop UK on the following website:

[www.fitshop.co.uk/storelocator](http://www.fitshop.co.uk/storelocator)

# WE LIVE FITNESS

## WEBSHOP AND SOCIAL MEDIA

The Fitshop Group is Europe's largest specialist for home fitness equipment with currently 70 stores and one of the world's most renowned online mail order companies for fitness equipment.

Fitshop UK is part of the Fitshop Group. Private customers order via the 25 web shops in the respective national language or have their desired equipment assembled on site. In addition, the company supplies fitness studios, hotels, sports clubs, companies and physio practices with professional equipment for endurance and strength training.

The Fitshop group offers a wide range of fitness equipment from renowned manufacturers, high-quality in-house developments and comprehensive services, such as a build-up service and sports scientific advice before and after the purchase. The company employs numerous sports scientists, fitness trainers and competitive athletes.

Visit us also on our social media platforms or our blog!

**FIT  
SHOP**

<https://www.fitshop.co.uk>  
[www.fitshop.co.uk/blog](http://www.fitshop.co.uk/blog)



[www.facebook.com/fitshop.co.uk](http://www.facebook.com/fitshop.co.uk)



[www.instagram.com/fitshop\\_uk](http://www.instagram.com/fitshop_uk)



[www.youtube.com/@fitshop\\_uk](http://www.youtube.com/@fitshop_uk)


**TAURUS**

 cardiostrong

*BODYCRAFT*

**BodyMax**

Notes

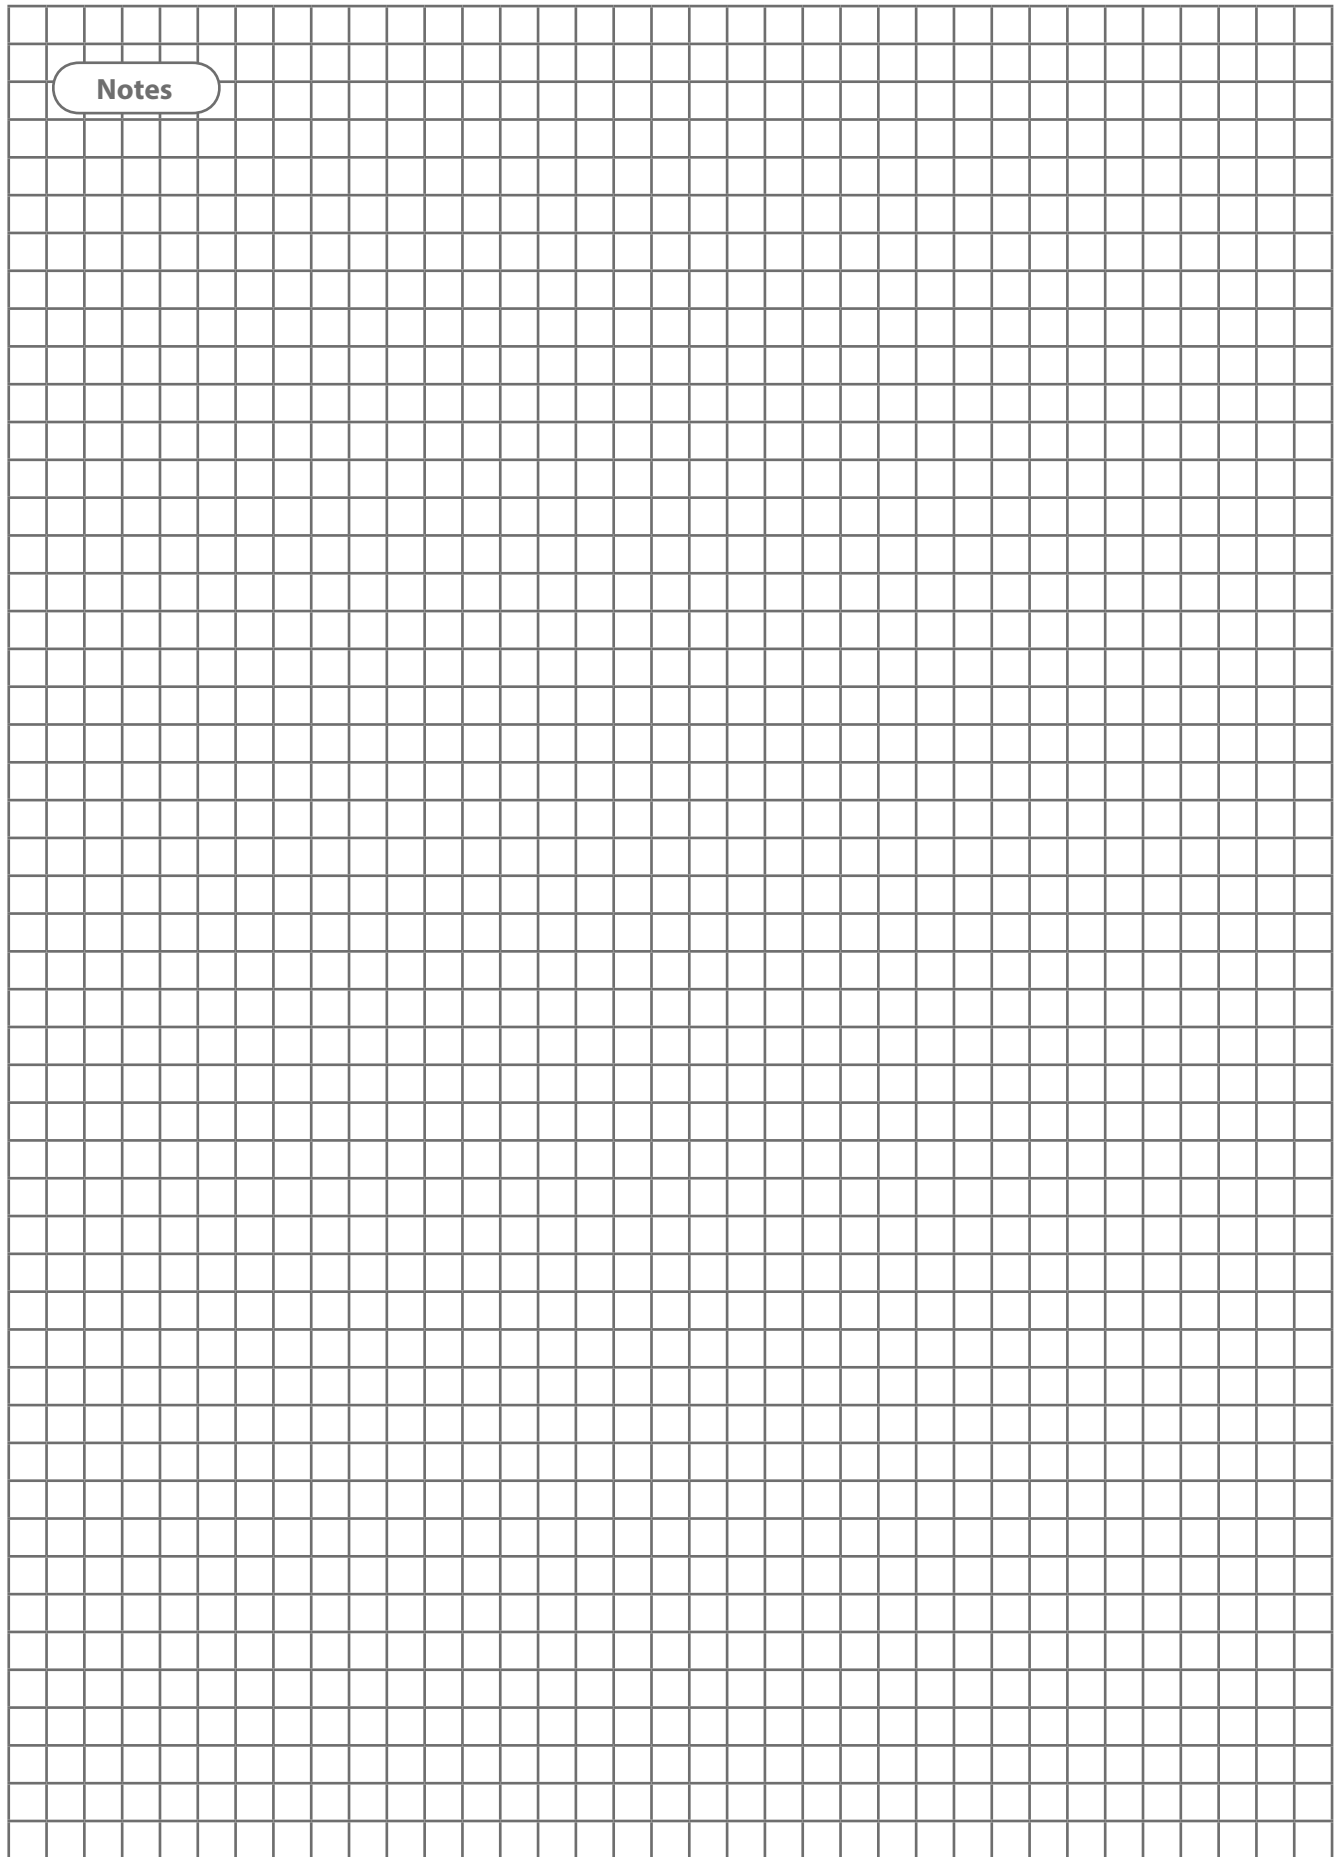





**Elliptical Cross Trainer FX30**