

Owner's Manual



ELITE ISO INCLINE CHEST PRESS MACHINE

SESS7005

! CAUTION

Read all precautions and instructions in this manual before using this equipment.

Table Of Contents

Important Safety Instructions	3
Instructions	- 5
Parts List	- 6
Exploded ViewExploded View	- 7
Measurement Guide	8
Assembly Instructions	- 9
Assembly	10
Adjust Instructions	-17
Exercise Instructions	-18
Maintenance Schedule	19
General Maintenance Information	20
Weight Training Tips	21



Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

- 1. Read all instructions before using the equipment.

 These instructions are written to ensure your safety and to protect the unit.
- 2. Use the equipment only for its intended purpose as described in this guide.

 Do not use accessory attachments that are not recommended by the
 manufacturer: such attachments might cause injuries.
- 3. The product should only be used on a level surface and is with 0.5 meters space around the product.

 Do not use the equipment outdoors.
- 4. Do not allow children on or near the equipment. And children are not allowed to use this equipment.

 Teenagers should use this equipment with adult supervision.
- 5. Do not overexert yourself or work to exhaustion.
 Do not attempt to lift more weight than you can control safely.
 If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- 6. This equipment is not used as medical apparatus and instruments.
- 7. Never operate the unit when it has been dropped or damaged.

 Never drop or insert anything into any opening in the equipment.

 Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.

 Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear.

 Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
- 8. Be careful when getting on or off the equipment.
- 9. Wear proper exercise clothing and shoes for your workout, no loose clothing.


Important Safety Instructions

Personal Safety During Assembly

Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.

Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

Training Area and Free Area

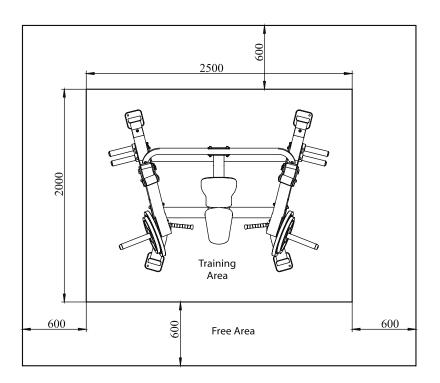

Specifications

Class: S


Maximum Wt. Capacity: 2*150kg/330lbs Maximum User Weight: 150kg/330lbs Product Total Surface: 2070*1520mm Product Total Mass: 183.5kg/405lbs

Instructions

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

Tools Required



Ratchet Wrench and Socket



Adjustable Wrench



Rubber Mallet



Hex Key Wrench Set



Phillips Screwdriver


Parts List

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED.

ItemNo.	Description	Qty	ItemNo.	Description	Qty	
1	Left Bottom Frame	1	38	Aluminium Cap ⊕25	2	
2	Right Bottom Frame	1	39	Aluminium Ring Ф25	2	
3	Back Pad Frame	1	40	End Plug	4	
4	Left Arm Frame	1	41	Rubber Grip	1	
5	Right Arm Frame	1	42	Rubber Foot	4	
6	Left Upright Frame	1	43	Oilite Bushing	2	
7	Right Upright Frame	1	44	Ball Bearing		
8	Front Cross Frame	1	45	External Retaining Ring Ф17		
9	Top Cross Frame	1	46	External Retaining Ring Φ 12		
10	Rear Cross Frame	1	47	Deep Groove Ball Bearing		
11	Outer Pivot Plate 1	1	48	Socket Head Cap Screw M12*155		
12	Inner Pivot Plate 1	1	49	Socket Head Cap Screw M12*145	3	
13	Inner Pivot Plate 2	1	50	Socket Head Cap Screw M12*135	8	
14	Outer Pivot Plate 2	1	51	Socket Head Cap Screw M12*125		
15	Weight Horn Assembly	2	52	Socket Head Cap Screw M12*85		
16	Weight Plate Storage	4	53	Socket Head Cap Screw M12*35		
17	Front Plastic Plate	1	54	Socket Head Cap Screw M10*145		
18	Rear Plastic Plate	1	55	Button Head Cap Screw M10*75		
19	Pivot Shaft Φ30	2	56	Button Head Cap Screw M10*30		
20	Rubber Bumper	2	57	Button Head Cap Screw M8*70		
21	Domed Aluminium Cap	6	58	Flat Head Cap Screw M10*25		
22	Long Weight Horn Sleeve	2	59	Flat Head Cap Screw M12*30		
23	Weight Horn Sleeve	4	60	Flat Head Cap Screw M12*50		
24	Weight Horn Plastic Cap	2	61	Nylon Lock Nut M12		
25	Aluminium Grip	2	62	Nylon Lock Nut M10	1	
26	Pull Spring	1	63	Nylon Lock Nut M8	2	
27	Seat Frame	1	64	Flat Washer Φ 11* Φ 20*2	6	
28	Idler Wheel	3	65	Flat Washer Φ 13* Φ 24*1.5	76	
29	Wheel Shaft	3	66	Socket Set Screw M8*6	4	
30	Wring Spring	1	67	Socket Set Screw 10-32*3.2		
31	Shaft For Adjustable Handle	1	68	Hex Key S=10		
32	Adjustable Handle	1	69	Hex Key S=8	1	
33	Back Pad	1	70	Hex Keys=6	1	
34	Seat Pad	1	71	Hex Key S=4	1	
35	Large Rubber Bumper	2	72	Supporting Sleeve	1	
36	Plastic Sleeve	2	74	Baffle Ring	4	
37	Weight Horn Rubber Donut	4				

Exploded View

Measurement Guide

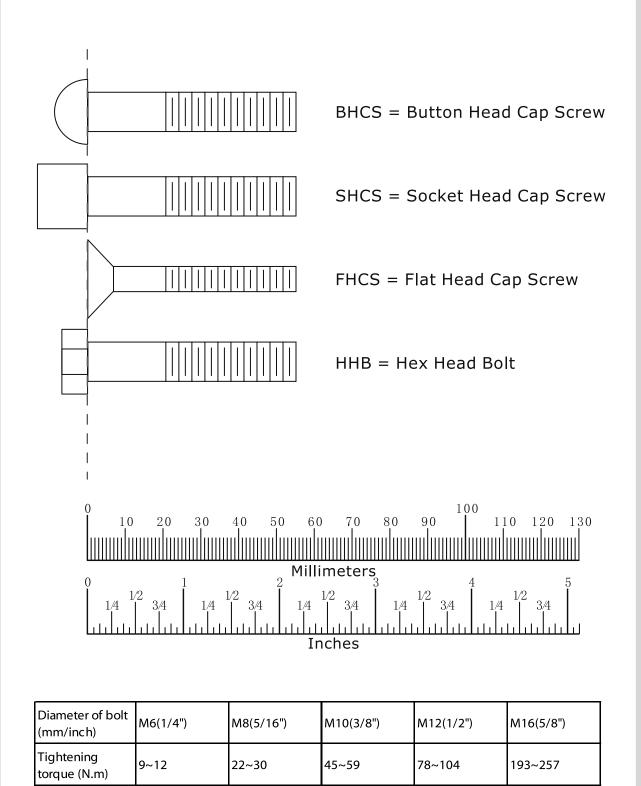

The strength of

the entire arm

The strength of

with all strength

the arm and

upper body

The strength of

the wrist and

forearm

The strength of

the wrist

Operational

methods for

adult men

Assembly Instructions

Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.



As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

Step 1


1. Attach Front Cross Frame (#8) and Rear Cross Frame (#10) to Left Bottom Frame (#1), using:

four M12*135 SHCS (#50) four M12 Nylon lock Nut (#61) eight Φ13*Φ24*1.5 Flat Washer (#65)

2. Attach Front Cross Frame (#8) and Rear Cross Frame (#10) to Right Bottom Frame (#2), using:

four M12*135 SHCS (#50) four M12 Nylon lock Nut (#61) eight Φ13*Φ24*1.5 Flat Washer (#65)

NOTE: DO NOT tighten the hardware.

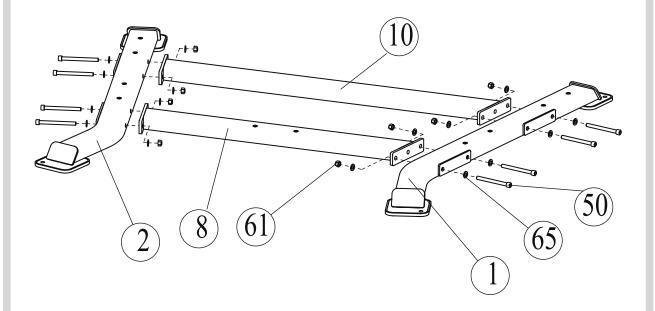

Step 2

1. Attach Left Upright Frame (#6) to Left Bottom Frame (#1), using: four M12*35 SHCS (#53) four Φ13*Φ24*1.5 Flat Washer (#65)

2. Attach Right Upright Frame (#7) to Right Bottom Frame (#2), using: four M12*35 SHCS (#53) four Φ13*Φ24*1.5 Flat Washer (#65)

3. Attach Top Cross Frame (#9) to Left Bottom Frame (#1) and Right Bottom Frame (#2), using:

four M12 Nylon lock Nut (#52)

four M12 Nylon lock Nut (#61)

eight Φ13*Φ24*1.5 Flat Washer (#65)

4. Attach Back Pad Frame (#3) to Front Cross Frame (#8) and Top Cross Frame (#9), using:


two M12*85 SHCS (#52)

two M12*35 SHCS (#53)

two M12 Nylon lock Nut (#61)

six Φ13*Φ24*1.5 Flat Washer (#65)

NOTE: Tighten all the hardware.

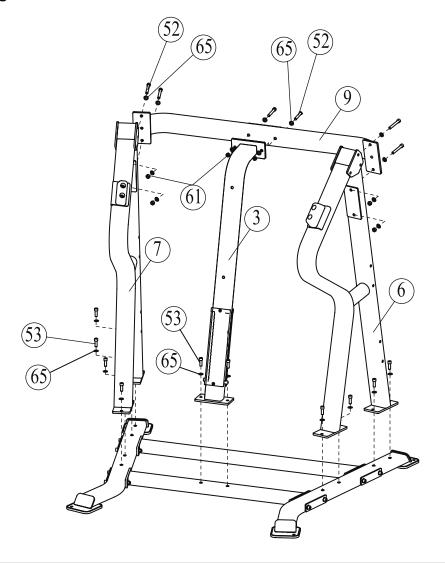

Step 3

1. Attach Outer Pivot Plate 1 (#11) and Inner Pivot Plate 2 (#13) to Left Upright Frame (#6), using:

three M12*155 SHCS (#48) three M12 Nylon lock Nut (#61)

six Φ13*Φ24*1.5 Flat Washer (#65)

2. Attach Outer Pivot Plate 2 (#14) and Inner Pivot Plate 1 (#12) to Right Upright

Frame (#7), using:

three M12*155 SHCS (#48) three M12 Nylon lock Nut (#61)

six Φ13*Φ24*1.5 Flat Washer (#65)

NOTE: DO NOT tighten the hardware.

3. Attach Left Arm Frame (#4) to Outer Pivot Plate 1 (#11) and Inner Pivot Plate 2 (#13), using:

one Pivot Shaft Φ30 (#19) two Domed Aluminum Cap (#21)

two M12*30 FHCS (#59) two Baffle Ring (#74)

4. Attach Right Arm Frame (#5) to Outer Pivot Plate 2 (#14) and Inner Pivot

Plate 1 (#12), using:

one Pivot Shaft Φ30 (#19) two Domed Aluminum Cap (#21)

two M12*30 FHCS (#59) two Baffle Ring (#74)

NOTE: DO NOT tighten the hardware.

5. Attach two Weight Horn Assembly (#15) to Left Arm Frame (#4) and Right


Arm Frame (#5), using:


two Domed Aluminum Cap (#21) two Rubber Bumper (#20)

two M12*50 FHCS (#60) four M8*6 Socket Set Screw (#66)

NTOE: Tighten all the hardware.

Step 3



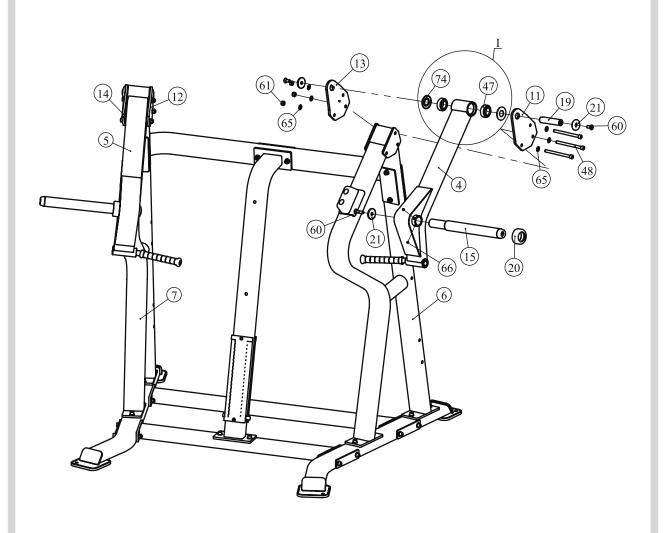

Step 4


1. Attach Seat Frame (#27) and two Idler Wheel (#28) to Back Pad Frame (#3), using:

two M12*145 SHCS (#49) two M12 Nylon lock Nut (#61) four Φ13*Φ24*1.5 Flat Washer (#65)

2. Attach Pull Spring (#26) to Seat Frame (#27) and Back Pad Frame (#3), using: one M10*145 SHCS (#54) one M10 Nylon lock Nut (#62) two Φ11*Φ20*2 Flat Washer (#64)


3. Attach Seat Pad (#33) to Seat Frame (#27), using: two M10*30 BHCS (#56) two Φ11*Φ20*2 Flat Washer (#64)

4.Attach Back Pad (#34) to Back Pad Frame (#3), using:
two M10*75 BHCS (#55)
two Φ11*Φ20*2 Flat Washer (#64)

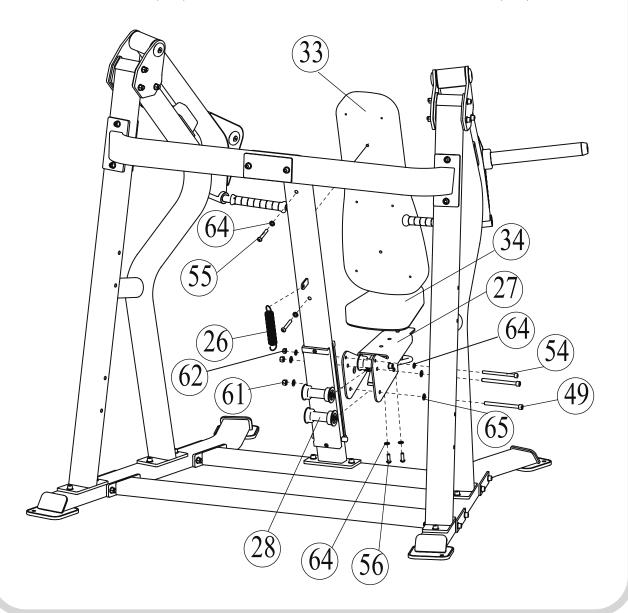

Step 5


- First attach Supporting Sleeve Φ16*2*117 using: one M10*145 Socket Head Cap Screw two Φ11*Φ20*2 Flat Washer one M10 Nylon lock Nut
- 2. Then attach Pull Spring to Supporting Sleeve.

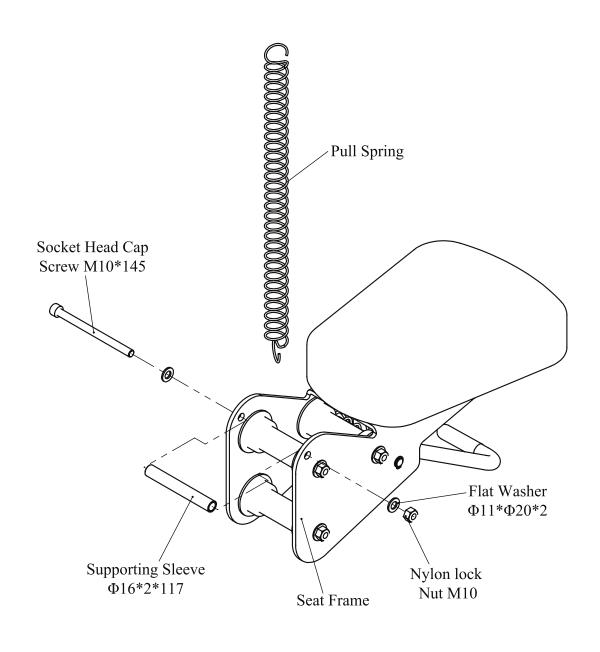

Step 6

Attach four Weight Plate Storage (#16) to Left Upright Frame (#6) and Right Upright Frame (#7), using:


eight M12*125 SHCS (#51) sixth Φ13*Φ24*1.5 Flat Washer (#65) eight M12 Nylon lock Nut (#61)

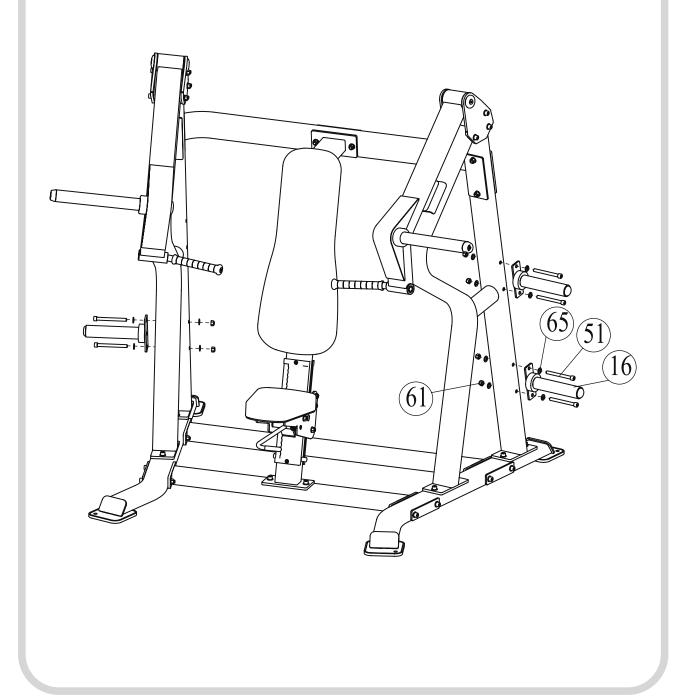

Adjust Instructions


Weight Plate Installation Requirements

- 1. Please use Olympic Weight Plate which hole is greater than Φ 50mm and external diameter is less than Φ 500mm.
- 2. The total weight of one side can not be greater than 150kg.
- 3. This equipment does not contains Weight Plate.

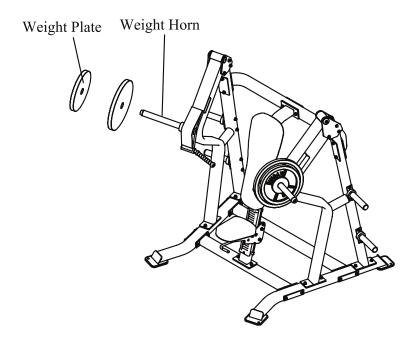



Seat Pad adjustment

Hold the adjustable handle, move the seat pad to desired position, and then release the handle.

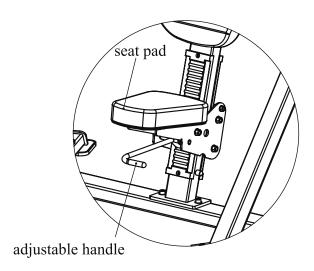

Exercise Instructions

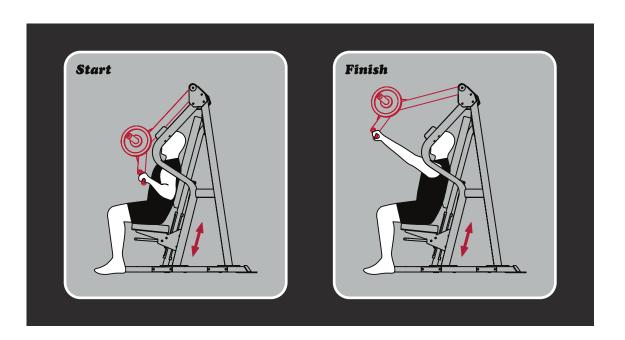

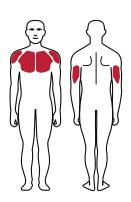

Exercise Instructions

- 1. Select an appropriate weight.
- 2. Adjust seat pad to the desired position.
- 3. Push handles straight out.
- 4. Pause slightly then slowly return to the starting position.

Maintenance Schedule

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY					
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY						
Clean; Upholstery	DAILY	WEEKLY						
Inspect; Cables or Belts and their tension	DAILY	WEEKLY						
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS						
Inspect; All Decals	WEEKLY	3 MONTHS						
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS						
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS						
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS						
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS						
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY						
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY						
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS						

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

General Maintenance Information

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- * Check all pieces for signs of visible wear or damage.
- * Check springs in snap hooks and pull-pins for proper tension and alignment.
- * If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- * To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- * Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- * Replace ripped or warn upholstery immediately.
- * Keep sharp or pointed objects clear of all upholstery.

Decals:

* Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- * Inspect all nuts and bolts for any loosening and tighten if needed.
- * Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

* These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- * We uses only high quality belt, and mil-spec cables.
- * Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- * While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- * Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- * Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- * Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- * Wipe down adjusting tubes with a dust free rag before applying lubricant.
- * Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

* Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

Weight Training Tips

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.







