


Assembly and Operating Instructions







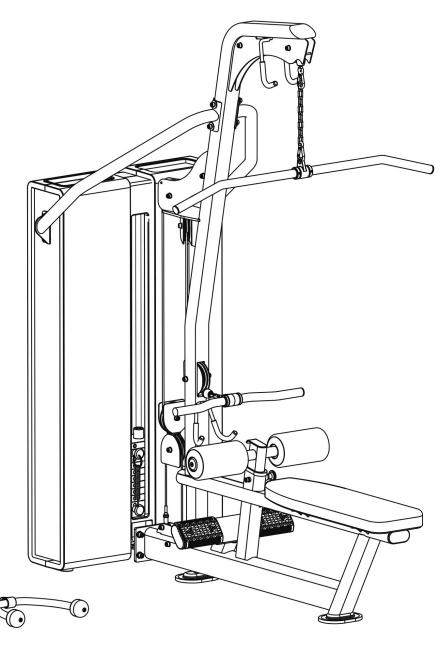

SESS7131.01.01

SKU: SESS7131

Content

1	GENERAL INFORMATION	7
1.1	Technical Data	7
1.2	Personal Safety	8
1.3	Set-Up Place	9
2	ASSEMBLY	10
2.1	General Instructions	10
2.2	Scope of Delivery	10
2.3	Assembly	13
3	STORAGE AND TRANSPORT	26
3.1	General Instructions	26
4	TROUBLESHOOTING, CARE AND MAINTENANCE	27
4.1	General Instructions	27
4.2	Faults and Fault Diagnosis	27
4.3	Maintenance and Inspection Calendar	28
5	DISPOSAL	28
6	RECOMMENDED ACCESSORIES	29
	NECONINE NO ED NECESSO NES	
7	ORDERING SPARE PARTS	30
7.1	Serial Number and Model Name	30
7.2	Parts List	31
7.3	Exploded Drawing	34
8	WARRANTY	36
0	CONTACT	20
9	CONTACT	38

Dear customer,

Thank you for choosing a high-quality equipment of the brand Taurus®. Taurus® offers sports and fitness equipment for the sophisticated home sport and the equipment of fitness studios and business customers. With Taurus® fitness equipment, the focus is on what sport is all about: maximum performance! Therefore, the equipment is developed in close consultation with athletes and sports scientists. Because athletes know best what makes perfect fitness equipment.

Further information can be found at www.sport-tiedje.com.

Intended Use

The equipment may only be used for its intended purpose.

This fitness equipment is suitable for home use, semi-professional use and commercial or professional use. The semi-professional sector includes, for example, institutional facilities such as hospitals, schools, hotels and associations. Professional use refers to commercial use, e.g. in a fitness studio.

Legal Notice

Sport-Tiedje GmbH Europe's No. 1 for home fitness

International Headquarters Flensburger Straße 55 24837 Schleswig Germany Management:

Christian Grau

Sebastian Campmann

Dr. Bernhard Schenkel

No. HRB 1000 SL

Local Court Flensburg

European VAT Number: DE813211547

Disclaimer



©2011 Taurus® is a registered brand of the company SportTiedje GmbH. All rights reserved. Any use of this trademark without the explicit written permission of SportTiedje is prohibited.

Product and manual are subject to change. Technical data can be changed without advance notice.


ABOUT THIS MANUAL

Please carefully read the entire manual before installation and first use. The manual will help you to quickly set up the system and explains how to safely use it. Make sure that all persons exercising with the equipment (especially children and persons with physical, sensory, mental or motor disabilities) are informed about this manual and its contents in advance. In case of doubt, responsible persons must supervise the use of the equipment.

Due to ongoing changes and software optimisations, the manual may have to be updated. If you notice any discrepancies during assembly or use, please refer to the manual uploaded to the webshop. The latest manual is always available there.

This equipment has been manufactured according to the latest safety knowledge. As far as possible, potential safety hazards which could cause injury have been eliminated. Make sure to carefully follow

the instructions and that all parts are securely in place. If required, read through the instructions again to correct any mistakes.



The following safety instructions may appear in this manual:

ATTENTION

This notice indicates potentially hazardous situations which, if not avoided, may result in property damage.

CAUTION

This notice indicates potentially hazardous situations which, if not avoided, may result in slight or minor injuries!

↑ WARNING

This notice indicates potentially hazardous situations which, if not avoided, may result in death or serious injuries!

/ DANGER

This notice indicates potentially hazardous situations which, if not avoided, will result in death or serious injuries!

(i) NOTICE

This notice indicates further useful information.

Retain these instructions in a safe place for future reference, maintenance or when ordering replacement parts.

1.1 Technical Data

Weight and Dimensions

Packaging dimensions (L x W x H) and article weight (gross, incl. packaging):

163 cm x 91 cm x 19.5 cm Box 1: 25 kg / 55 lbs Box 2: 152 cm x 89 cm x 28.5 cm 35 kg / 77 lbs 195 cm x 85 cm x 31.5 cm Box 3: 90 kg / 198 lbs 110 cm x 15 cm x 28 cm Box 4: 7 kg / 15 lbs

Box 5 (weight plates): 30.5 cm x 11.5 cm x 12.5 cm 89.5 kg / 198 lbs total

Set-up dimensions (L x W x H) and article weight (net, without packaging):

187.8 cm x 121.4 cm x 225.8 cm 214.1 kg / 472 lbs

Weight Stack and Cables

Weight stack: 1

Weight plates: 9 x 20lb weight plate + 1 x 10lb top weight plate

Cable material: Steel Cable cover: Nylon

Cable length: 367 cm, 412 cm

Transmission ratio: 1:1

Maximum user weight: 180 kg / 397 lbs

1.2 Personal Safety

↑ DANGER

- + Before you start using the equipment, you should consult your physician that this type of exercise is suitable for you from a health perspective. Particularly affected are persons who: have a hereditary disposition to high blood pressure or heart disease, are over the age of 45, smoke, have high cholesterol values, are overweight and/or have not exercised regularly in the past year. If you are under medical treatment that affects your heart rate, medical advice is absolutely essential.
- + Note that excessive training can seriously endanger your health. Please also note that heart rate monitoring systems can be inaccurate. If you notice any signs of weakness, nausea, dizziness, pain, shortness of breath, or other abnormal symptoms, stop exercising immediately and seek advice from your doctor if necessary.

↑ WARNING

- + This equipment may not be used by children under the age of 14.
- + Children should not be allowed unsupervised access to the equipment.
- + Persons with disabilities must have a medical license and must be under strict observation when using the equipment.
- + The equipment is strictly for use by one person at a time.
- + If your equipment provides a safety key, the clip of the safety key must be attached to your clothing before starting your training. In the event of a fall, the EMERGENCY STOP of the equipment can be initiated.
- + Keep your hands, feet and other body parts, hair, clothing, jewellery and other objects well clear of moving parts.
- + During use, wear suitable sports clothing rather than loose or baggy clothing. When wearing sports shoes, make sure they have suitable soles, preferably made of rubber or other non-slip materials. Shoes with heels, leather soles, studs or spikes are unsuitable. Never exercise barefoot.

↑ CAUTION

- + If your equipment needs to be connected to the power supply with a mains cable, make sure that the cable is not a potential tripping hazard.
- + Make sure that nobody is within the range of motion of the equipment during training so as not to endanger you or other persons.

► ATTENTION

+ Do not insert any objects of any kind into the openings of the device.

1.3 Set-Up Place

№ WARNING

+ Do not place the equipment in main corridors or escape routes.

CAUTION

- + Choose a location in which to place the equipment such that there is enough free space/ clearance to the front, the rear and to the sides of the equipment.
- + The training room should be well ventilated during training and not be exposed to any draughts.
- + Choose the place in which to set up the equipment such that there is enough free space/ clearance to the front, the rear and to the sides of the equipment.
- + The set-up and mounting surface of the equipment should be flat, loadable and solid.

ATTENTION

- + The device may only be used in one building, in sufficiently tempered and dry rooms (ambient temperatures between 10°C and 35°C). The equipment should not be used outdoors or in rooms with high humidity (over 70%) like swimming pools.
- + A floor protective mat/equipment underlay can help to protect high-quality floor coverings (parquet, laminate, cork, carpets) from dents and sweat and can help to level out slight unevenness.

2.1 General Instructions

⚠ DANGER

+ Do not leave any tools, packaging materials such as foils or small parts lying around, as otherwise there is a danger of suffocation for children. Keep children away from the equipment during assembly.

№ WARNING

+ Pay attention to the instructions attached to the equipment in order to reduce the risk of injuries.

↑ CAUTION

- + Ensure to have sufficient room for movement in each direction during assembly.
- + The assembly of the equipment must be carried out by at least two adults. If in doubt, seek the help of a third technically skilled person.

► ATTENTION

+ To prevent damage to the equipment and the floor, assemble the equipment on a mat or packaging board.

(i) NOTICE

- + In order to make the assembly as simple as possible, some screws and nuts to be used can already be pre-assembled.
- + Ideally, assemble the equipment at its later set-up place.

2.2 Scope of Delivery

The scope of delivery consist of the following parts. At the beginning, check whether all parts and tools belonging to the device are included in the scope of delivery and whether damage has occurred. In the event of complaints, the contractual partner must be contacted directly.

△ CAUTION

If parts of the scope of delivery are missing or damaged, the assembly must not be carried out.

Number	Name	Quantity
001	Frame	1
013	Pulley set (⊕114)	1
012	Pulley set (⊕89)	1
004	Pulley baffle	1
005 + 008 + 006	Left shield + rear middle trim + right shield	1
005 + 009 + 006	Left shield + front middle trim + right shield	1
007	Side shield	2
010	Tray	2
011	Connecting strip	4
72	Seat pad	1
73	Leg pad	2

58	10lb top weight	D Jacoba and a series of the s	1
76	Cable set 1		1
77	Cable set 2		1
38	Left joint frame	9 2	1
37-2	Right joint frame	2	1
46	Low handle		1
82	Pull back rope		1
45	High pull handle set		1
33-2	Bottom frame		1
35-2	Foot frame		1
36-2	Stretching rack		1
34-2	Vertical pipe rack		1
39	Pulley frame		1
61	20lb weight plate	• • • • • • • • • • • • • • • • • • •	9

2.3 Assembly

Before assembly, take a close look at the individual assembly steps shown and carry out the assembly in the order given.

(i) NOTICE

First loosely screw all parts together and check that they fit properly. Tighten the screws using the tool only when you are instructed to do so.

Step 1: Assembly of the Frame

(i) NOTICE

Make sure to use the two middle holes.


Attach one plate (85) to each side of the frame (001) with two screws (63), two spring washers (66) and two plain washers (28) each.

No.	Name	Specification	Qty.	
001	Frame		1	
28	Plain washer	Ф20*Ф10.5*2	4	85
63	Hex socket head cap screw	M10*30	4	
66	Spring washer	M10	4	
85	Plate w. four screw holes		2	
		63 66 001		

Step 2: Assembly of the Frame and Bottom Frame

- 1. Fix the bottom frame (33-2) to the frame (001) with four screws (027), four flat washers (033-1) and four spring washers (032).
- 2. Fix the vertical pipe rack (34-2) to the bottom frame (33-2) with two screws (63), two spring washers (66) and two plain washers (28).


No.	Name	Specification	Qty.
001	Frame		1
027	Hex socket countersunk head screw	M12*30	4
033-1	Flat washer	Ф24*Ф13*2.5	4
032	Spring washer	M12	4
28	Plain washer	Ф20*Ф10.5*2	2
33-2	Bottom frame		1
34-2	Vertical pipe rack		1
63	Hex socket head cap screw	M10*30	2
66	Spring washer	M10	2

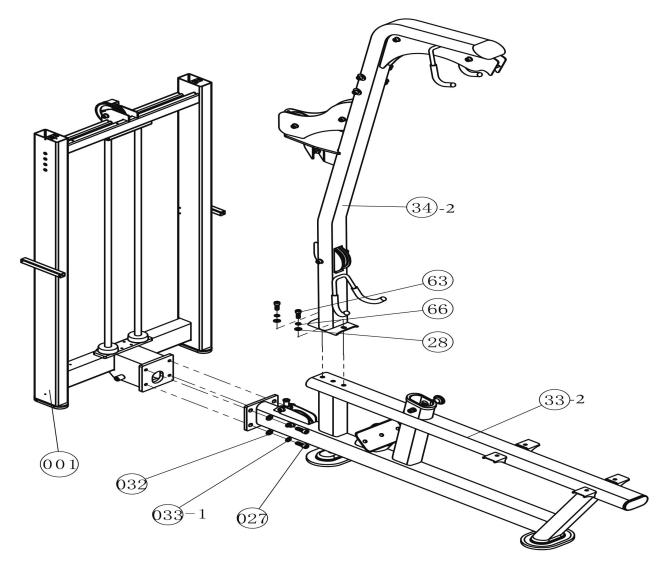

Step 3: Assembly of the Foot Frame and Stretching Rack

- 1. Fix the foot frame (35-2) to the bottom frame (33-2) with six screws (63), six spring washers (66) and six plain washers (28).
- 2. Insert the stretching rack (36-2) into the compartment of the bottom frame (33-2) and secure with one limiting screw (70) and one spring washer (66).

No.	Name	Specification	Qty.
28	Plain washer	Ф20*Ф10.5*2	6
35-2	Foot frame		1
36-2	Stretching rack		1
63	Hex socket head cap screw	M10*30	6
66	Spring washer	M10	7
70	Limiting screw		1

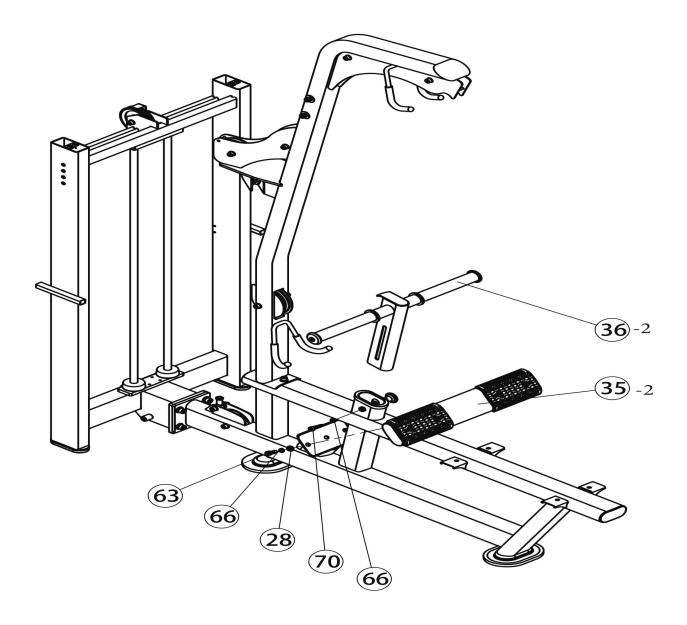

Step 4: Assembly of the Pulleys and Cable Routing

(i) NOTICE

- + The majority of the pulleys are pre-assembled when delivered. These pulleys (10) need to be disassembled in order to perform the cable routing.
- + The two pulleys (012 and 013) for the frame are not pre-assembled.

Cable 1 (76)

- 1. Pass the cable (76) over the pulley set (013) [point A] and fix the pulley set (013) to the upper side of the frame (001) and pulley baffle (004) with the pre-assembled screw (026), two flat washers (031) and one nut (034-1).
- 2. Pass the cable (76) down and under the pulley set (012) [point B] and fix the pulley set (012) to the lower side of the frame (001) with the pre-assembled screw (025), two flat washers (031) and one nut (034-1).
- 3. Disassemble the pulley (10) [point C], pass the cable below the pulley (10) and reassemble the pulley (10).
- 4. Disassemble the lower pulley in the pulley frame (39) [point D], pass the cable (76) over the pulley and reassemble the pulley in the pulley frame (39).
- 5. Screw in this end of the cable (76) into the bottom frame (33-2).


(i) NOTICE

The other cable end will be screwed into the weight stack in a later assembly step.

Cable 2 (77)

- 6. Disassemble the pulley (10) [point E], pass the cable (77) over the pulley (10) and reassemble the pulley (10).
- 7. Disassemble the pulley (10) [point F], pass the cable (77) over the pulley (10) and reassemble the pulley (10).
- 8. Disassemble the pulley (10) [point G], pass the cable (77) under the pulley (10) and reassemble the pulley (10).
- 9. Disassemble the pulley (10) [point H], pass the cable (77) over the pulley (10) and reassemble the pulley (10).
- 10. Disassemble the upper pulley in the pulley frame (39) [point I], pass the cable (77) under the pulley and reassemble the pulley in the pulley frame (39).
- 11. Disassemble the pulley (10) [point J], pass the cable (77) over the pulley (10) and reassemble the pulley (10).
- 12. Disassemble the pulley (10) [point K], pass the cable (77) under the pulley (10) and reassemble the pulley (10).
- 13. Attach the high pull handle set (45) and low handle (46) to the ends of the cable (77).


No.	Name	Specification	Qty.
012	Pulley set	φ89*25.8	1
013	Pulley set	φ114*32	1
39	Pulley frame		1
45	High pull handle set		1
46	Low handle		1
76	Cable set 1		1
77	Cable set 2		1

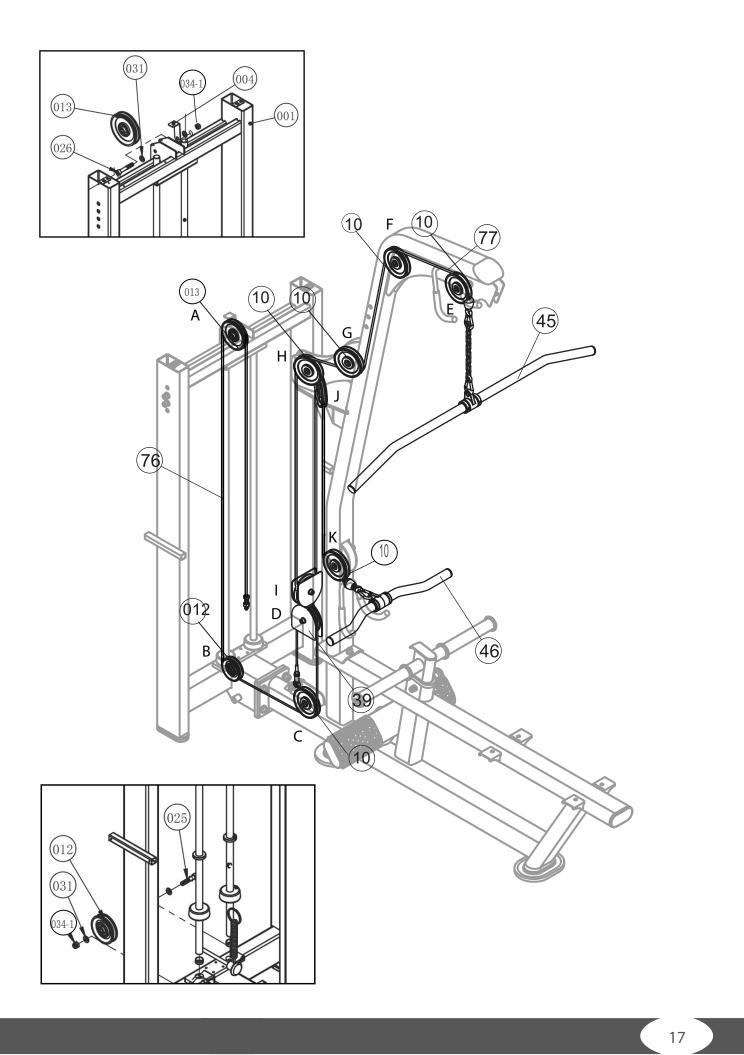

Step 5: Assembly of the Seat and Leg Pads

- 1. Fix the seat pad (72) to the bottom frame (33-2) with four screws (75), four spring washers (22) and four plain washers (27).
- 2. Slide one leg pad (73) onto each end of the stretching rack (36-2) and secure with one aluminium end cap (83) and one screw (74) on each side.

No.	Name	Specification	Qty.
22	Spring washer	M8	4
27	Plain washer	Ф16*Ф8.4*1.6	4
72	Seat pad		1
73	Leg pad		2
74	Countersunk hex socket screw	M8*30	2
75	Hex socket head cap screw	M8*35	4
83	Aluminium end cap		2

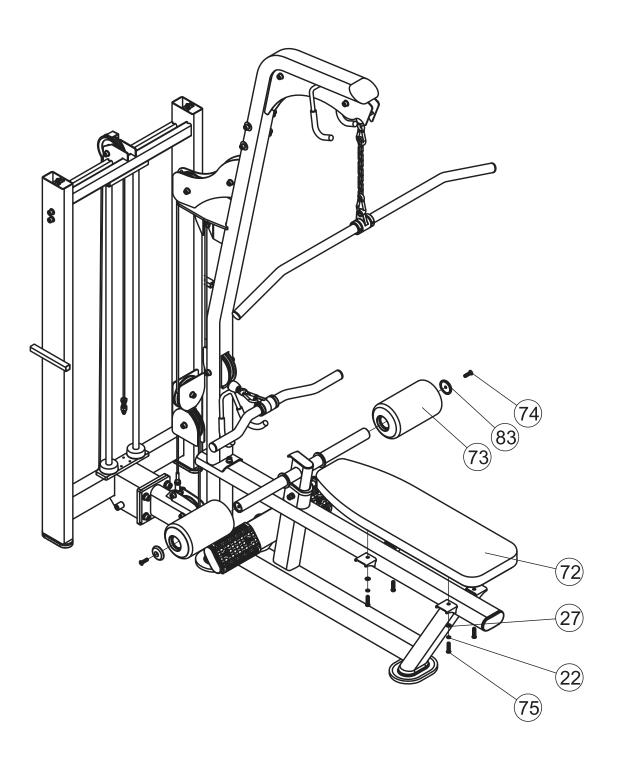


Step 6: Assembly of the Weight Stack and Labels

(i) NOTICE

The guide rods are pre-assembled to the frame.

- 1. Disassemble the upper part of the guide rods (002) by removing the screws (021), the guide rod fixing sleeves (003), the split washers (028) and the bumpers (014).
- 2. Carefully slide each of the weight plates (61) over the guide rods (002) one by one.
- 3. Carefully slide the top weight plate with the pre-assembled shaft and guide sleeves (58) over the guide rods (002).
- 4. Insert the select pin set (020) into the weight stack.
- 5. Slide the previously removed bumpers (014) back over the guide rods (002).
- 6. Fix the guide rods (002) to the upper part of the frame (001) with the previously removed screws (021), guide rod fixing sleeves (003) and split washers (028).
- 7. Screw the cable end (76) into the top weight plate (58).
- 8. Wipe the front surface of the weight stack.
- 9. Peel off the adhesive back sheet from the label and make sure the label remains attached to the application tape.
- 10. Align the center hole of the label with the weight stack center hole.
- 11. Line up the first label to the hole of the top plate.
- 12. Make sure the label is straight and slowly press it into place.
- 13. Gently remove the application tape and rub each label firmly against the weight stack.
- 14. Allow the labels to fully stick for 24 hours.

No.	Name S	Specification	Qty.
002	Guide rod		2
003	Guide rod fixing sleeve		2
014	Bumper	Ф38*Ф21*10	2
020	Select pin set		1
021	Hex socket set s with cone	M8*20	2
028	Split washer	d=20	2
58	10 lbs top weight		1
61	20lb weight stack plate		9

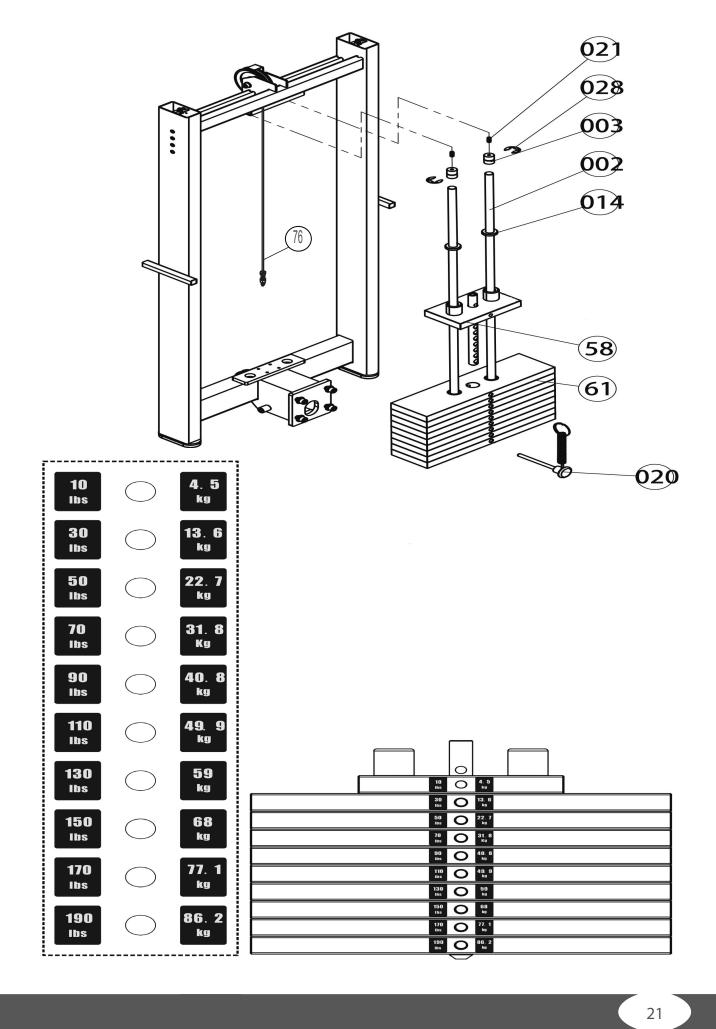


Step 7: Assembly of the Shields and Trims

① NOTICE

The left and right shields are pre-assembled with a front or rear middle trim. Make sure to align the shields in the respective direction (front/rear).

- 1. Fix the left and right shields (005 & 006) with the rear and front middle trim (008 & 009) to the frame (001) with four screws (022).
- 2. Fix the side shields (007) to the frame (001) with four connecting strips (011) with twelve screws (022).
- 3. Fix the trays (010) to the frame (001) with two screws (024) and two flat washers (029).


No.	Name	Specification	Qty.
005 + 008 + 006	Left shield + rear middle trim + right shield		1
005 + 009 + 006	Left shield + front middle trim + right shield		1
007	Side shield		2
010	Tray		2
011	Connecting strip		4
022	Cross recessed countersunk head screw	ST4.2*13	16
024	Hex socket countersunk head screw	M5*25	2
029	Flat washer	Ф10*Ф5.3*1	2

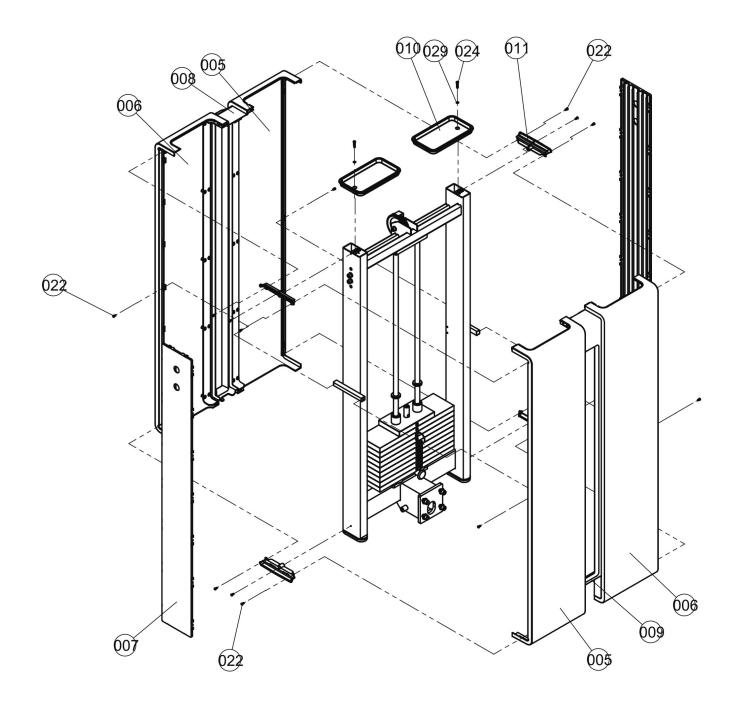

Step 8: Assembly of the Joint Frames

- 1. Fix the left joint frame (38) to the side shield (007) with two screws (84), two spring washers (66) amd two plain washers (28).
- 2. Fix the left joint frame (38) to the vertical pipe rack (34-2) with two screws (63), two spring washers (66) and two big washers (67).
- 3. Repeat the steps 1 and 2 with the right joint frame (37-2).
 - → The assembly is completed.

No.	Name	Specification	Qty.
28	Plain washer	Ф20*Ф10.5*2	4
37-2	Right joint frame		1
38	Left joint frame		1
63	Hex socket head cap screw	M10*30	8
66	Spring washer	M10	8
67	Big washer	Ф30*Ф10.5*2.5	4
84	Hex socket head cap screw	M10*70	4

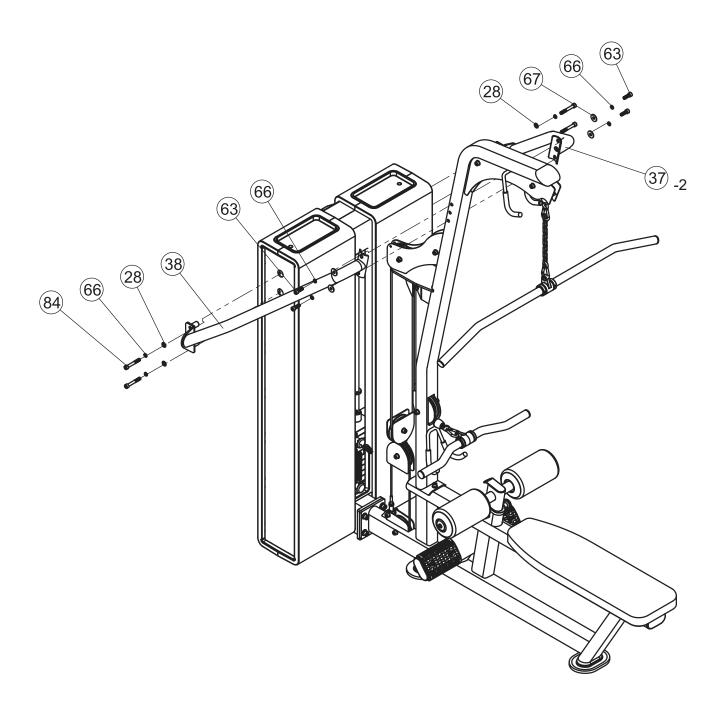

3.1 General Instructions

№ WARNING

- + The storage location should be chosen so that improper use by third parties or children can be prevented.
- + If your equipment does not have transportation wheels, the equipment must be disassembled before transportation.

ATTENTION

+ Make sure that the equipment is protected from moisture, dust and dirt in the selected storage location. The storage location should be dry and well ventilated and have a constant ambient temperature between 10°C and 35°C.

4.1 General Instructions

↑ WARNING

+ Do not make any improper changes to the equipment.

CAUTION

+ Damaged or worn components may affect your safety and the life of the equipment. Therefore, immediately replace damaged or worn components. In such a case, contact the contract partner. The equipment must not be used until it has been repaired. If necessary, use only original spare parts.

► ATTENTION

+ In addition to the instructions and recommendations for maintenance and care given here, additional service and/or repair work may be necessary; this must only be carried out by authorised service technicians.

4.2 Faults and Fault Diagnosis

The equipment undergoes regular quality controls during production. Nevertheless, faults or malfunctions may occur. Frequently, individual parts are responsible for these disturbances, an exchange is usually sufficient. Please refer to the following overview for the most common errors and how to correct them. If the equipment still does not function properly, contact your contract partner.

Fault	Cause	Solution
Grinding noises	Cables or pulleys do not run smoothly or are damaged	 Visual inspection of the cable routing or the pulley guide If damaged, replace the defective part
Weight hanging in the air	Cable tensioned too tight	Readjust cable tension
Cable without tension	Cable too loose	+ Check cable routing+ Readjust cable tension
Squeaking & cracking noises	Screw connections loosened or too tight	+ Check or lubricate screw connections+ Check cable routing
Unit wobbles	+ Uneven ground+ Loose screw connections	+ Align unit + Tighten screw connections
Heavy draught	+ Weight holders/guide rods too dry+ Faulty cable routing	+ Lubricate guide rods+ Check cable routing

4.3 Maintenance and Inspection Calendar

To avoid damage from body sweat, the equipment must be cleaned with a damp towel (no solvents!) after each training session.

The following routine tasks must be performed at the specified intervals:

Part	Weekly	Monthly
Cables	С	I
Screw connections		I
Pulleys and cable routing		I
Slide rails/Guide rods		I
Cushions	С	
Legend: C = clean; I = inspect		

5 DISPOSAL

At the end of its operational life, this equipment cannot be disposed of in normal household waste. Instead, it must be disposed of via an recycling centre. Further information can be obtained from your local authority's recycling service.



The materials can be recycled as per their symbols. Through the reuse, recycling of materials or other forms of recovery of old equipment, you make an important contribution to the protection of the environment.

RECOMMENDED ACCESSORIES

To make your training experience even more efficient and pleasant, we recommend that you add suiting accessories to your fitness equipment. This could be a floor mat, for example, which makes your fitness equipment stand more securely and also protects the floor from falling sweat, but it could also be additional handrails on some treadmills or silicone spray to keep moving parts in good shape.

If you have purchased a fitness machine with pulse training and want to train your heart rate, we strongly recommend that you use a compatible chest strap, as this ensures optimum transmission of the heart rate. You may want to buy additional grips or weights for multi gyms.

Our range of accessories offers the highest quality and makes training even better. If you would like to find out more about compatible accessories, please go to the detail page of the product in our webshop (the easiest way is to enter the article number in the search field above) and go to the recommended accessories on this page. Of course, you can also contact our customer service: by telephone, e-mail, in one of our branches or via our social media channels. We will be happy to advise you!




7.1 Serial Number and Model Name

In order to provide you with the best possible service, please have the model name, article number, serial number, exploded drawing and parts list ready. The corresponding contact options can be found in chapter 9 of this operating manual.

(i) NOTICE

The serial number of your equipment is unique. It's located on a white sticker. The exact position of this sticker is shown in the following illustration.

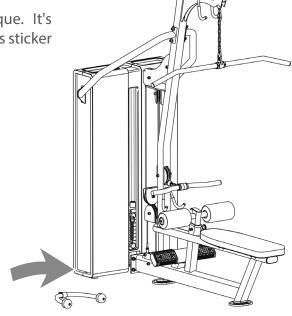

Enter the serial number in the appropriate field.

Serial number:	
Brand / Category:	
Taurus / multi gym	
Model Name:	
Dual Pro Lat Pull & Low Row	
SKU:	
SESS7131	


7.2 Parts List


No.	Name	Specification	Qty.
001	Frame		1
002	Guide rod		2
003	Guide rod fixing sleeve		2
004	Pulley baffle		1
005	Left Shield		2
006	Right Shield		2
007	Side Shield		2
008	Rear middle Trim		1
009	Front middle Trim		1
010	Тау		2
011	Connecting strip		4
012	Pulley set	φ89*25.8	1
013	Pulley set	φ114*32	1
014	Bumper	φ38*φ21*10	2
015	Floor mat		2
016	Bumper	φ62*φ20*26	2
017	Guide rod upper cap		2
018	Hook stop collar		2
019	Single Side glue cushion	25*35*3	1
020	Select Pin Set		1
021	Hexagon Socket Set S with Cone	M8*20	2
022	Cross recessed countersunk head screw	ST4.2*13	56
023	Button Head Inner Hexagon Bolt	M8*16	4
024	Hexagon socket countersunk head screws	M5*25	2
025	Hexagon socket countersunk head screws	M10*50	1
026	Hexagon socket countersunk head screws	M10*60	1
027	Hexagon socket countersunk head screws	M12*30	4
028	Split Washer	d=20	2
029	Flat washer	Ф10*Ф5.3*1	2
030	Flat washer	Ф16*Ф8.4*1.6	4
031	Flat washer	Ф20*Ф10.5*2	4

032	Flat washer	Ф24*Ф13*2.5	4
033-1	Spring washer	M12	4
034-1	Nylon nut	M10	2
035-1	Nut	M5	2
036-1	Stopple	Ф10*Ф5.3*1	1
037-1	Elastic cylindri cal pin	φ10*45	1
10	Pulley		9
18	Hex socket head cap screw	M10*50	8
22	Spring washer	M8	4
27	Plain washer	Ф16*Ф8.4*1.6	4
28	Plain washer	Ф20*Ф10.5*2	32
30	Nylon insert lock nut	M10	10
33-2	Bottom frame		1
34-2	Vertical pipe rack		1
35-2	Foot frame		1
36-2	Stretching rack		1
37-2	Right joint frame		1
38	Left joint frame		1
39	Pulley frame		1
40	Adjusting plunger		1
44	Small handle grip2		4
45	High pulll handle set		1
46	Low handle		1
47	Elliptical tube stopper		3
48	Rubber mat		2
50	Round tube stopper		4
52	sliding sleeve		2
53	Rotary knob		1
54	Chain		1
55	Hoist hook		3
57	10holes shaft		1
58	10 lb top weight		1
59	Guide sleeve		2
60	Spring		1
61	20lb weight stack plate		9

		I	
63	Hex socket head cap screw	M10*30	12
64	Hex socket head cap screw	M10*115	1
65	Hex socket head cap screw	M10*65	1
66	Spring washer	M10	17
67	Big washer	Ф30*Ф10.5*2.5	4
68	Gasket		2
69	M20 nut		1
70	Limiting screw		1
71	Knuckle bearing	SI10E(M10)	1
72	Seat pad		1
73	Leg pads		2
74	Countersunk hex socket screws	M8*30	6
No.	Description	Specifications	Qty
75	Hex socket head cap screw	M8*35	4
76	Cable set 1		1
77	Cable set 2		1
78	flat head riveted nuts	M8*18	4
79	pedal sheath		2
80	hand ring assembly		2
81	hook cover		2
82	Pull back rope		1
83	aluminium end cap		2
84	Hex socket head cap screw	M10*70	4
85	Plate with four screw holes		2

7.3 Exploded Drawing

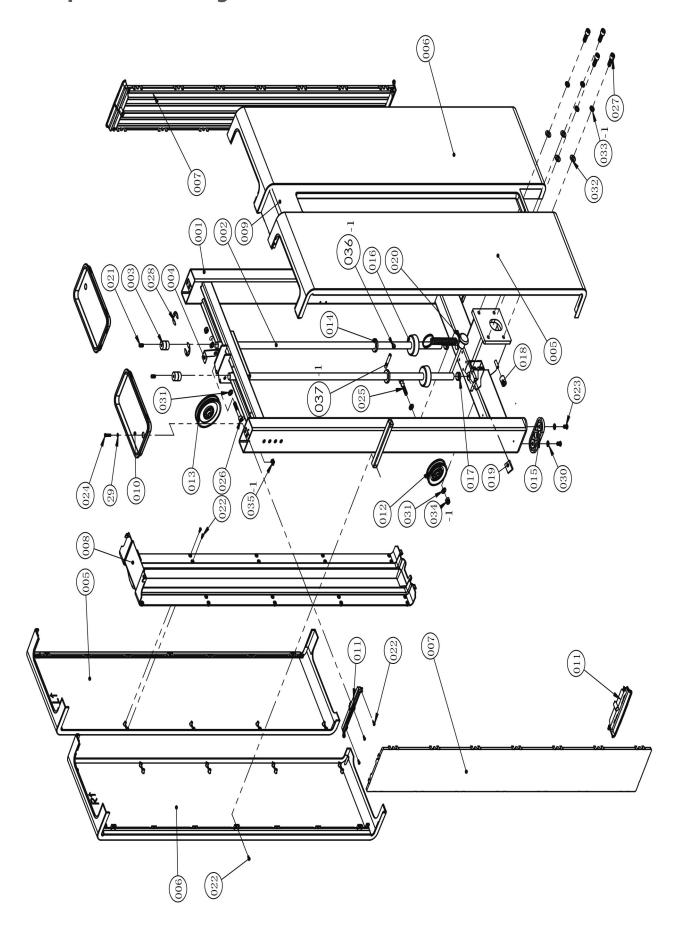

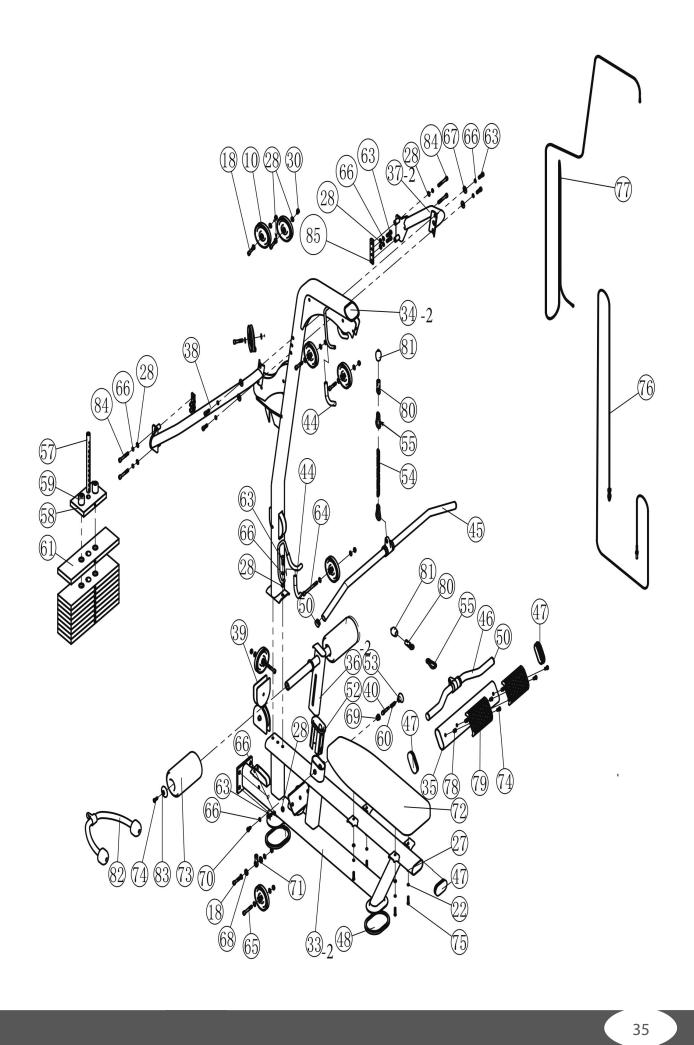

Training equipment from Taurus® is subject to strict quality control. However, if a fitness equipment purchased from us does not work perfectly, we take it very seriously and ask you to contact our customer service as indicated. We are happy to help you by phone via our service hotline.

Error Descriptions

Your fitness equipment is developed for long-term, high-quality training. However, should a problem arise, please first read the operating instructions. For further assistance, please contact your contract partner or call our service hotline. To ensure your problem is solved as quickly as possible, please describe the defect as exactly as possible.

In addition to the statutory warranty, we provide a warranty for every fitness equipment purchased from us according to the following provisions.

Your statutory rights are not affected.

Warrantee

The warrantee is the first/original buyer and/or any person who received a newly purchased product as a gift from the original buyer.

Warranty period

The warranty periods, shown on our web shop, begin on delivery of the fitness equipment. The respective warranty periods for your equipment can be found on its product website.

Repair Costs

According to our choice, there will either be a repair, a replacement of individual damaged parts or a complete replacement. Spare parts, that have to be mounted while assembling the equipment, have to be replaced by the warrantee personally and are not a part of repair. After the expiration of the warranty period for repair costs, a pure parts warranty applies, which does not include the repair, installation and delivery costs.

The terms of use are defined as follows:

- + Home use: solely for private use in private households up to 3 hours per day
- + Semi-professional use: up to 6 hours per day (e. g. rehabilitation centres, hotels, clubs, company gyms)
- + Professional use: more than 6 hours per day (e. g. commercial gyms)

Warranty Service

Within the warranty period, equipment which develops faults as a result of material or manufacturing defects, will be repaired or replaced at our discretion. Ownership of equipment or parts of equipment which have been replaced is transferred to us. The warranty period is not extended nor does a new warranty period begin following repair or replacement under the warranty.

Warranty Conditions

For the warranty to be valid, the following steps must be taken:

Please contact our customer service by email or phone. If the product under warranty has to be sent in for repair, the seller bears costs. After expiry of the warranty, the buyer bears the costs of transport and insurance. If the fault is covered by our warranty, you will receive a new or repaired equipment in return.

Warranty claims are invalid in case of damage resulting from:

- + misuse or improper handling
- + environmental influences (moisture, heat, electrical surge, dust, etc.)
- + failure to follow the current safety measures for the equipment
- + failure to follow the operating instructions
- + use of force (e. g. hitting, kicking, falling)
- + interventions which were not carried out by one of our authorized service centres
- + unauthorised repair attempts

Proof of Purchase and Serial Number

Please make sure that you are able to provide the appropriate receipt when claiming on your warranty. So that we can clearly identify the model of your equipment, and for the purposes of our quality control, you will need to give the serial number of your equipment, when contacting the service team. Where possible please have your serial number and your customer number ready when you call our service hotline. It will help us to deal with your request swiftly.

If you cannot find the serial number on your fitness equipment, our service team is at your disposal to offer further information.

Service outside of the Warranty Period

We are also happy to issue an individual cost estimate if there is a problem with your fitness equipment after the warranty has expired, or in cases which do not fall under the terms of the warranty, e. g. normal wear and tear. Please contact our customer service team to find a quick and cost-effective solution to your problem. In such a case you will be responsible for the delivery costs.

Communication

Many problems can be solved just by speaking to us as your specialist supplier. We know how important it is to you as a user of the fitness equipment to have problems solved quickly and simply, so you can enjoy working out with minimal interruption. For that reason, we also want to resolve your queries quickly and in a straightforward manner. Thus, please always keep your customer number and the serial number of the faulty equipment handy.

DE	DK	FR
TECHNICAL SUPPORT	TECHNICAL SUPPORT & SERVICE	TECHNICAL SUPPORT & SERVICE
 +49 4621 4210-900 +49 4621 4210-698 ★ technik@sport-tiedje.de Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00 	 № 80 90 16 50 +49 4621 4210-945 Info@fitshop.dk Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00 	+33 (0) 172 770033 +49 4621 4210-933 service-france@fitshop.fr Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00
SERVICE 0800 20 20277 (Freecall)	PL TECHNICAL SUPPORT & SERVICE	BE TECHNICAL SUPPORT & SERVICE
info@sport-tiedje.de Mo - Fr 08:00 - 21:00 Sa 09:00 - 21:00 So 10:00 - 18:00	22 307 43 21 +49 4621 42 10-948 info@fitshop.pl Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00	© 02 732 46 77 +49 4621 42 10-932 Info@fitshop.be Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00

UK	NL	INT
TECHNICAL SUPPORT	TECHNICAL SUPPORT & SERVICE	TECHNICAL SUPPORT & SERVICE
& +44 141 876 3986	& +31 172 619961	& +49 4621 4210-944
support@powerhousefitness.co.uk	info@fitshop.nl	service-int@sport-tiedje.de
SERVICE +44 141 876 3972	Ma - Do 09:00 - 17:00 Vr 09:00 - 21:00 Za 10:00 - 17:00	Mo - Fr 8am - 6pm Sat 9am - 6pm
Mo - Fr 9am - 5pm		
	AT	CH
	AT TECHNICAL SUPPORT & SERVICE	CH TECHNICAL SUPPORT & SERVICE

Please find a detailed overview including address and opening hours for all stores of the Sport-Tiedje Group in Germany and abroad on the following website:

www.sport-tiedje.com/en/stores

WE LIVE FITNESS

WEBSHOP AND SOCIAL MEDIA

Sport-Tiedje is Europe's largest specialist store for home fitness equipment with currently over 70 stores and one of the world's most renowned online mail order companies for fitness equipment. Private customers order via the 25 web shops in the respective national language or have their desired equpiment assembled on site. In addition, the company supplies fitness studios, hotels, sports clubs, companies and physio practices with professional equipment for endurance and strength training.

Sport-Tiedje offers a wide range of fitness equipment from renowned manufacturers, high-quality in-house developments and comprehensive services, such as a build-up service and sports scientific advice before and after the purchase. The company employs numerous sports scientists, fitness trainers and competitive athletes.

Visit us also on our social media platforms or our blog!

