




# TAURUS WELLNESS

## Assembly and Operating Instructions

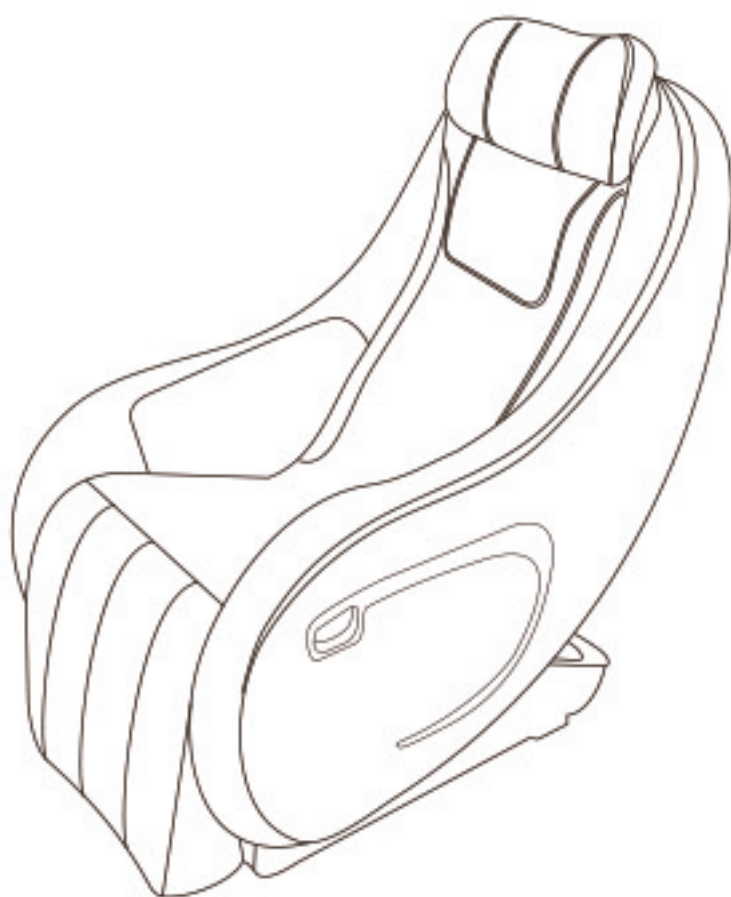

max. 185 cm



max. 120 kg



~ 20 Min.



37 kg  
L 97 | W 60 | H 97

TWMCM.01.02

Art. No. TW-MC-M



# Content

<b>1</b>	<b>GENERAL INFORMATION</b>	<b>7</b>
1.1	Technical Data	7
1.2	Personal Safety	8
1.3	Electrical Safety	9
1.4	Set-Up Place	10
<b>2</b>	<b>ASSEMBLY</b>	<b>10</b>
2.1	General Instructions	10
2.2	Scope of Delivery	11
2.3	Assembly	11
2.4	Overview	12
<b>3</b>	<b>OPERATING INSTRUCTIONS</b>	<b>14</b>
3.1	Button and Function Description	14
<b>4</b>	<b>STORAGE AND TRANSPORT</b>	<b>17</b>
4.1	General Instructions	17
4.2	Transportation Wheels	17
<b>5</b>	<b>TROUBLESHOOTING, CARE AND MAINTENANCE</b>	<b>18</b>
5.1	General Instructions	18
5.2	Faults and Fault Diagnosis	18
5.3	Maintenance and Inspection Calendar	19
<b>6</b>	<b>DISPOSAL</b>	<b>19</b>
<b>7</b>	<b>SERIAL NUMBER AND MODEL NAME</b>	<b>20</b>
<b>8</b>	<b>WARRANTY</b>	<b>21</b>
<b>9</b>	<b>CONTACT</b>	<b>23</b>





**Dear customer,**

Thank you for choosing a Taurus brand wellness product. With the Taurus Wellness Line we offer you relaxation, regeneration and massage at home. The Taurus Wellness Line can thus enhance your health and well-being. We wish you a relaxed time. If you have any questions about these or other Taurus brand products, please feel free to contact us.

Your team from Taurus and the Sport-Tiedje Group

Further information can be found at [www.sport-tiedje.com](http://www.sport-tiedje.com)

**Intended Use**

The equipment may only be used for its intended purpose.

The equipment is only suitable for home use. The equipment is not suitable for semi-professional (e.g. hospitals, associations, hotels, schools, etc.) and commercial or professional use (e.g. fitness studios).

**Legal Notice**

Sport-Tiedje GmbH  
Europe's No. 1 for home fitness

International Headquarters  
Flensburger Straße 55  
24837 Schleswig  
Germany

Management:  
Christian Grau  
Sebastian Campmann  
Dr. Bernhard Schenkel  
No. HRB 1000 SL  
Local Court Flensburg  
European VAT Number: DE813211547

**Disclaimer**



©2020 Taurus Wellness® is a registered brand of the company SportTiedje GmbH. All rights reserved. Any use of this trademark without the explicit written permission of Sport-Tiedje is prohibited.

Product and manual are subject to change. Technical data can be changed without advance notice.



## ABOUT THIS MANUAL

Please carefully read the entire manual before installation and first use. The manual will help you to quickly set up the system and explains how to safely use it. Make sure that all persons exercising with the equipment (especially children and persons with physical, sensory, mental or motor disabilities) are informed about this manual and its contents in advance. In case of doubt, responsible persons must supervise the use of the equipment.



This equipment has been manufactured according to the latest safety knowledge. As far as possible, potential safety hazards which could cause injury have been eliminated. Make sure to carefully follow the instructions and that all parts are securely in place. If required, read through the instructions again to correct any mistakes.

Please pay close attention to the safety and maintenance instructions given here. The contract partner cannot be held liable for damage to health, accidents or damage to the equipment when it is not used in accordance with these instructions.

The following safety instructions may appear in this manual:

 **ATTENTION**

This notice indicates potentially hazardous situations which, if not avoided, may result in property damage.

 **CAUTION**

This notice indicates potentially hazardous situations which, if not avoided, may result in slight or minor injuries!

 **WARNING**

This notice indicates potentially hazardous situations which, if not avoided, may result in death or serious injuries!

 **DANGER**

This notice indicates potentially hazardous situations which, if not avoided, will result in death or serious injuries!

 **NOTICE**

This notice indicates further useful information.

Retain these instructions in a safe place for future reference, maintenance or when ordering replacement parts.



## 1.1 Technical Data

Power input: 220 V, 50 Hz  
Power consumption: 100 W  
Number of motors: 3

Programmes in total: 8  
Manual programmes: 4  
Automatic programmes: 4

Automatic timer: 15 Minutes

### Weight and dimensions

Package dimensions (L x W x H) approx.: 103 cm x 65 cm x 104 cm  
Set-up dimension (L x W x H) approx.: 97 cm x 60 cm x 97 cm  
Reclined dimensions (L x W x H) approx.: 130 cm x 60 cm x 74 cm

Article weight (gross, incl. packaging) approx.: 44 kg  
Article weight (net, excl. packaging) approx.: 37 kg

Maximum user weight: 120 kg  
Maximum body height: 185 +/- 5 cm depending on body structure



## 1.2 Personal Safety

### WARNING

- + Before you start using the product, you should clarify with your physician whether its use is suitable for you from a health point of view. Affected by this are above all
  - + Persons with a pacemaker or other medical devices that can cause electromagnetic interference.
  - + Persons with cardiovascular diseases.
  - + Pregnant or sick persons or persons in poor physical condition.
  - + Persons who are advised against massages due to previous illnesses (e.g. vascular diseases or dermatitis).
  - + Persons suffering from osteoporosis, a fractured vertebra or other acute diseases.
  - + Persons with an irregular deformation of the spine.
  - + Persons suffering from a perceptual disorder due to a peripheral circulation disorder (e.g. diabetes).
- + This equipment may not be used by children under the age of 14.
- + Children should not be allowed unsupervised access to the equipment.
- + Persons with disabilities must have a medical license and must be under strict observation when using the equipment.
- + The equipment is strictly for use by one person at a time.
- + Do not use the product with a blanket or pillow. Overheating of the product and resulting electric shock, fire and/or personal injury may result.
- + Do not use the product in rooms where aerosol sprays or oxygen are administered.
- + Keep your hands, feet and other body parts, hair, clothing, jewellery and other objects well clear of moving parts.
- + Do not use the product on swollen and/or inflamed body parts or on irritated skin areas.
- + Do not use the product on painful areas of the body where the cause of the pain is unclear.
- + If you experience any unusual discomfort during use, turn the device off and do not use it any further. Contact your physician.
- + Use a light massage programme the first time you use the product. Avoid massage sessions longer than 15 minutes and do not massage any part of the body for more than 5 minutes at a time. Excessive massage may cause over-stimulation of muscles and nerves and may result in injury.

### CAUTION

- + Only use the product in a sitting position.
- + Only use the product in a relaxed position. Do not apply punctual pressure to any part of the body when the rollers are in motion.

### ATTENTION

- + Do not insert any objects of any kind into the openings of the device.





## 1.3 Electrical Safety

### **DANGER**

- + In order to reduce the risk of an electric shock, always unplug the equipment from the mains socket before assembly or dismantling, and before maintenance or cleaning. Do not pull on the cable.

### **WARNING**

- + Do not leave the equipment unattended while the mains cable is plugged into the mains socket. During your absence, the mains cable must be removed from the mains socket to prevent improper use by third parties or children.
- + If the mains cable or plug is damaged or defective, contact your contract partner. Until repair, the equipment must not be used.

### **ATTENTION**

- + The equipment requires a mains connection of 220-230 V with 50 Hz mains voltage.
- + The equipment may only be connected directly to an earthed socket using the supplied mains cable. Extension cables must conform to VDE guidelines. Always completely unwind the mains cable.
- + The socket must be protected by a fuse with a minimum fuse rating of "16 A, slow blow".
- + Do not make any changes to the mains cable or the mains plug.
- + Keep the mains cable away from water, heat, oil and sharp edges. Do not route the mains cable underneath the equipment or under a carpet or rug, and do not place any objects on top of it.
- + Do not unplug the mains cable until the product is turned off.



## 1.4 Set-Up Place

### **WARNING**

- + Do not place the equipment in main corridors or escape routes.
- + To prevent fire, do not place the product near or in areas with high heat (e.g. near a heater).

### **CAUTION**

- + Choose the set-up place so that there is sufficient space around the product. Please note that the product requires sufficient space to the rear when in the reclined position.

### **ATTENTION**

- + The device may only be used in one building, in sufficiently tempered and dry rooms (ambient temperatures between 10°C and 35°C). The equipment should not be used outdoors or in rooms with high humidity (over 70%) like swimming pools.
- + A floor protective mat/equipment underlay can help to protect high-quality floor coverings (parquet, laminate, cork, carpets) from dents and sweat and can help to level out slight unevenness.
- + To avoid fading or faster wear of the cover, do not place the product in places with direct sunlight and/or high heat.

## 2 ASSEMBLY

---

### 2.1 General Instructions

#### **DANGER**

- + Do not leave any tools, packaging materials such as foils or small parts lying around, as otherwise there is a danger of suffocation for children. Keep children away from the equipment during assembly.

#### **WARNING**

- + Pay attention to the instructions attached to the equipment in order to reduce the risk of injuries.

#### **CAUTION**

- + Ensure to have sufficient room for movement in each direction during assembly.
- + The assembly of the equipment must be carried out by at least two adults. If in doubt, seek the help of a third technically skilled person.

#### **ATTENTION**

- + To prevent damage to the equipment and the floor, assemble the equipment on a mat or packaging board.

#### **NOTICE**

- + Ideally, assemble the equipment at its later set-up place.





## 2.2 Scope of Delivery

The scope of delivery consist of the following parts. At the beginning, check whether all parts and tools belonging to the device are included in the scope of delivery and whether damage has occurred. In the event of complaints, the contractual partner must be contacted directly.

### CAUTION


If parts of the scope of delivery are missing or damaged, the assembly must not be carried out.

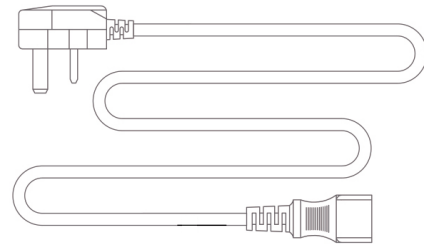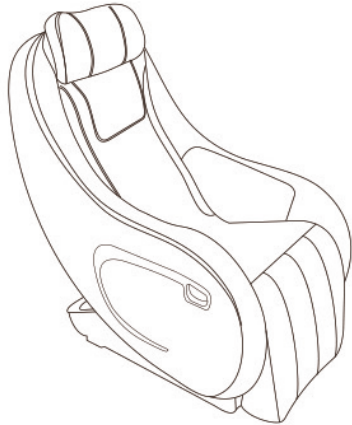


## 2.3 Assembly

Before assembly, take a close look at the individual assembly steps shown and carry out the assembly in the order given.

1. Carefully remove the upper carton cover from the product.
2. Fold down the sides of the bottom carton.

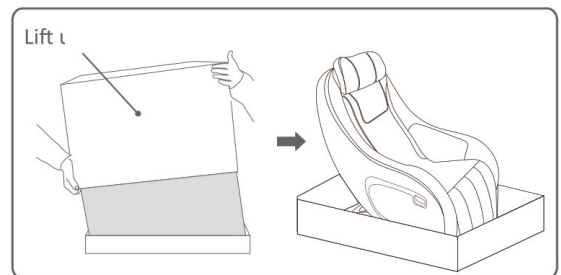


3. Move the product to the desired position using the transportation wheels. Please take notice of the instructions given in section 1.4 and chapter 4.

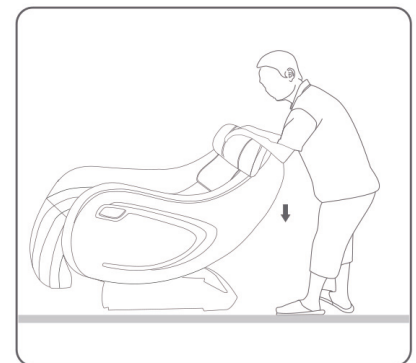

- Connect the power plug to the appliance and plug the power plug into an outlet that complies with the specifications in the chapter on electrical safety.

► **ATTENTION**


- + The equipment must not be connected to a multiple socket, otherwise it cannot be guaranteed that the equipment will be supplied with sufficient power. Technical errors can result.
- + Make sure that the power cord is not pinched under the product to prevent damage to the power cord.

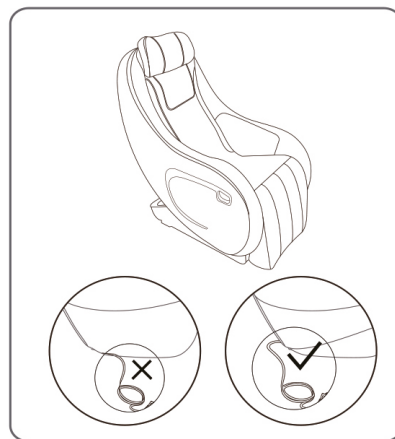

- Set the power switch on the back of the massage chair to "I" to switch on the massage chair.


► **ATTENTION**

Make sure that you switch off the massage chair via the control panel and set the power switch to "O" after each use.

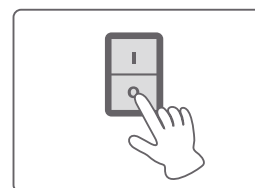


## 2.4 Overview

### External components

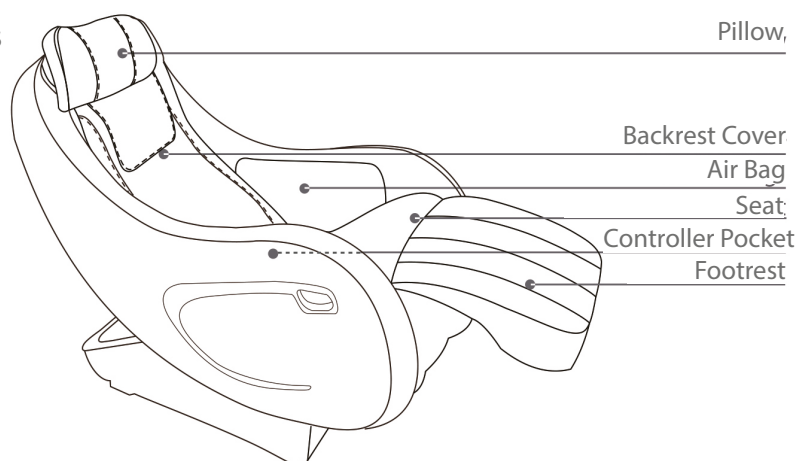


### Rear View

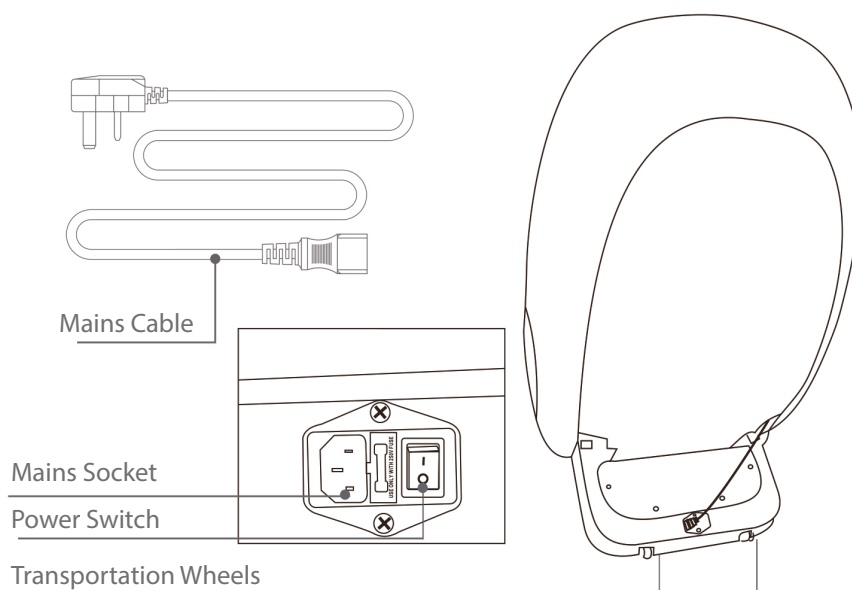

## Internal structure

Your massage chair is equipped with a total of four massage rollers, which can simulate different types of massage. Depending on the settings, the massage rollers follow an L-shape along your spine, hips and buttocks. The same applies to the air cushions, which exert a strong punctual pressure in three different intensities in the hip and buttock area and can be adjusted according to your needs. For additional relaxation of your legs, your massage chair has a vibration function integrated into the foot section. How to use these and other functions and adjust them to your personal preferences is explained in section 3.1.

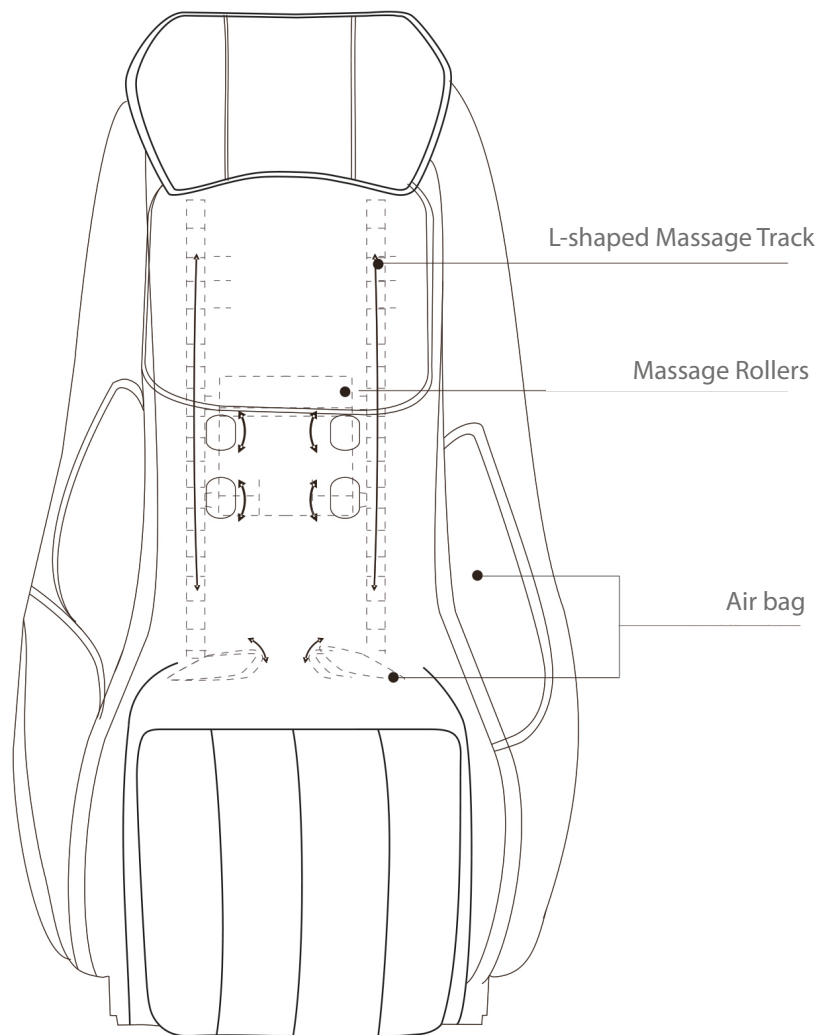


### 3 OPERATING INSTRUCTIONS

#### NOTICE

Familiarise yourself with all the functions and setting options of the device before starting training. Have the proper use of this product explained to you by a specialist.

### 3.1 Button and Function Description

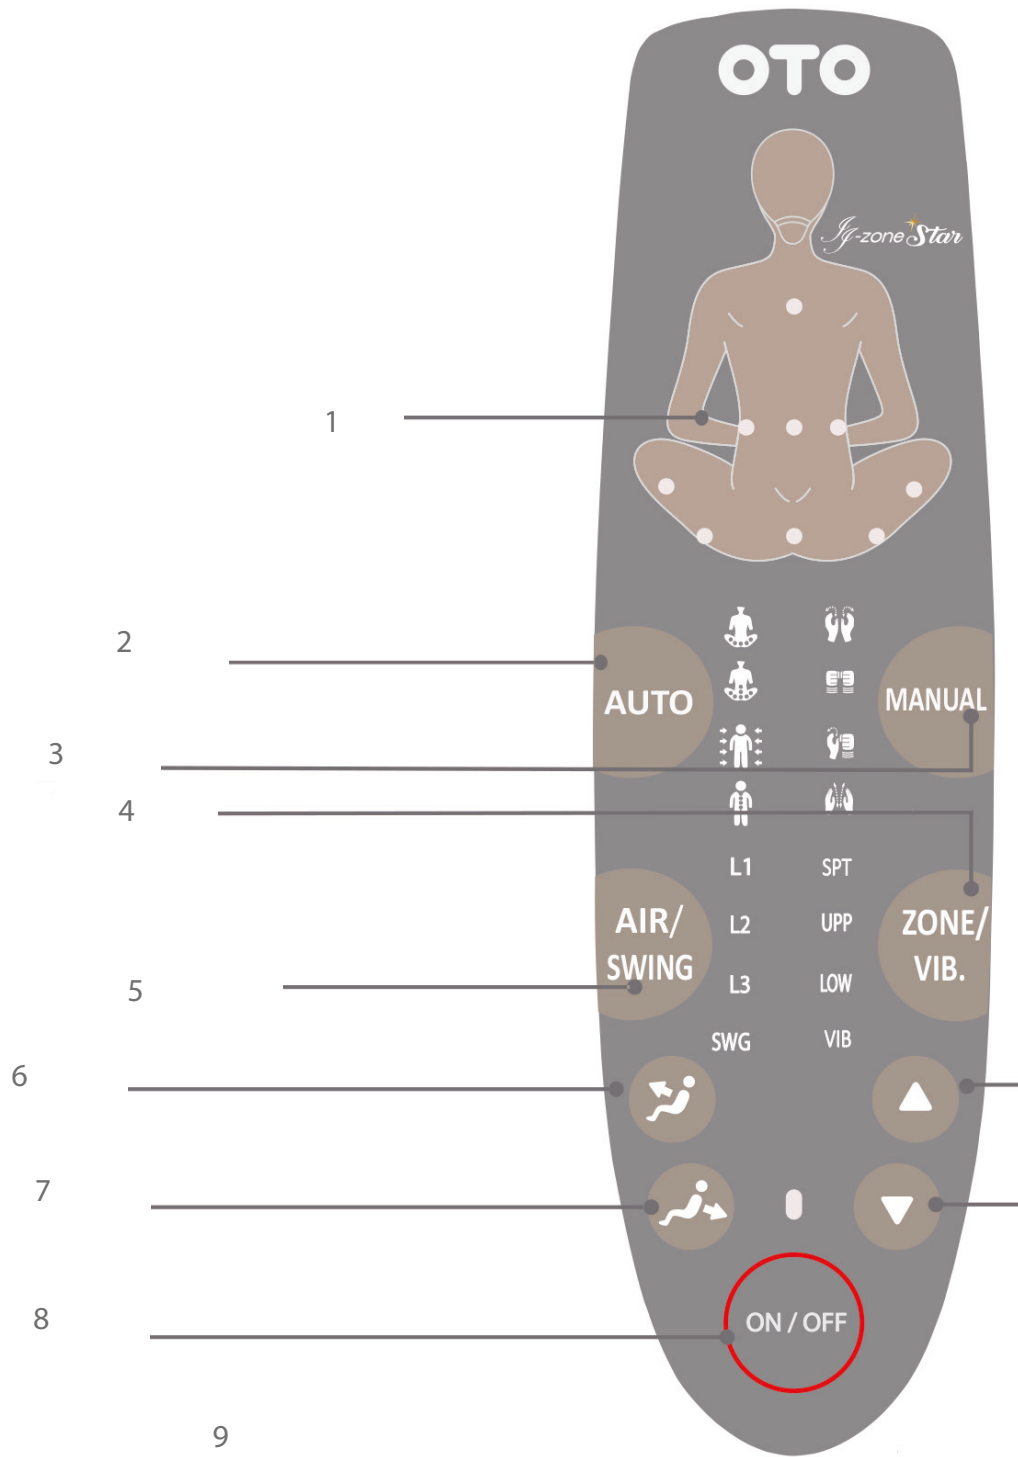

No.	Button	Description
1	Massage areas	<ul style="list-style-type: none"> <li>+ The individual massage areas are illustrated here. The individual massage areas are illustrated here.</li> </ul>
2	Automatic Programmes	<p>The automatic programmes are a prefabricated sequence of individual massage functions, which you can then select according to the desired body area.</p> <p><b>ⓘ NOTICE</b></p> <ul style="list-style-type: none"> <li>+ The automatic program is stopped.</li> <li>+ You can choose from four automatic programmes: <ul style="list-style-type: none"> <li>+ buttock</li> <li>+ hips</li> <li>+ general Relaxation</li> <li>+ spinal area</li> </ul> </li> </ul>
3	Manual Programmes	<p>In contrast to the automatic programmes, here you do not select the specific body area, but the type of massage. Finer adjustments can be made with other buttons, which will be explained later in this section.</p> <p><b>ⓘ NOTICE</b></p> <ul style="list-style-type: none"> <li>+ If you select one of these programmes, no automatic programme can be selected.</li> <li>+ You can choose from four automatic programmes: <ul style="list-style-type: none"> <li>+ knead</li> <li>+ pound</li> <li>+ knead and pound</li> <li>+ rub</li> </ul> </li> </ul>
4	Zone massage + Vibration	<p>With this function, you can adapt the individual manual programmes even more precisely to your needs.</p> <p><b>ⓘ NOTICE</b></p> <ul style="list-style-type: none"> <li>+ This function can only be selected for manual programmes.</li> <li>+ You can choose from three different functions: <ul style="list-style-type: none"> <li>+ lower body</li> <li>+ upper body</li> <li>+ spot massage</li> </ul> </li> <li>+ The fourth option is a vibration function on the foot section. Press and hold the button for 2 seconds.</li> </ul>

5	Air Pressure Massage + Cradle-Swing	<p>With this function, you can adapt the individual manual programmes even more precisely to your needs.</p> <p><b>ⓘ NOTICE</b></p> <ul style="list-style-type: none"> <li>+ This function can only be selected for manual programmes.</li> <li>+ You have the choice of three different intensities: <ul style="list-style-type: none"> <li>+ L1: low</li> <li>+ L2: medium</li> <li>+ L3: high</li> </ul> </li> <li>+ As a fourth option, a cradle swing programme is available here. Press and hold the button for 2 seconds.</li> </ul>
6	Backrest (upwards)	<p><b>ⓘ NOTICE</b></p> <p>This function is not possible during the Cradle-Swing programme.</p> <ul style="list-style-type: none"> <li>+ Press this button to move the backrest to its upright position</li> </ul>
7	Backrest (downwards)	<p><b>ⓘ NOTICE</b></p> <p>This function is not possible during the Cradle-Swing programme.</p> <ul style="list-style-type: none"> <li>+ Press this button to move the backrest to its horizontal position</li> </ul>
8	On/Off	<ul style="list-style-type: none"> <li>+ Press this button to start the unit.</li> <li>+ Press this button again to cancel the programmes and return to standby mode</li> </ul>
9	Adjustment of the massage zone	<p><b>ⓘ NOTICE</b></p> <p>This function is only possible during the spot massage.</p> <ul style="list-style-type: none"> <li>+ Press these buttons to adjust the position of the massage rollers up or down.</li> </ul>



## 4.1 General Instructions

### ⚠ WARNING

- + The storage location should be chosen so that improper use by third parties or children can be prevented.
- + If your equipment does not have transportation wheels, the equipment must be disassembled before transportation.

### ▶ ATTENTION


- + Make sure that the equipment is protected from moisture, dust and dirt in the selected storage location. The storage location should be dry and well ventilated and have a constant ambient temperature between 10°C and 35°C.

## 4.2 Transportation Wheels

### ▶ ATTENTION

If you want to transport your equipment over particularly sensitive and soft floor coverings, such as parquet, planks or laminate, lay out the transport route with cardboard or similar to avoid possible floor damage.

1. Stand behind the equipment and pull it towards yourself until the weight is transferred to the transportation wheels. After that, you easily can move the equipment to a new position. For long transport distances the equipment should be disassembled and safely packed.
2. Select the new location by following the instructions in the section 1.4 of this manual.

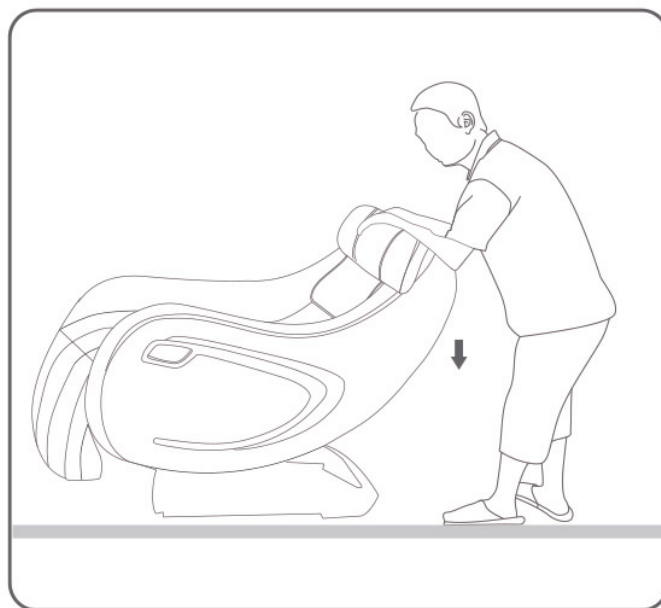

## 5.1 General Instructions

### WARNING

- + Do not make any improper changes to the equipment.

### CAUTION

- + Damaged or worn components may affect your safety and the life of the equipment. Therefore, immediately replace damaged or worn components. In such a case, contact the contract partner. The equipment must not be used until it has been repaired. If necessary, use only original spare parts.

### ATTENTION

- + In addition to the instructions and recommendations for maintenance and care given here, additional service and/or repair work may be necessary; this must only be carried out by authorised service technicians.

## 5.2 Faults and Fault Diagnosis

The equipment undergoes regular quality controls during production. Nevertheless, faults or malfunctions may occur. Frequently, individual parts are responsible for these disturbances, an exchange is usually sufficient. Please refer to the following overview for the most common errors and how to correct them. If the equipment still does not function properly, contact your contract partner.

Fault	Cause	Solution
The device does not work	Interrupted power connection	+ Check cable connection + Power switch to on
	The automatic timer has expired	To switch the device on again, press the On/Off button
	Excessive use of the device	Disconnect the device from the mains socket and allow the device to cool down for at least 60 minutes before using it again.
	Heavy load on the device	Reduce the load on the device
The device is unusually warm	Excessive use of the device	Disconnect the device from the mains socket and allow the device to cool down for at least 60 minutes before using it again.
The device makes noise	Noise caused by the mechanical parts of the device	Noise during use of the device is normal. If the noises sound unusual (crackling, squeaking etc.), contact your contract partner.

### 5.3 Maintenance and Inspection Calendar

To avoid damage from body sweat, the equipment must be cleaned with a damp towel (no solvents!) after each training session.

The following routine tasks must be performed at the specified intervals:

Part	Weekly	Monthly	Quarterly	Half-yearly	Yearly
Cushion	C		I		
Plastic covers	C	I			
Cable connections		I			
Legend: C = clean; I = inspect					

## 6 DISPOSAL

At the end of its operational life, this equipment cannot be disposed of in normal household waste. Instead, it must be disposed of via an electricals recycling centre. Further information can be obtained from your local authority's recycling service.




The materials can be recycled as per their symbols. Through the reuse, recycling of materials or other forms of recovery of old equipment, you make an important contribution to the protection of the environment.

In order to provide you with the best possible service, please have the model name, article number, serial number, exploded drawing and parts list ready. The corresponding contact options can be found in chapter 9 of this operating manual.

**NOTICE**

The serial number of your equipment is unique. It's located on a white sticker. The exact position of this sticker is shown in the following illustration.

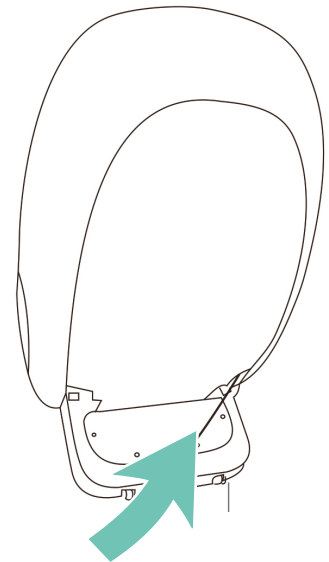

Enter the serial number in the appropriate field.

**Serial number:**

**Brand / Category:**

**Model Name:**

**Article Number:**

Training equipment from Taurus® is subject to strict quality control. However, if a fitness equipment purchased from us does not work perfectly, we take it very seriously and ask you to contact our customer service as indicated. We are happy to help you by phone via our service hotline.

### **Error Descriptions**

Your fitness equipment is developed for long-term, high-quality training. However, should a problem arise, please first read the operating instructions. For further assistance, please contact your contract partner or call our service hotline. To ensure your problem is solved as quickly as possible, please describe the defect as exactly as possible.

In addition to the statutory warranty, we provide a warranty for every fitness equipment purchased from us according to the following provisions.

**Your statutory rights are not affected.**

### **Warranty**

The warranty is the first/original buyer and/or any person who received a newly purchased product as a gift from the original buyer.

#### **Warranty period**

The warranty periods, shown on our web shop, begin on delivery of the fitness equipment. The respective warranty periods for your equipment can be found on its product website.

### **Repair Costs**

According to our choice, there will either be a repair, a replacement of individual damaged parts or a complete replacement. Spare parts, that have to be mounted while assembling the equipment, have to be replaced by the warranty personally and are not a part of repair. After the expiration of the warranty period for repair costs, a pure parts warranty applies, which does not include the repair, installation and delivery costs.

### **The terms of use are defined as follows:**

- + Home use: solely for private use in private households up to 3 hours per day
- + Semi-professional use: up to 6 hours per day (e. g. rehabilitation centres, hotels, clubs, company gyms)
- + Professional use: more than 6 hours per day (e. g. commercial gyms)

### **Warranty Service**

Within the warranty period, equipment which develops faults as a result of material or manufacturing defects, will be repaired or replaced at our discretion. Ownership of equipment or parts of equipment which have been replaced is transferred to us. The warranty period is not extended nor does a new warranty period begin following repair or replacement under the warranty.



## Warranty Conditions

For the warranty to be valid, the following steps must be taken:

Please contact our customer service by email or phone. If the product under warranty has to be sent in for repair, the seller bears costs. After expiry of the warranty, the buyer bears the costs of transport and insurance. If the fault is covered by our warranty, you will receive a new or repaired equipment in return.

### Warranty claims are invalid in case of damage resulting from:

- + misuse or improper handling
- + environmental influences (moisture, heat, electrical surge, dust, etc.)
- + failure to follow the current safety measures for the equipment
- + failure to follow the operating instructions
- + use of force (e. g. hitting, kicking, falling)
- + interventions which were not carried out by one of our authorized service centres
- + unauthorised repair attempts

### Proof of Purchase and Serial Number

Please make sure that you are able to provide the appropriate receipt when claiming on your warranty. So that we can clearly identify the model of your equipment, and for the purposes of our quality control, you will need to give the serial number of your equipment, when contacting the service team. Where possible please have your serial number and your customer number ready when you call our service hotline. It will help us to deal with your request swiftly.

If you cannot find the serial number on your fitness equipment, our service team is at your disposal to offer further information.

### Service outside of the Warranty Period

We are also happy to issue an individual cost estimate if there is a problem with your fitness equipment after the warranty has expired, or in cases which do not fall under the terms of the warranty, e. g. normal wear and tear. Please contact our customer service team to find a quick and cost-effective solution to your problem. In such a case you will be responsible for the delivery costs.

### Communication

Many problems can be solved just by speaking to us as your specialist supplier. We know how important it is to you as a user of the fitness equipment to have problems solved quickly and simply, so you can enjoy working out with minimal interruption. For that reason, we also want to resolve your queries quickly and in a straightforward manner. Thus, please always keep your customer number and the serial number of the faulty equipment handy.



DE	DK	FR
<p><b>TECHNIK</b></p> <p>☎ +49 4621 4210-900 ☎ +49 4621 4210-698 ✉ technik@sport-tiedje.de 🕒 Öffnungszeiten entnehmen Sie unserer Homepage.</p> <p><b>SERVICE</b></p> <p>☎ 0800 20 20277 (kostenlos) ✉ info@sport-tiedje.de 🕒 Öffnungszeiten entnehmen Sie unserer Homepage.</p>	<p><b>TEKNIK OG SERVICE</b></p> <p>☎ 80 90 16 50 +49 4621 4210-945 ✉ info@fitshop.dk 🕒 Åbningstider kan findes på hjemmesiden.</p>	<p><b>TECHNIQUE &amp; SERVICE</b></p> <p>☎ +33 (0) 172 770033 +49 4621 4210-933 ✉ service-france@fitshop.fr 🕒 Vous trouverez les heures d'ouverture sur notre site Internet.</p>
	PL	BE
	<p><b>TECHNIKA I SERWIS</b></p> <p>☎ 22 307 43 21 +49 4621 42 10-948 ✉ info@fitshop.pl 🕒 Godziny otwarcia można znaleźć na stronie głównej.</p>	<p><b>TECHNIQUE &amp; SERVICE</b></p> <p>☎ 02 732 46 77 +49 4621 42 10-932 ✉ info@fitshop.be 🕒 Vous trouverez les heures d'ouverture sur notre site Internet.</p>

UK	NL	INT
<p><b>TECHNICAL SUPPORT</b></p> <p>☎ +44 141 876 3986 ✉ support@powerhousefitness.co.uk</p> <p><b>SERVICE</b></p> <p>☎ +44 141 876 3972 🕒 You can find the opening hours on our homepage.</p>	<p><b>TECHNISCHE DIENST &amp; SERVICE</b></p> <p>☎ +31 172 619961 ✉ info@fitshop.nl 🕒 De openingstijden vindt u op onze homepage.</p>	<p><b>TECHNICAL SUPPORT &amp; SERVICE</b></p> <p>☎ +49 4621 4210-944 ✉ service-int@sport-tiedje.de 🕒 You can find the opening hours on our homepage.</p>
	AT	CH
	<p><b>TECHNIK &amp; SERVICE</b></p> <p>☎ 0800 20 20277 (Freecall) +49 4621 42 10-0 ✉ info@sport-tiedje.at 🕒 Öffnungszeiten entnehmen Sie unserer Homepage.</p>	<p><b>TECHNIK &amp; SERVICE</b></p> <p>☎ 0800 202 027 +49 4621 42 10-0 ✉ info@sport-tiedje.ch 🕒 Öffnungszeiten entnehmen Sie unserer Homepage.</p>

Please find a detailed overview including address and opening hours for all stores of the Sport-Tiedje Group in Germany and abroad on the following website:

[www.sport-tiedje.com/en/stores](http://www.sport-tiedje.com/en/stores)



# WE LIVE FITNESS

## WEBSHOP AND SOCIAL MEDIA

Sport-Tiedje is Europe's largest specialist store for home fitness equipment with currently over 70 stores and one of the world's most renowned online mail order companies for fitness equipment. Private customers order via the 25 web shops in the respective national language or have their desired equipment assembled on site. In addition, the company supplies fitness studios, hotels, sports clubs, companies and physio practices with professional equipment for endurance and strength training.

Sport-Tiedje offers a wide range of fitness equipment from renowned manufacturers, high-quality in-house developments and comprehensive services, such as a build-up service and sports scientific advice before and after the purchase. The company employs numerous sports scientists, fitness trainers and competitive athletes.

Visit us also on our social media platforms or our blog!



[www.sport-tiedje.co.uk](http://www.sport-tiedje.co.uk)  
[www.sport-tiedje.de/blog](http://www.sport-tiedje.de/blog)



[www.facebook.com/SportTiedje](http://www.facebook.com/SportTiedje)



[www.instagram.com/sporttiedje](http://www.instagram.com/sporttiedje)



[www.youtube.com/user/sporttiedje](http://www.youtube.com/user/sporttiedje)

**TAURUS**

 cardiostrong

*BODYCRAFT*

 cardiojump

 **DUKEFITNESS**

**DARWIN**





Notes

Notes



