

NOTE:
Please read all instructions
carefully before using this
product

Table of Contents

Safety Notice

Important Assembly
Information

Care and Maintenance

Parts List

Warranty

Ordering Parts


Model
WALK N' RUN
CAMATR-2202

Retain This Manual
for Reference

OPERATING
INSTRUCTIONS
MANUAL



FOLDING TREADMILL
WALK N' RUN (CAMATR-2202)

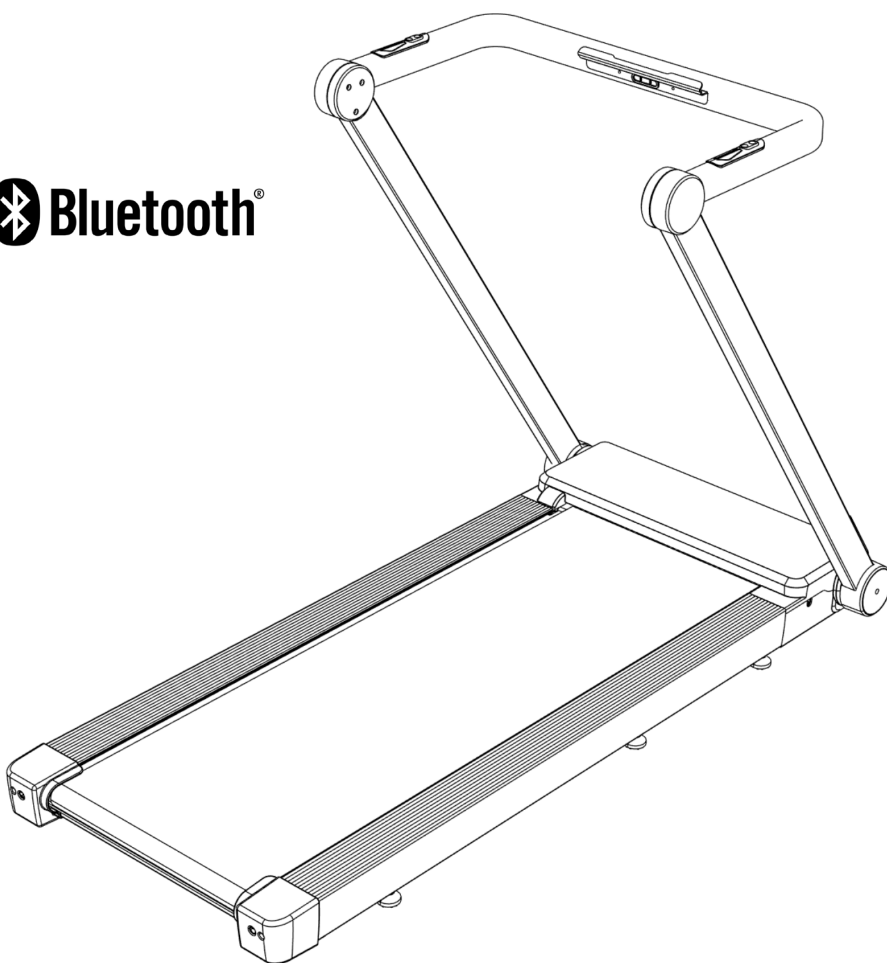

IMPORTANT: Please read this manual before commencing
assembly of this product.

TABLE OF CONTENTS

BEFORE YOU BEGIN.....	2
ELECTRICAL SAFETY INSTRUCTIONS.....	3
IMPORTANT SAFETY INSTRUCTIONS	4
IMPORTANT OPERATING INSTRUCTIOONS.....	5
PARTS LIST	6
ASSEMBLE AND UNFOLD THE TREADMILL.....	7
IMPORTANT ELECTRICAL INFORMATION.....	14
WALKING MODE AND RUNNING MODE.....	15
TOPERATION GUIDE	16
EXPLODED DIAGRAM.....	26
PARTS LIST	28
WARRANTY.....	30

BEFORE YOU BEGIN

Thank you for selecting the MARCY WALK N' RUN CAMATR-2202 TREADMILL. For your safety and benefit, please read this manual carefully before using the equipment. As a manufacturer, we are committed to providing you complete customer satisfaction. If you have any questions, or find there are missing or damaged parts, please contact our Customer Solutions Department who will offer immediate assistance.

Pure-Tec Limited
www.puretecfitness.com

Email: service@puretecfitness.com

Electrical Safety Instruction

When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using this treadmill.

DANGER—To reduce the risk of electrical shock: Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

WARNING—To reduce the risk of burns, fire, electric shock, or injury to persons:

1. The treadmill should never be left unattended when plugged in. Unplug from the outlet when not in use and before putting on or removing parts.
2. Use this treadmill only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this treadmill if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Replace the damaged cord or plug with a new one from the manufacturer or its service agent or return this treadmill to a service center for examination or repair.
4. Keep the cord away from heated surfaces.
5. Never operate the treadmill with the air openings blocked. Keep the air open free of lint, hair, and alike items. Never drop or insert any object into any opening.
6. Do not use it outdoors.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. To disconnect, turn the treadmill off, then remove plug from outlet.
9. Connect this treadmill to a properly grounded outlet only. See grounding instructions.
10. This appliance is not intended for use by people with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep children under the age of 13 away from this machine.
11. Do not carry this appliance by supply cord or use cord as a handle.
12. Household use only.
13. Remove control box (or key, or safety pin, as applicable) when not in use and store them out of reach of children.

CAUTION—To avoid injury, use extreme caution when stepping onto or off a moving belt.
Read instruction manual before using.

Important Safety Instruction

To ensure your safety and health, please use this equipment correctly. It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintained, and used properly. It is your responsibility to ensure that all users of the equipment are informed of all warnings and precautions.








1. Before starting any exercise program, you should consult your physician to determine if you have any medical or physical conditions that could put your health and safety at risk or prevent you from using the equipment properly. Your physician's advice is essential if you are taking medication that affects your heart rate, blood pressure or cholesterol level.
2. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, shortness of breath, dizziness, or feelings of nausea. If you do experience any of these conditions, you should consult your physician before continuing with your exercise program.
3. Keep children and pets away from the equipment. The equipment is designed for adults use only.
4. Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have more than 240cm of free space behind it and 60cm on each side. Do not place the treadmill on any surface that blocks air openings. To protect the floor or carpet from damage, place a mat under the treadmill.
5. Ensure that all nuts and bolts are securely tightened before using the equipment. The safety of the equipment can only be maintained if it is regularly examined for damage and/or wear and tear.
6. Always use the equipment as indicated. If you find any defective components while assembling or checking the equipment, or if you hear any unusual noises coming from the equipment during exercise, discontinue use of the equipment immediately and do not use until the problem has been rectified.
7. Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may become entangled in the equipment.
8. Do not place fingers or objects into the moving parts of the equipment.
9. The equipment is not suitable for therapeutic use.
10. To avoid bodily injury and/or damage to the product or property, proper lifting and moving is required.
11. Your product is intended for use in cool, dry conditions. You should avoid storage in extreme cold, hot or damp areas as this may lead to corrosion and other related problems.
12. This equipment is designed for indoor and home use only; it is not intended for commercial use.
13. If you don't feel well or in case of any emergency, grab the handlebars with both hands and jump onto the side rails to avoid injury.

SAVE THESE INSTRUCTIONS

Important Operating Instructions

1. Insert the power plug directly into the socket.
2. Read the manual before operating the equipment.
3. Changes in speed do not occur immediately.
4. While on the treadmill, move with caution as distractions may cause you to lose balance and stray from walking in the center of the belt. This may result in serious injury.
5. This unit starts at a low speed. To begin using, stand on the side rails while it starts up, then step onto the belt once it's in motion.
6. A safety key is provided for emergency use. The treadmill will function only if the safety key is inserted into the computer console. In case of emergency, remove the safety key to immediately stop the belt and shut off the treadmill. The display screen will reset once the safety key is reinserted.
7. This equipment is designed for adult use only! Children should not be allowed to use or play near this equipment. When present, children should always be supervised by an adult.
8. Women who are pregnant or nursing should consult a physician before attempting to begin any exercise program.
9. Always stay hydrated during and after exercise.
10. Do not lift the treadmill.
11. The belt must be lubricated before the first use.


ASSEMBLY PARTS LIST AND TOOLS REQUIRED

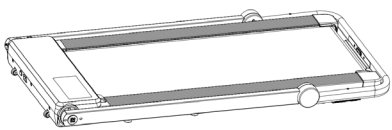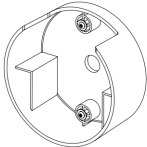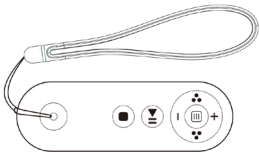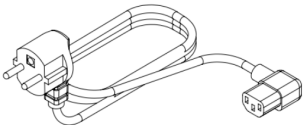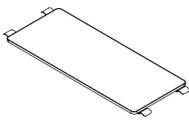	Part No.	Description	Quantity
		Treadmill frame	1
	16	Upright side cover	2
	87	Lubrication oil	1
	70+78	Remote control with rope	1
	82	Power wire	1
	67	Magnet	1
	81	Safety key	1
	86	Allen wrench	1
	85	L-shaped wrench	1
	64	Desktop	1


ASSEMBLE & UNFOLD THE TREADMILL

STEP 1: Attach round magnet (No.67) to the right upright tube.


Place 2pcs of upright side covers (No.16) onto the L&R upright tubes, rotate them slightly to the right to ensure two covers are locked in position on the upright tubes.

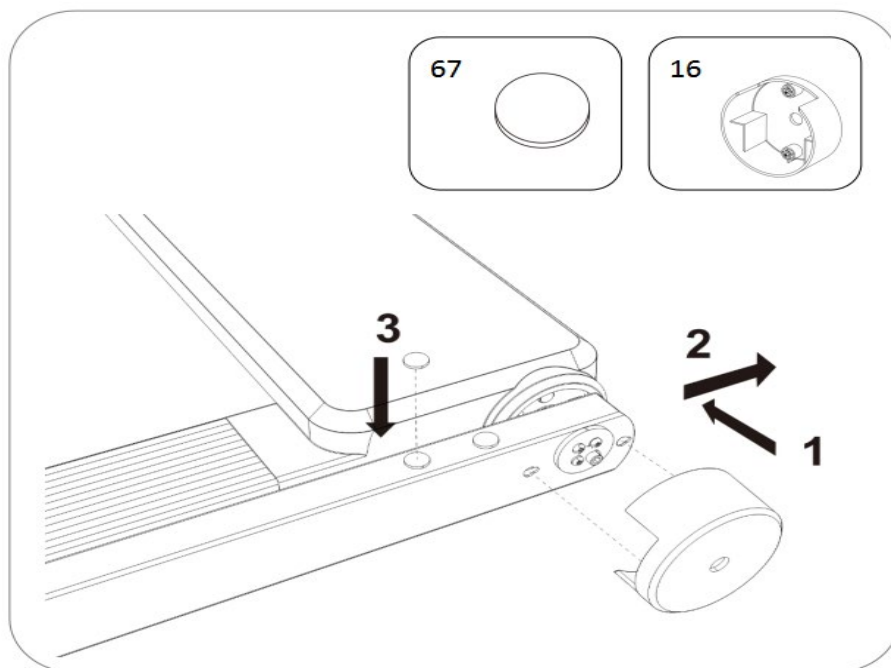


STEP 2: Using L-shaped wrench (No.85), turn the bolt on the right upright tube in an anticlockwise direction to unlock.

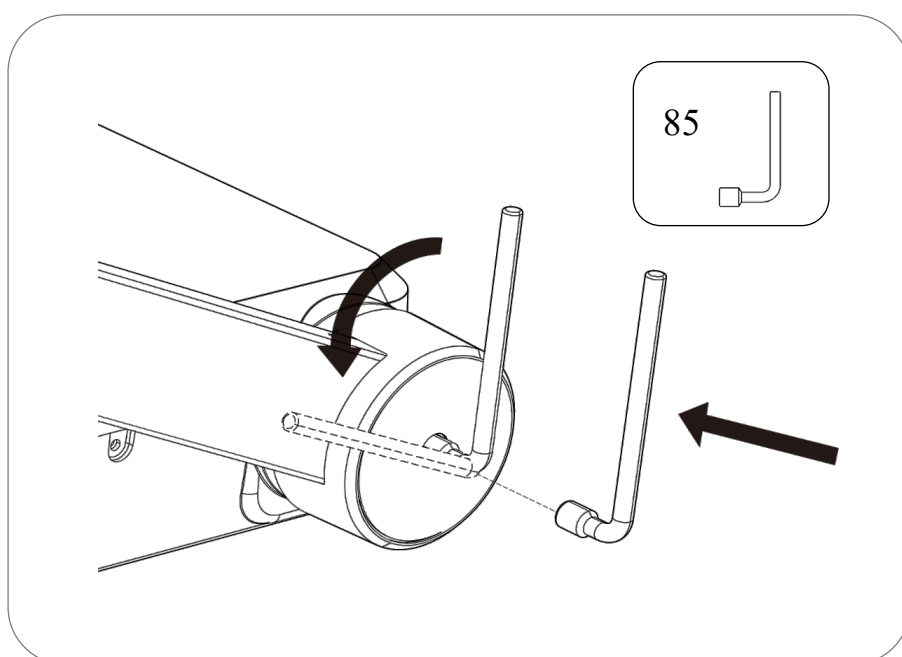


STEP 3: Lift the upright tube when machine is unlocked.

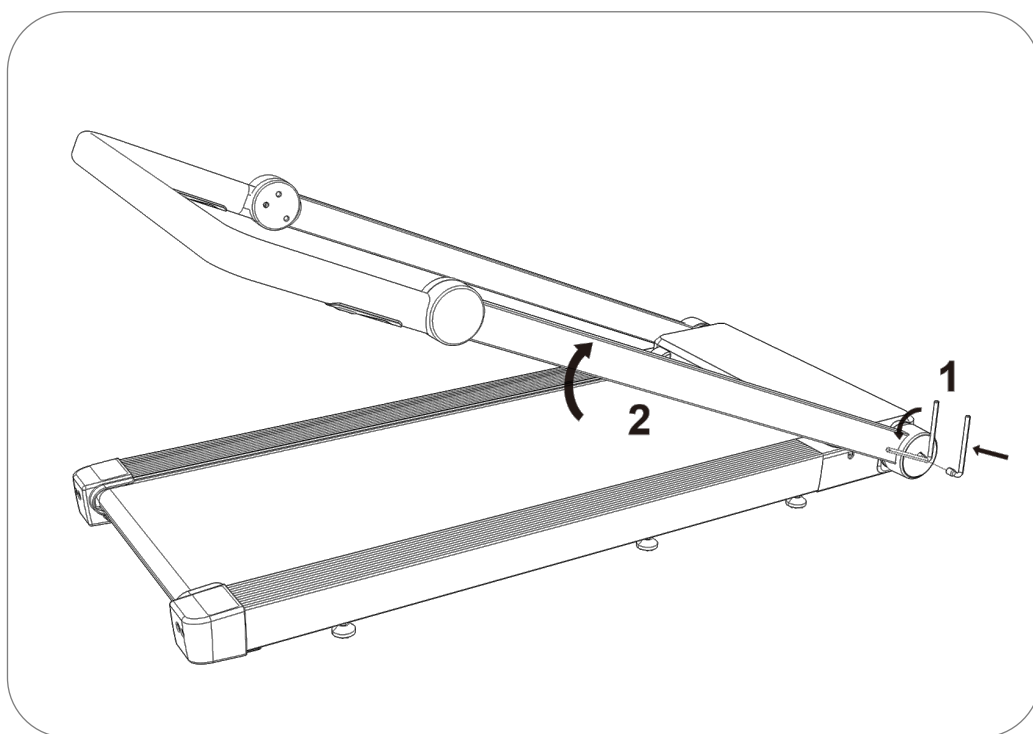


STEP 4: Press the handlebar.

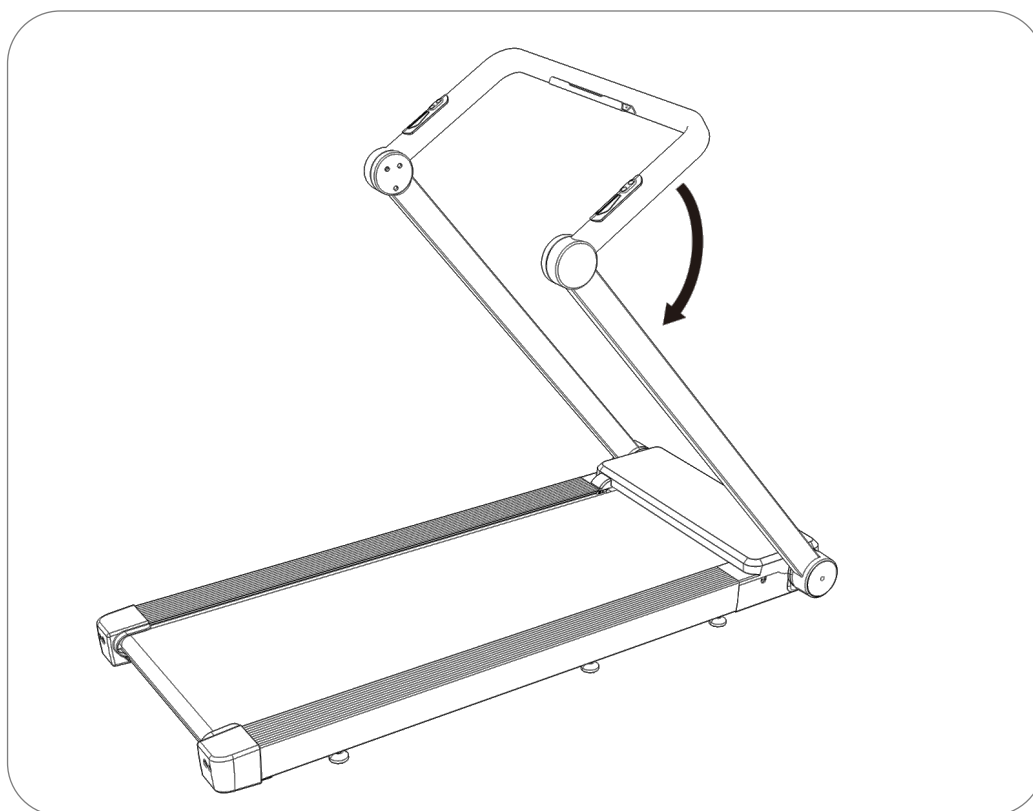


STEP 5: Lock the console. Using L-shaped wrench (No.85), turn the bolt on the left handlebar cover in clockwise direction to lock the console.

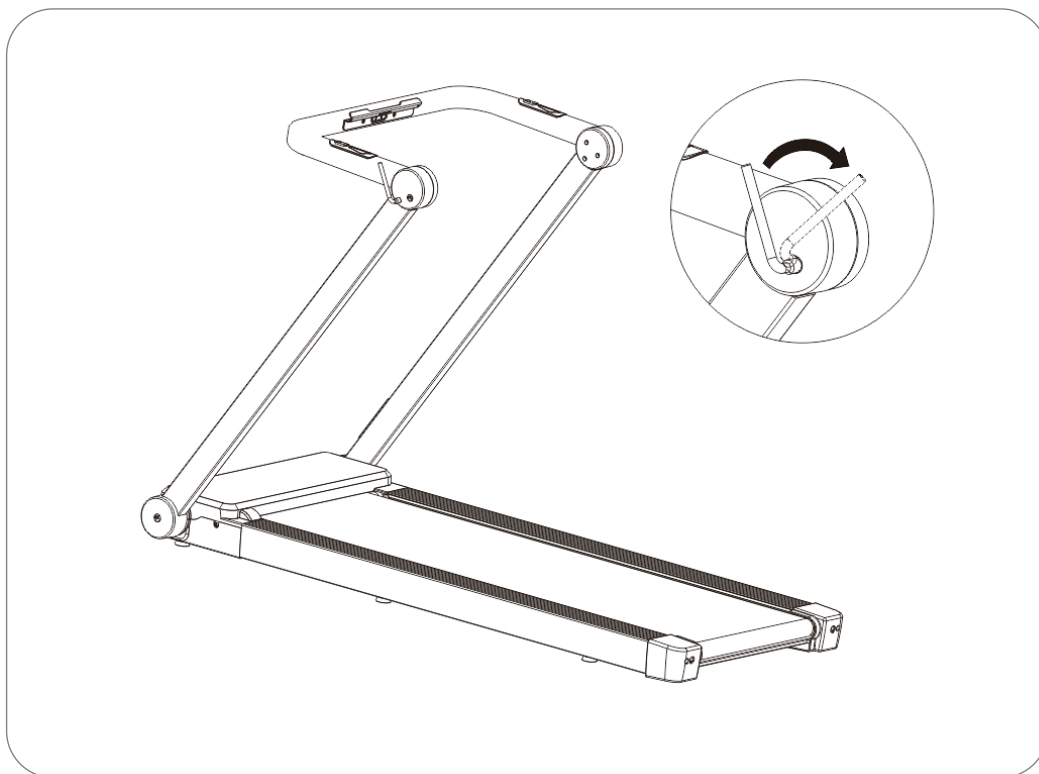

STEP 6: Attach the L-shaped wrench (No.85) to the round magnet to a(No.67).

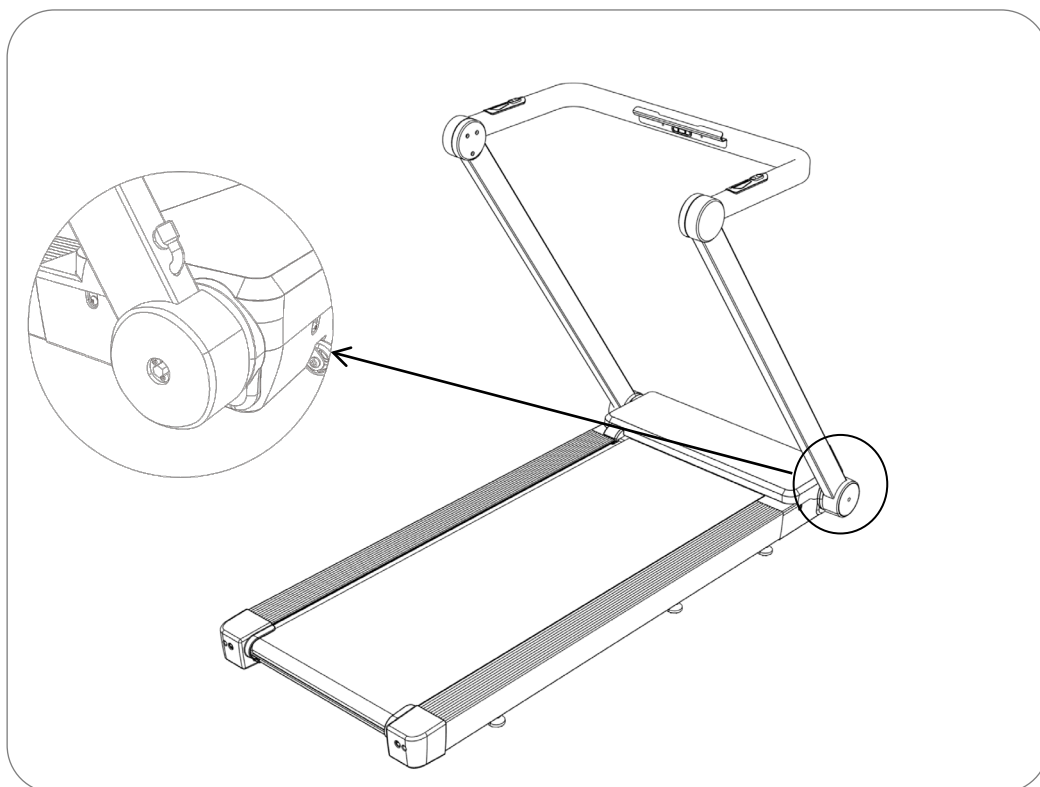


STEP 7: Insert the safety key.

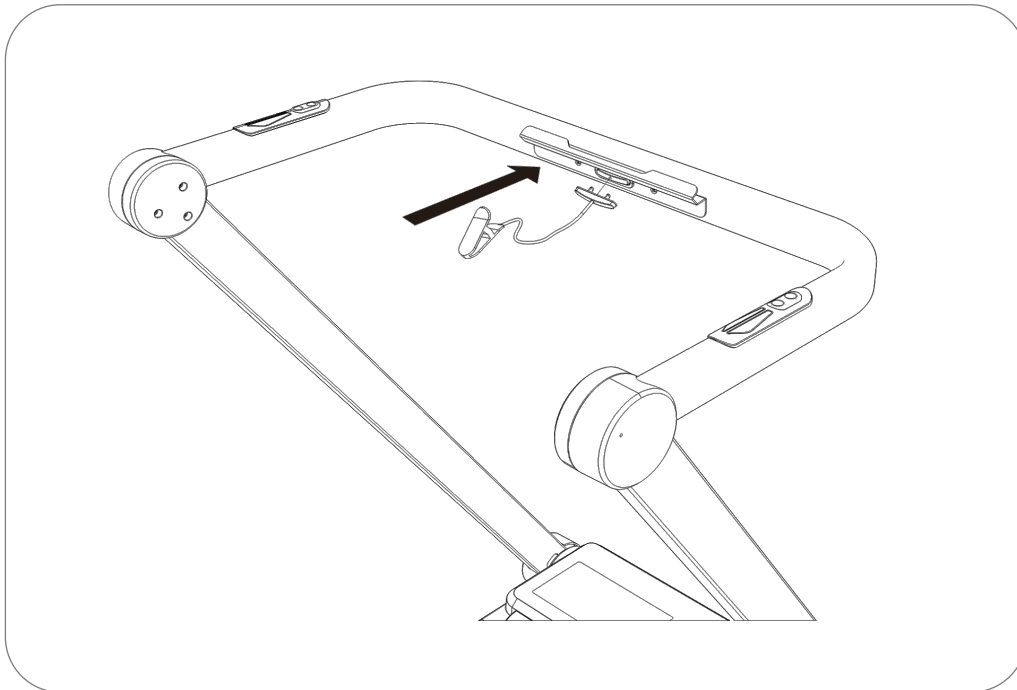


STEP 8: Desktop is an included part.

Put the desktop on handlebar in case you need it. We recommend using desktop only under walking mode.

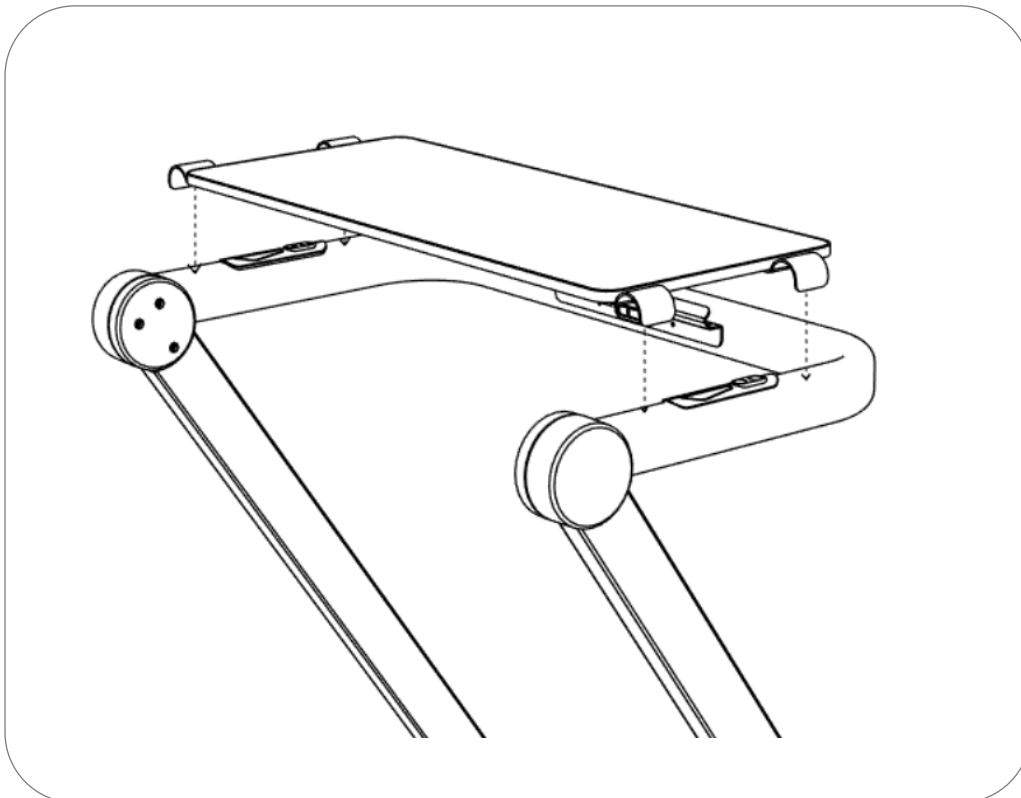


FOLD & MOVE THE TREADMILL


STEP 1: Unlock the console. Using L-shaped wrench (No.85), turn the bolt on the left handlebar cover in an anticlockwise direction to unlock the console.

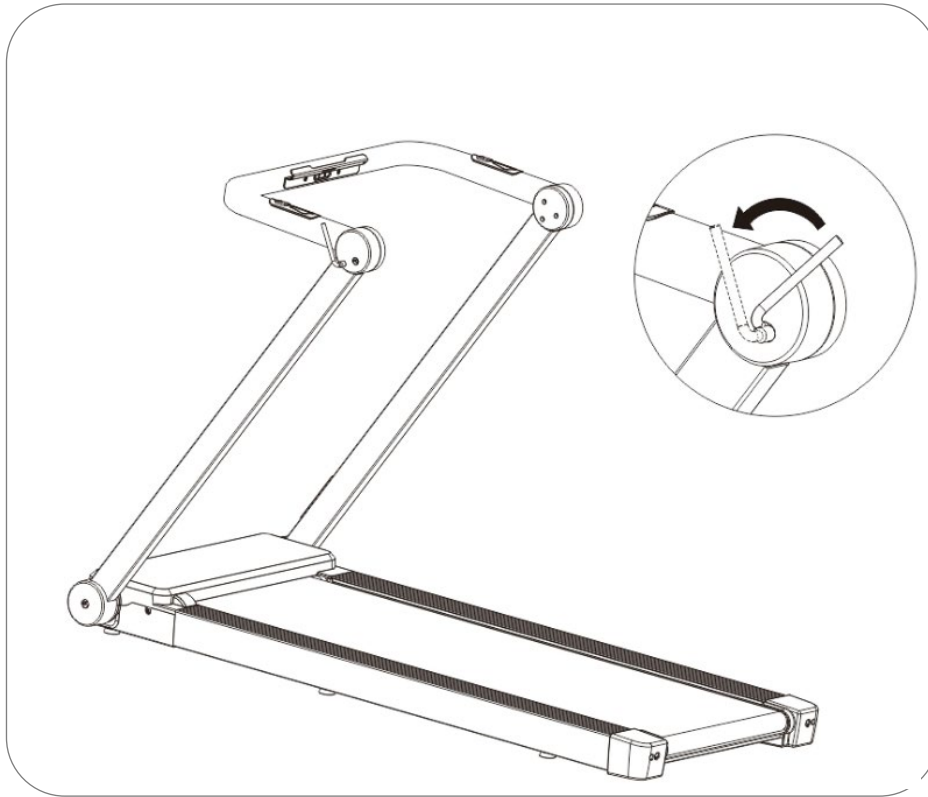


STEP 2: Lift the handlebar.

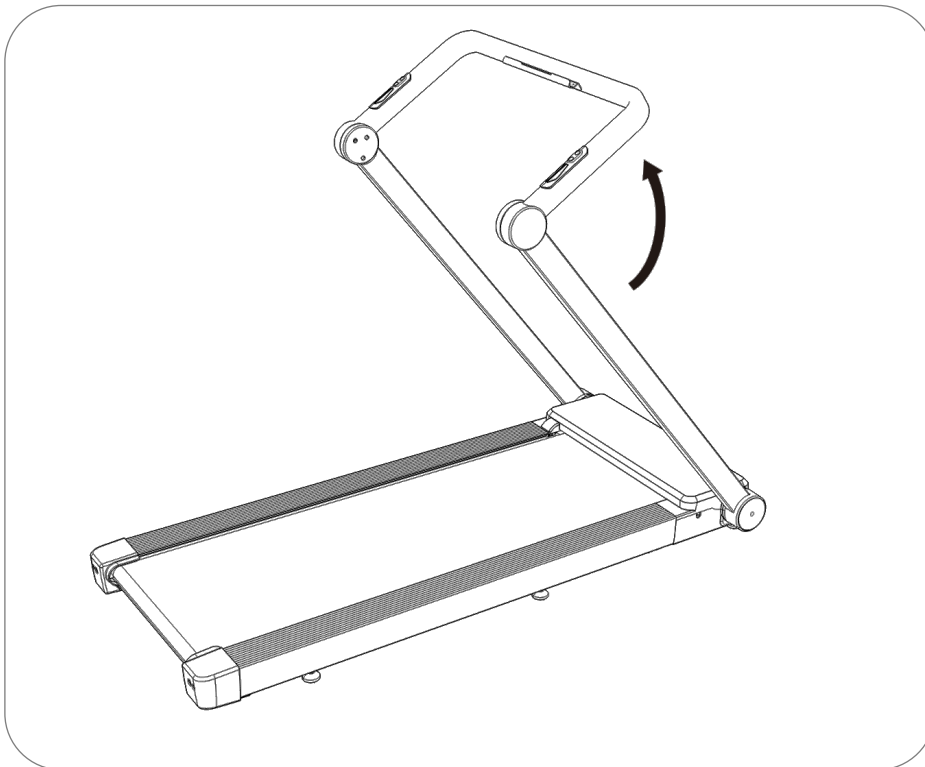


STEP 3: Hold the right upright tube and gently push it forward.

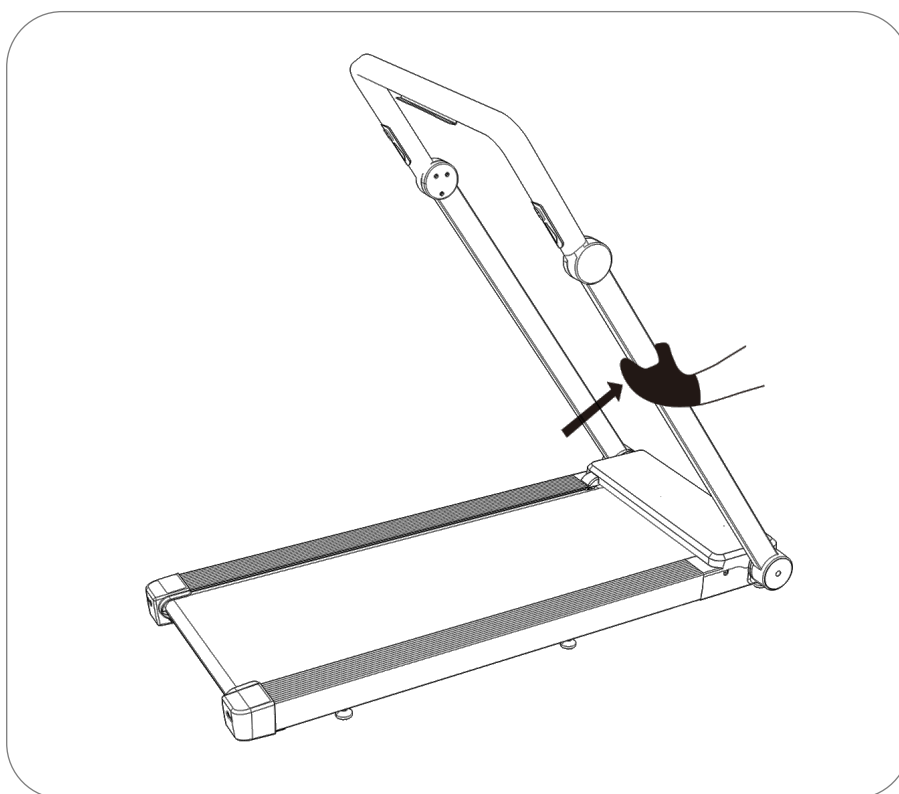


STEP 4: Using L-shaped wrench (No.85), turn the bolt on the right upright tube in an anticlockwise direction to unlock.

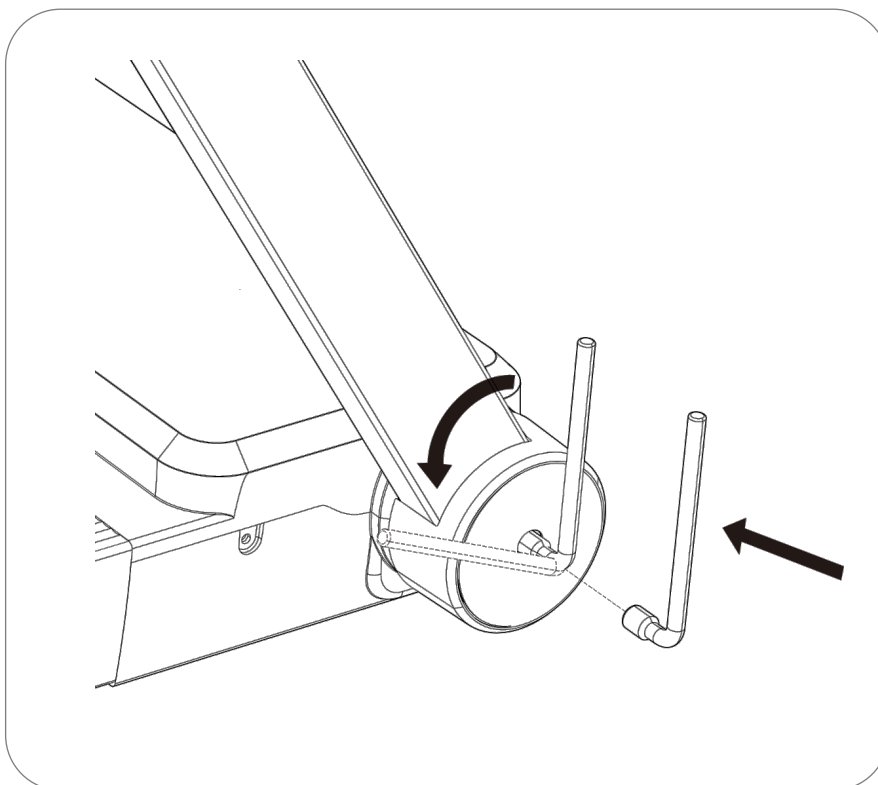

STEP 5: Fold the upright tubes down with hand to avoid sudden falling.

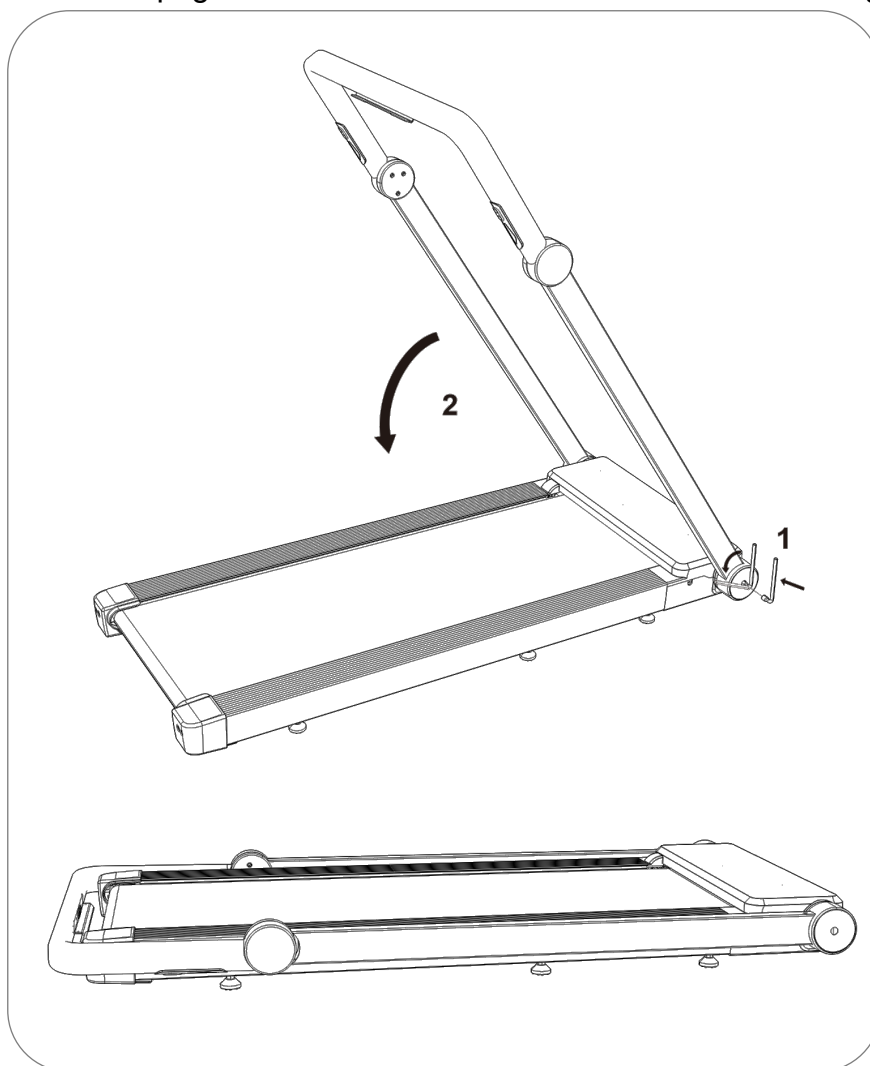

STEP 6: Lift up the back end of machine for moving.

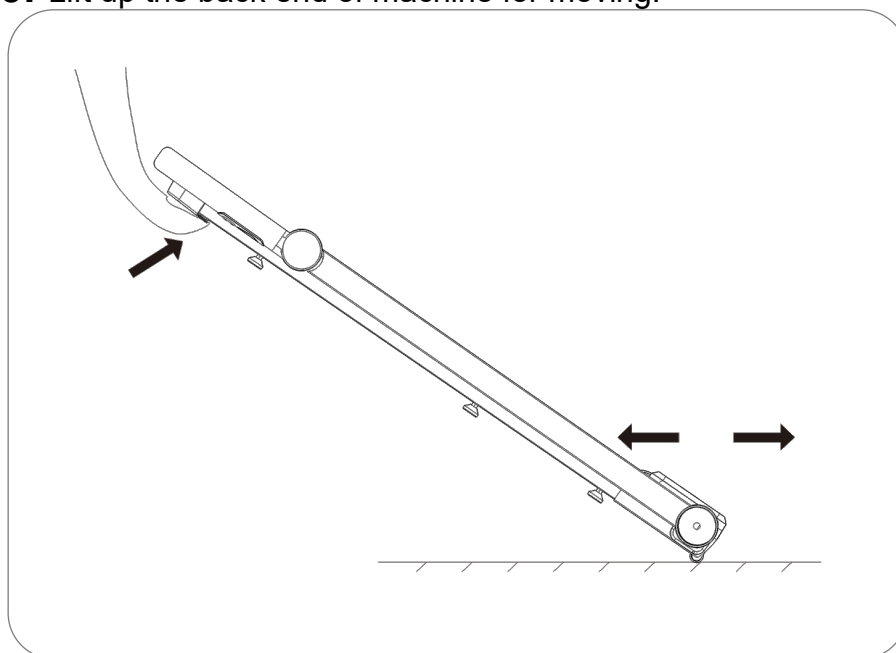

IMPORTANT ELECTRICAL INFORMATION

WARNING:

This treadmill requires the right power source to properly operate. For your safety, as well as the safety of others, please verify that the power source is correct before plugging the equipment. Any incorrect power source could cause significant damage to the equipment and our user.

GROUNDING METHODS:

This product must be grounded. Grounding provides the least resistance for electrical current and will reduce the risk of electric shock. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. Ensure that the product is connected to an outlet which contains the same configuration as the plug. Do not use an adaptor for this product.

This product is for use on a nominal circuit and has a grounding plug that looks like the plug illustrated in sketch A. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

DANGER:

Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a certified electrician if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product. If it will not fit the outlet, have a proper outlet installed by an electrician.

WARNING!


1. NEVER use a ground fault circuit interrupt (GFCI) wall outlet with this treadmill. Route the power cord away from any moving part of the treadmill including the elevation mechanism and transport wheels.
2. NEVER operate the treadmill using a generator or UPS power supply.
3. NEVER remove any cover without first disconnecting power.
4. NEVER expose the treadmill to rain or moisture. This treadmill is not designed for use outdoors, near pools or in any other high humidity environment.

WALKING MODE & RUNNING MODE

This machine can transfer between walking mode and running mode.


WLAKING MODE:

When machine is folded flat, it can be used as walking treadmill, during walking mode, the speed range is from 1.0-6 km/h.

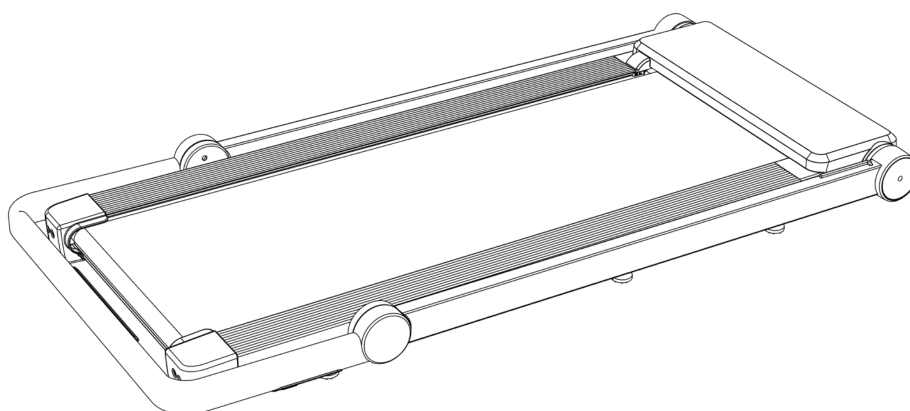


RUNNING MODE:

When machine is unfolded, it can be used as running treadmill, during running mode, the speed range is from 1.0-12 km/h.

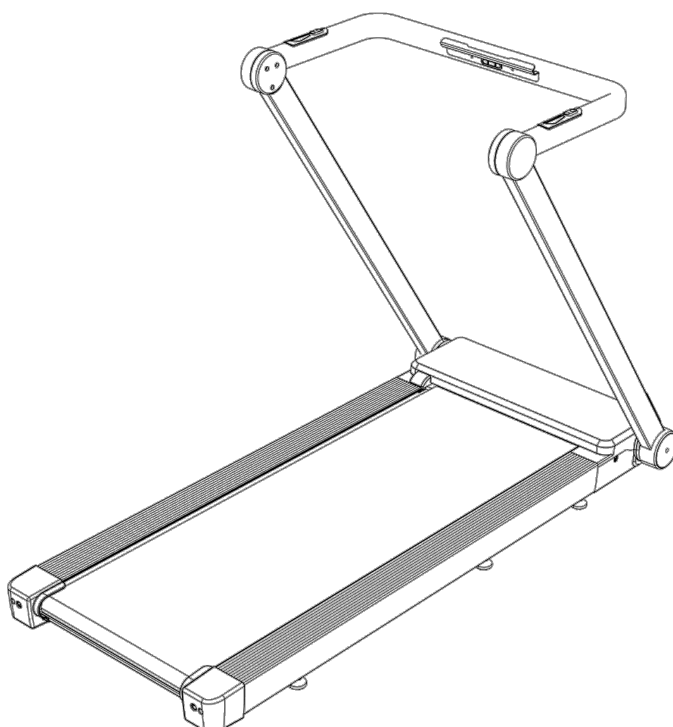


OPERATION GUIDE

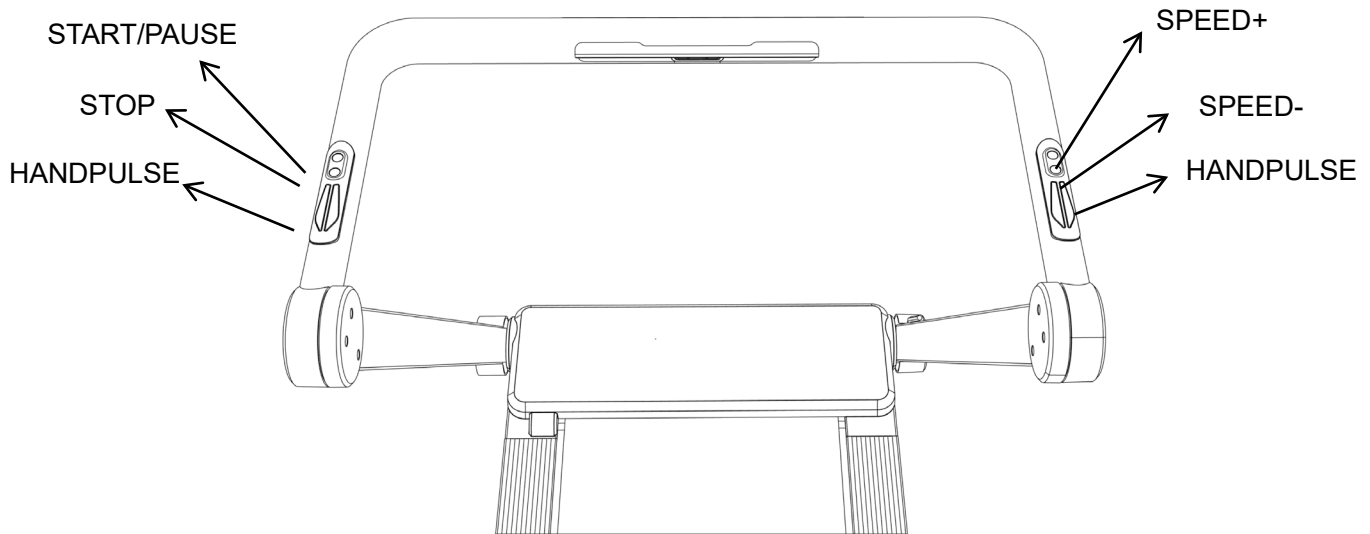

HANDLEBAR FUNCTION:


1. **START/PAUSE:** Press this button to start or pause, after pause, press this button again to restart.
2. **STOP:** Press this button to stop.
3. **SPEED +:** Press this button to increase the speed.
4. **SPEED -:** Press this button to reduce the speed.
5. **HANDPULSE:** Hold the hand pulse sensor by both hands, the display will show user's pulse value after about 5 seconds.

WINDOW DISPLAY:

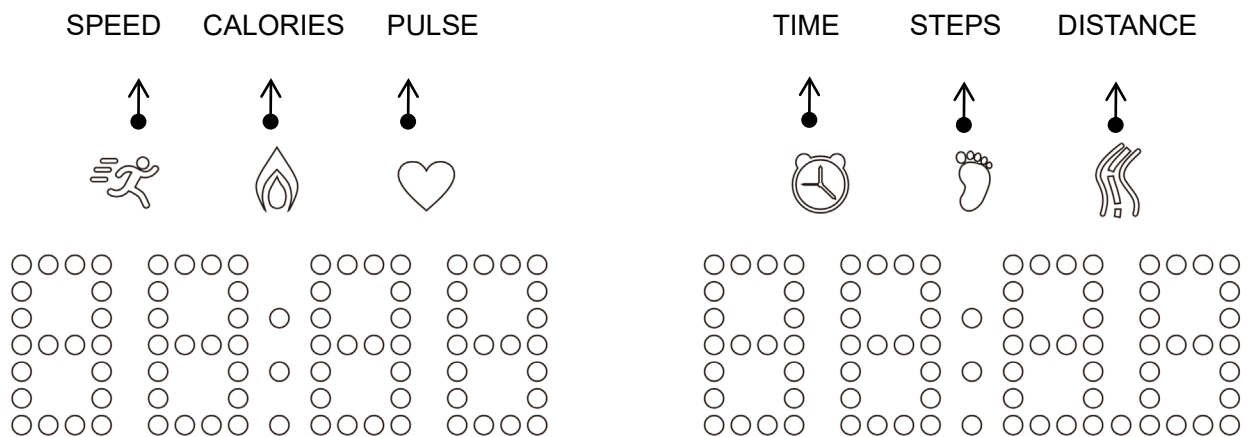

1. **SPEED:** Display current speed. Press SPEED+/- to adjust the speed of the machine.
When you fold down the upright tubes, the machine will be under walking mode, the speed range will be 1-6 km/h.
When you fold up the upright tubes, the machine will be under running mode, the speed range will be 1-12 km/h.
 2. **CALORIES:** Display the calories consumed.
 3. **PULSE:** Display the current pulse. Hold the hand pulse sensor by both hands, the console will show user's pulse value after about 5 seconds. (This data is just for reference and cannot be used as the medical data).
 4. **TIME:** Displays the time elapsed. Display starts at 0:00. When time elapsed reaches the maximum, the machine will continue running. It will start counting again from 0:00.
 5. **STEPS:** Displays steps that the user has walked.
 6. **DISTANCE:** Display current distance.
- TIME/STEPS/DISTANCE share the same window, will show in turn every 3 seconds.

REMOTE CONTROL:

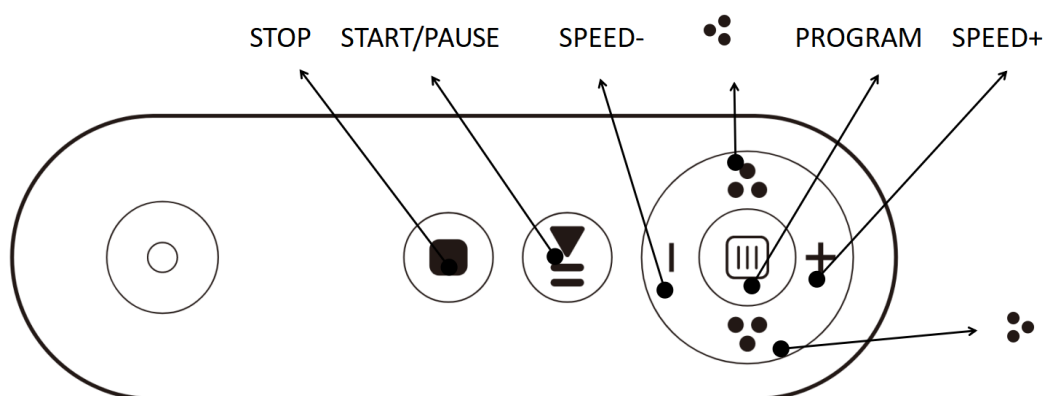

Note: included Button Battery CR2032L 3V Lithium. Pull the security tab out to connect the battery

1. **STOP**  : Press this button to stop, all data will come to 0 if you press this button.
2. **START/PAUSE**  : Press this button to start or pause, after pause, press this button again to restart.
3. **“SPEED —”**:
Under walking or running mode, press this button to decrease the speed.
Under standby mode, after choosing program, press this button to set time for program.
4. **“SPEED +”**:
Under walking or running mode, press this button to increase speed.
Under standby mode, after choosing program, press this button to set time for program.
5. **Speed quick button & Time count down**  :
 - 5.1 Under walking mode, press this button to set quick speed of 3 km/h.
 - 5.2 Under running mode, press this button to set quick speed of 5 km/h.
 - 5.3 Under standby mode, after choosing program, press this button will choose P1 to P9.
 - 5.4 Under standby mode, if not choose program and press this button directly, will enter time countdown mode. Press “+” or “-” buttons to set desired time, press  button to start.
6. **Speed quick button & Distance count down**  :
 - 6.1 Under walking mode, press this button to set quick speed of 6 km/h.
 - 6.2 Under running mode, press this button to set quick speed of 8 km/h.
 - 6.3 Under standby mode, after choosing program, press this button will choose P1 to P9.

6.4 Under standby mode, if not choose program and press this button directly, will enter distance countdown mode. Press “+” or “-” buttons to set desired distance, press ► button to start.

7. **Program** : Under standby mode, press this button to enter default programs, you can press speed quick buttons to choose program, and press “+” “-” buttons to set time for each program. Press ► button to start.

The interval program is divided into 10 sections. When the speed enters the next interval, the treadmill will beep, and the speed will be changed according to system setting. During the working of each section, press SPEED +/- buttons can change the SPEED, but the system will recover to default speed when enter the next section. After finishing one program, the machine will gradually come to a stop.

		TIME INTERVAL= setting time/10 Programs under walking mode									
		1	2	3	4	5	6	7	8	9	10
P1	SPEED	3.0	3.0	3.0	3.0	3.0	3.0	2.0	3.0	3.0	3.0
P2	SPEED	3.0	4.0	4.0	4.0	4.0	4.0	3.0	4.0	4.0	4.0
P3	SPEED	4.0	5.0	5.0	5.0	5.0	5.0	4.0	5.0	5.0	5.0
P4	SPEED	3.0	6.0	6.0	6.0	6.0	6.0	3.0	6.0	6.0	3.0
P5	SPEED	3.0	5.0	3.0	5.0	3.0	5.0	3.0	5.0	3.0	5.0
P6	SPEED	3.5	5.5	3.5	5.5	3.5	5.5	3.5	5.5	3.5	5.5
P7	SPEED	3.0	5.0	5.0	3.0	5.0	5.0	3.0	5.0	5.0	3.0
P8	SPEED	3.5	5.5	5.5	3.5	5.5	5.5	3.5	5.5	5.5	3.5
P9	SPEED	4.0	6.0	6.0	4.0	6.0	6.0	4.0	6.0	6.0	4.0

		TIME INTERVAL= setting time/10 Programs under running mode									
		1	2	3	4	5	6	7	8	9	10
P1	SPEED	3.0	4.0	5.0	6.0	6.0	4.0	5.0	6.0	6.0	4.0
P2	SPEED	4.0	5.0	6.0	7.0	7.0	5.0	6.0	7.0	7.0	5.0
P3	SPEED	5.0	6.0	7.0	8.0	8.0	6.0	7.0	8.0	8.0	6.0
P4	SPEED	6.0	7.0	8.0	9.0	9.0	7.0	8.0	9.0	9.0	7.0
P5	SPEED	6.0	8.0	10.0	10.0	8.0	8.0	10.0	10.0	8.0	6.0
P6	SPEED	7.0	9.0	10.0	9.0	10.0	9.0	10.0	9.0	10.0	7.0
P7	SPEED	7.0	9.0	9.0	7.0	7.0	9.0	9.0	7.0	9.0	7.0
P8	SPEED	5.0	10.0	10.0	5.0	5.0	10.0	10.0	5.0	10.0	5.0
P9	SPEED	6.0	10.0	10.0	6.0	6.0	10.0	10.0	6.0	10.0	6.0

8. Remote Control Pairing indication.

Usually speaking, the remote control is well paired with machine, no need to pair again.

But if the machine powers on and the remote control doesn't work, it means that you need to pair first before using the remote control. Please follow the steps below to pair:

A. Power off the machine.

B. Press any button of the remote control and hold on. Then power on the machine, and within 5 seconds, it will pair automatically. Release the button and you are free to use the remote control.

C. Once pairing is successful, it doesn't need to be paired again unless you use a new remote control.

BLUETOOTH FOR CONNECTION OF APP:

Kinomapp App Connection:

Click FTMS icon in "My treadmill" interface.

Select Bluetooth name starts with "TR1000" for connection.

Zwift App Connection:

Select Bluetooth name starts with "TR1000" for connection.

LUBRICATION REMIND FUNCTION:

This machine has lubrication remind function. After every total running distance of 300km, your treadmill needs to be maintained with oil. The system will remind with sound for every 10 seconds, and window will show "OIL". This means that your treadmill needs to be lubricated with oil. Please read the user's manual first and add the oil to the middle part of running board. After you finish lubrication, please hold on "STOP" button for 3 seconds, and the system warning sound will disappear.

SAFETY LOCK FUNCTION:

Under any mode, if you pull away the safety key, the machine will stop. The window will show "---" with reminding sound. The machine cannot work until safety key is inserted back.

POWER SAVING FUNCTION:

The machine is with energy saving function. Under standby mode, if without any operation for 10 minutes, the machine will stop and enter energy saving mode, the display will be closed. You can press any button to turn on the display.

POWER ON (I) AND POWER OFF (O)

Switch off the power: You can switch off the power to stop the treadmill, which won't be damaged at any time.

CAUTION:

1. We recommend that you maintain a slow speed at the beginning of a session and hold on to the handrails until you become comfortable and familiar with the treadmill.
2. Attach the magnet end of the safety pulling rope to the computer and attach the clip of the safety pulling rope to your clothing.
3. To end your workout safely, press the STOP button or pull out the safety pulling rope, then the treadmill will stop immediately.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SUGGESTED ACTION
Treadmill will not start	Not plugged in	Plug cord into outlet
	Safety Key not inserted	Insert Safety Key
Running belt not centered	Running belt tension not correct on the left or right sides of the running board	Tighten the adjustment bolts on the left and right side of the rear roller
Display not working	Wires are not properly connected.	Check wire connections from the PCB to the control board.
E01: Software over current E02: Hardware over current	Over current	1. Power off and then restart to check if machine can work. 2. If it cannot work, then you need to change the new control board.
E03: Too hot control board protection	Over current Damage of control board	1. Power off and then restart checking if machine can work. 3. If it cannot work, then you need to change the new control board.
E04: Too low voltage protection	Too low voltage	1. Power off and then restart checking if machine can work. 2. If it cannot work, then you need to change the new control board. 3.If voltage is normal but machine cannot work, then need to change a new control board.
E05: Over voltage protection	Over voltage	1. Power off and then restart checking if machine can work. 2. If it cannot work, then you need to change the new control board. 3.If voltage is normal but machine cannot work, then need to change a new control board.

E06-E09, E11 Motor Abnormality	The incoming voltage is too low or too high. The control board is damaged.	Restart the treadmill. Check the incoming voltage to ensure it's correct.
	A moving part of the treadmill is stuck and therefore the motor is unable to rotate properly.	Inspect moving parts of the treadmill to ensure that they are operating correctly. Check the motor, look for strange noise and check for a burning smell. Replace the motor if necessary. Check the control board, replace it if damaged. Lubricate the treadmill.
	The motor wire is not connected, or the motor is damaged.	Check motor wires to see if the motor is connected. If the wire has been punctured or damaged, you will need to replace it. If the problem is not rectified, you may need to replace the motor
E10: Overload protection	Over current	Over current, power off and then restart checking if machine can work. If the problem is not rectified, you may need to replace the control board or motor.
E12: Communication failure	The communication failure	Power off and then restart to check if machine can work. Check all connection wires from console to the control board. If the problem is not rectified, you may need to replace the control board or PCB board.


MAINTENANCE & CARE

General cleaning will help prolong the life and performance of your treadmill. Keep the unit clean and maintained by dusting the components on a regular basis. Clean both sides of the running belt to prevent dust from accumulating underneath the belt. Keep your running shoes clean so that dirt from your shoes does not wear out the running board and belt. Clean the surface of the running belt with a clean damp cloth.


CEbetwNTEReen t TheHE roller RUNNI and rNGunni BEngLT b: elts. Th

- To better maintain the treadmill and prolong its life it is suggested that the machine be powered off for 10 minutes every 2 hours and fully powered off whenever not in use.
- A loose Running Belt will result in the runner sliding off when running, while too tight of a Running Belt will result in decrease to the motors performance and create more friction. The most suitable tightness for the belts is pulled out 50-75mm from the Running Board. Place the treadmill on level ground and set it at 6-9 km/h (3.7-5.6 mph) to check if the Running Belt drifts.


1. If the **Running Belt** moves to the **right**, turn the adjusting bolt on the right side $\frac{1}{4}$ turn *clockwise*, then turn the left adjustment bolt $\frac{1}{4}$ turn *counterclockwise*. If the belt does not move, repeat this step until it centers. Refer to figure A.

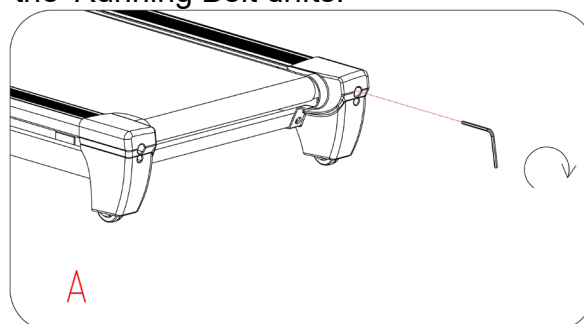

2. If the **Running Belt** moves to the **left**, turn the adjusting bolts on the left side $\frac{1}{4}$ of a turn *clockwise*, then turn the right adjustment bolt $\frac{1}{4}$ turn *counterclockwise*. If the belt does not move, repeat this step until it centers. Refer to figure B.

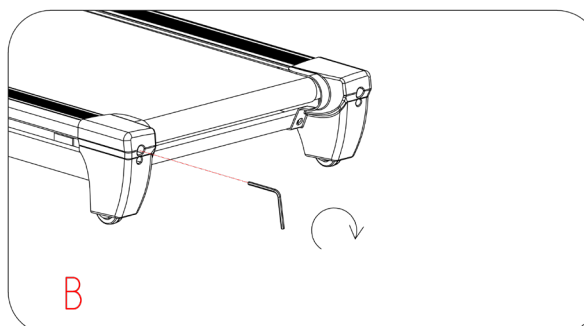

3. Over time the **Running Belt** will **loosen**. To tighten the belt, turn the Left & Right side adjustment bolts one full turn clockwise, check the tension of the belt. Continue this process until belt is at the correct tension. Make sure to adjust both sides equally to ensure correct belt alignment. Refer to figure C.

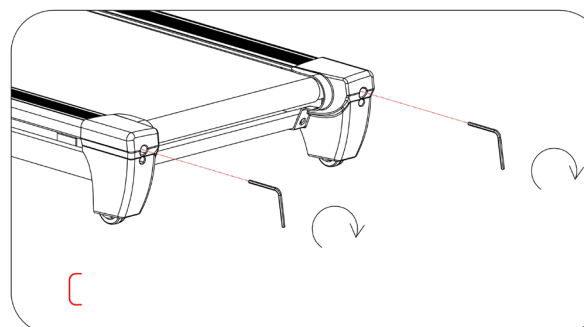

LUBRICATING THE TREADMILL

IMPORTANT NOTE:

You will need to lubricate your treadmill before the first use.


RUNNING BELTS & TREADMILL LUBRICANT:

Lubricating the running board and running belt is essential as the friction between the two affects the life span and function of the treadmill, therefore it is suggested that the running board and belt be inspected regularly.

WARNING: Always unplug the treadmill from the electrical outlet before cleaning, lubricating or repairing the unit.

HOW TO LUBRICATE:


1. Raise the belt up on one side and apply lubricant to the running deck. Use a rag to thoroughly wipe the lubricant over the running deck. Repeat this process for the other side.
2. The moving parts should turn freely and quietly. Abnormality of moving parts will affect the safety of the equipment. Inspect and tighten bolts regularly.
3. To better maintain the treadmill and prolong its lifespan, it is suggested that maintenance be done on a regular basis.

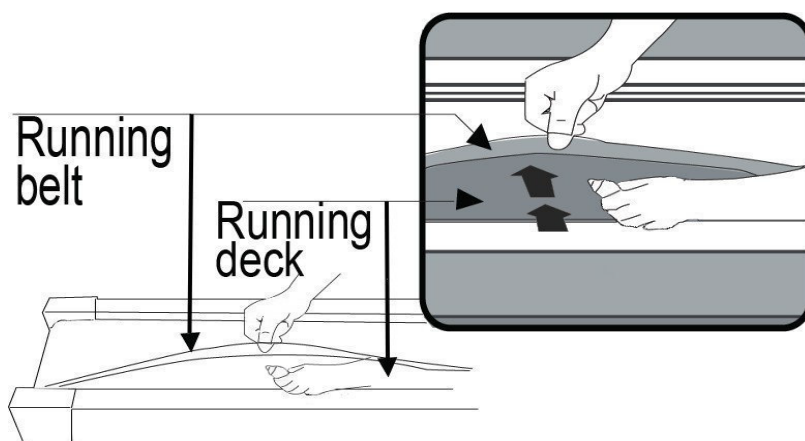



The following timetable is recommended:

Light user (less than 3 hours/ week)	<i>every six months</i>
Medium user (3-5 hours/ week)	<i>every three months</i>
Heavy user (more than 5 hours/ week)	<i>every two months</i>

EXPLODED DRAWING

	78
	85
	86
	87
	88
	89
	96
	91
	92
	93
	79
	70
	97
	98
	101
	102

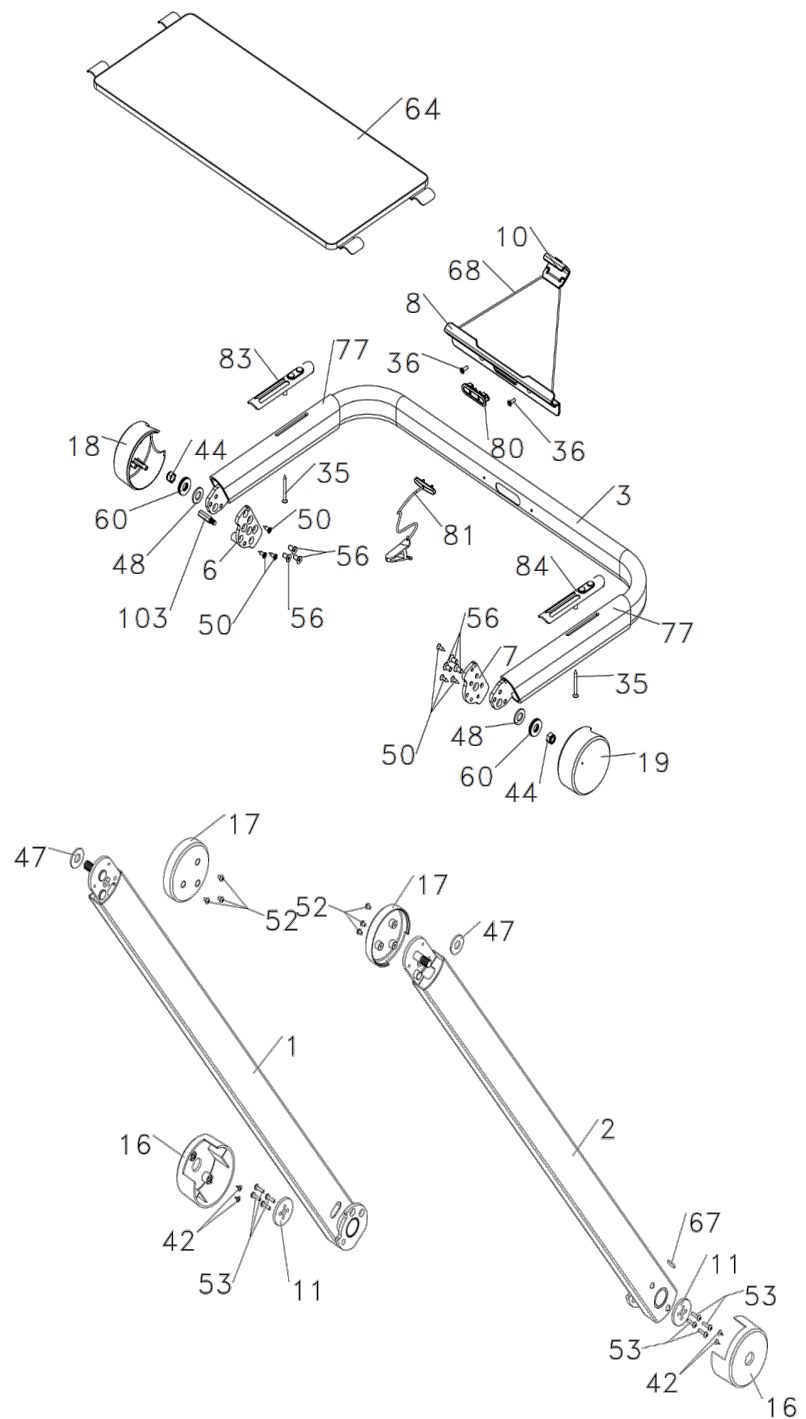

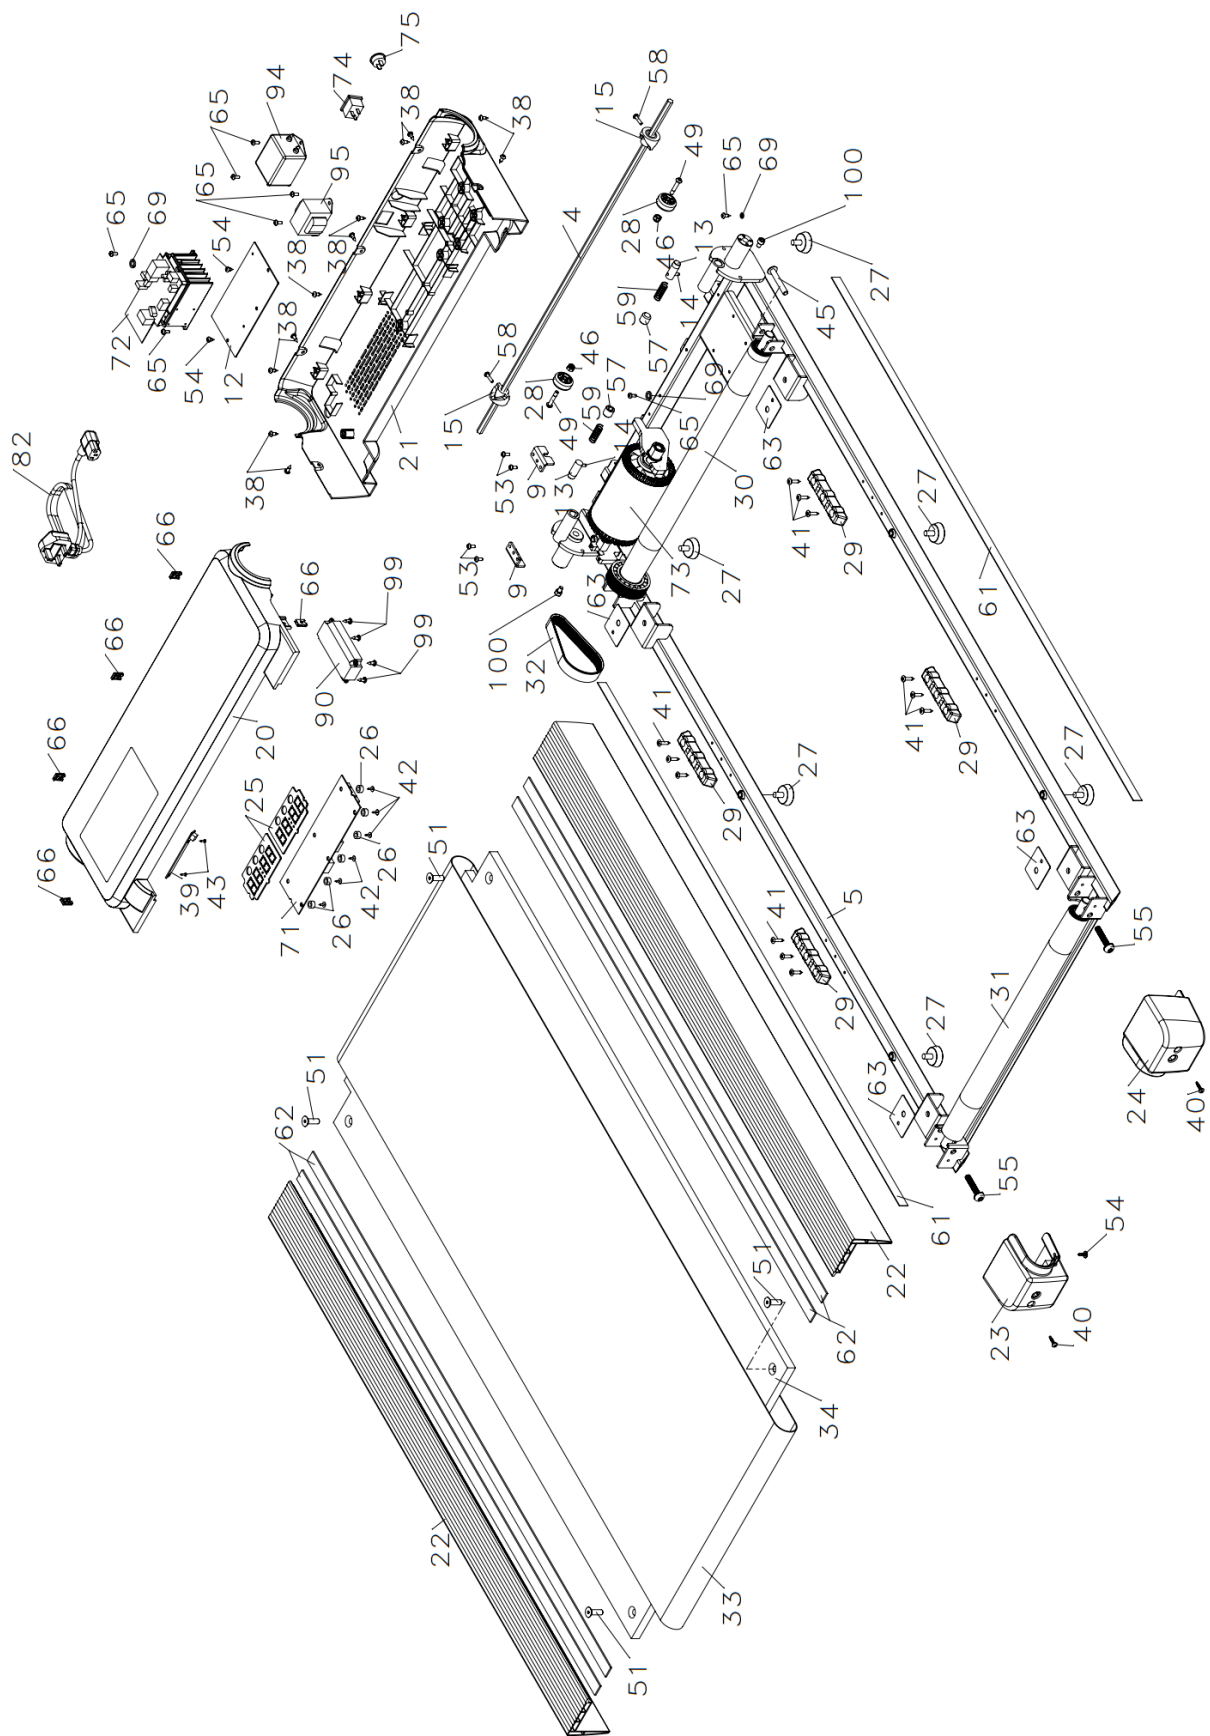

PARTS LIST

No.	Part description	Remark	Qty	No.	Part description	Remark	Qty
1	Left upright tube		1	44	Nut	M12	2
2	Right upright tube		1	45	Bolt	M8*45mm	1
3	Handlebar		1	46	Nut	M5	2
4	Adjustable tube		1	47	Flat washer	Φ12.5*Φ30	2
5	Main frame		1	48	Flat washer	Φ12.5*Φ24	2
6	Handlebar spacing(L)		1	49	Bolt	M5*25mm	2
7	Handlebar spacing(R)		1	50	Screw	ST4.2*15	6
8	Device bottom holder		1	51	Bolt	M8*30mm	4
9	Motor press piece		2	52	Bolt	M4*6mm	6
10	Device top holder		1	53	Bolt	M4*12mm	12
11	Upright tube axis plate		2	54	Screw	ST4.2*13mm	3
12	Control board holder		1	55	Bolt	M8*55mm	2
13	Sprint latch		2	56	Bolt	M6*10mm	6
14	Axis latch		2	57	Bolt	M14*14mm	2
15	Adjustable block		2	58	Bolt	M4*16mm	2
16	Upright side cover		2	59	Spring		2
17	Handlebar inner cover		2	60	Bearing		2
18	Handlebar cover(L)		1	61	Side rail side foam		2
19	Handlebar cover(R)		1	62	Side rail top foam		4
20	Motor top cover		1	63	Running board foam		4
21	Motor bottom cover		1	64	Desktop	Optional	1
22	Side rail		2	65	Bolt	M6*8mm	2
23	Back-end cover(L)		1	66	Clip buckle		5
24	Back-end cover(R)		1	67	Magnet		1
25	Silica gel plate		2	68	Sprint rope		1
26	Spacer		6	69	Spacer		1
27	Foot pad		6	70	Rope of remote control		1
28	Transport wheel		2	71	PCB board		1
29	Cushion		4	72	Control board		1
30	Front roller		1	73	DC motor		1
31	Back roller		1	74	Power socket		1
32	Motor belt		1	75	Power switch		1
33	Running belt		1	76	Power socket grounding wire		1
34	Running board		1	77	Handlebar foam		2
35	Screw	ST4.2*45mm	2	78	Remote control		1
36	Bolt	M4*12mm	2	79	Speed switcher		1
37	Bolt Assembly	M4*12mm	4	80	Safety key base		1
38	Screw	ST4.2*16mm	11	81	Safety key		1
39	Light board		1	82	Power wire		1
40	Screw	ST4.2*19mm	2	83	Hand pulse with start/stop		1
41	Flange Screw	ST4.2*19mm	12	84	Hand pulse with speed		1
42	Flange Screw	ST2.9*9.5mm	10	85	L-shaped wrench		1
43	Screw	ST2.9*10mm	2	86	Allen wrench		1

87	Lubrication oil		1		Button battery	CR2032L 3V Lithium	1
88	PCB & Control board connection wire		1				
89	Pulse wire		2				
90	Switch wire		1				
91	Power socket wire(B)		1				
92	Power socket wire(R)		1				
93	Light wire		1				
94	Control board wire		1				
F01	Filter		1				
F02	Inductance		1				
F03	Filter wire(R)		1				
F04	Filter grounding wire		1				
F05	Screw	ST4.2*10mm	4				
F06	Magnet ring		1				

LIMITED WARRANTY

PureTec warrants this product to be free from defects in workmanship and material, under normal use and service conditions. Please refer to www.puretecfitness.com for warranty conditions. This warranty extends only to the original purchaser and is valid for home use only. PureTec's obligation under this Warranty is limited to replacing damaged or faulty parts at PureTec's option.

All returns must be pre-authorised by PureTec. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage, purchasers own repairs or for products used for commercial or rental purposes. No other warranty beyond that specifically set forth above is authorised by PureTec.

PureTec is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or other damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyments or use, costs of removal, installation or other consequential damages or whatsoever natures.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein.

Your statutory rights are not affected.

ORDERING REPLACEMENT PARTS

Replacement parts can be ordered by contacting our Customer Solutions Department

PureTec Limited

www.puretecfitness.com

Email: service@puretecfitness.com

When ordering replacement parts, please provide the following information.

1. Model
2. Description of Parts
3. Part Number
4. Date of Purchase